

HONDA

PARTS CATALOG

XL350,K1

AMERICAN HONDA MOTOR CO., INC.

May, 1994

Second Edition

133560M

Page

How to Use This Manual	2
Serial Numbers	3
Vehicle Identification Numbers (VIN)	3
Color Tables	4
Manuals	4
Model ID Photo	5
Specifications	5
Bulk Hose	6
Commonly Replaced Parts	7
Cylinder Head - Cylinder	8
Crankshaft	10
Right Crankcase Cover - Clutch	12
Left Crankcase Cover - Alternator	14
Transmission - Gearshift	15
Crankcase	17
Carburetor	18
Handelbar	19
Speedometer - Tachometer	21
Front Fork - Steering Stem	23
Wheel	26
Fuel Tank - Seat	29
Muffler - Pedal	31
Shock Absorber - Swingarm	34
Tailight - Turn Signal	37
Frame - Battery	39

HOW TO USE THIS CATALOG

This parts catalog is to be used when ordering replacement parts for the model(s) specified on the microfiche strip.

CATALOG PAGE BREAKDOWN

MODEL(S)			MODEL		MODEL		AREA CODE	ENGINE SERIAL NUMBER		QTY REQ	PART NUMBER	HONDA CODE		
REF. NO.	BLOCK NO.	E-1	APPLICATION						FROM				TO	
			1	1	1	1		1						1
DESCRIPTION			0	0	0	0	0	0	0	0	0	0		
			4	5	6	7	4	5	6	7	4	5	6	7
1	2	3a	3	4	5	6	7	8	9	0				

1. REF NO. — Reference number corresponding with the reference numbers on the illustrations. * All illustrations are representative only and do not necessarily correspond exactly to the actual part. "N" signifies the part is not illustrated.

2. DESCRIPTION — Describes the part for the related part number.

Abbreviations:

ASSY.	- Assembly	L (100L)	- Link (100 Links)
COMP.	- Complete	A.C.	- Alternating Current
R.	- Right	D.C.	- Direct Current
L.	- Left	IN	- Inlet
STD.	- Standard	EX.	- Exhaust
MM	- Millimeter	FR.	- Front
G	- Gram	RR.	- Rear
T (22T)	- Tooth (22 Teeth)	HEX.	- Hexagonal
A	- Ampere	A.M.	- Attaching Mark
V	- Volt	T.M.	- Transcript Mark
W	- Watt	C.D.I.	- Capacitive Discharge Ignition
KPH	- Kilometer Per Hour	WL	- With Labeling
MPH	- Miles Per Hour	WOL	- Without Labeling

Decision for 'R' or 'L'.

'R' or 'L' in the description of a part stands for the Right hand side or the Left hand side which is decided by the forward direction of travel of the vehicle

3. MODEL APPLICATION — Model application for the various models listed within the catalog. Single model applications will not require this section.

3a. MODEL YEAR GUIDE — A guide to the part application. (prior to 1976 the guide reference is the model designation i.e., KD, K1, etc... For 1976 and above the guide reference is the last digit of the model year i.e., 1976=6; 1977=7; 1978=8 etc...)

4. AREA CODE — Area codes for parts that are unique to a particular area. Area codes are defined in the Serial Number application chart when applicable. This column will not be used in catalogs which do not include unique area codes.

5. SERIAL NUMBER — Applies to Engine or Frame serial numbers depending on the section. The serial number of the vehicle (frame, engine, carburetor) should be checked prior to ordering parts for a specific unit. In cases where a part has been modified, the serial number of the vehicle bearing the modification is listed in the 'SERIAL NUMBER' column. The modification parts are controlled by each pertinent serial number below:
Engine serial number — Engine group parts (Block numbers beginning with 'E').
Carburetor identification number — Carburetor component parts.
Frame serial numbers — Frame group parts (Block numbers beginning with 'F'). Serial number application chart and Serial number locations are provided.

Note: Some models may be controlled by one serial number only.

HOW TO USE THIS CATALOG

6. QTY REQ — Quantity required per unit as specified:
A. "N" in place of the quantity indicates AS REQUIRED.
B. "1" or "1" by the quantity required indicates "optional".
7. PART NUMBER — Part number corresponding to the reference numbers and application. Several part numbers may be listed under one (1) reference number. For your convenience the current supersede chain, as of print date, has been listed for you. Supersede chains are subject to change without notice.

MAKE-UP OF PART NUMBERS

All parts are classified into two groups consisting of GENERAL PARTS and STANDARD PARTS. All parts are numbered in accordance with system described below:

General Parts

Example: Fork comp Part No. 51105-GR1-700ZA
Function No. 51
Component No. 105
Parts Classification No. -GR1-
Classification No. 700
"Color Code" ZA

Standard Parts

Example: 8 x 6 Hex., Bolt Part No. 92000-08018-1A
Function No. 92
Type No. 000
Dimensions -08018-
ISO Standard Designation 1
Chemical Surface Treatment A

* The color code at the end of a General Part's part number indicate the color. However, color codes such as ZA, ZB, ZC onward except ZZ, do not indicate the color directly but refer to the notes " " in the Description Column of this Parts Catalog Microfiche. If the color description is not indicated in the text, refer to the color table.

8. HONDA CODE — The Honda Code is listed to the right of each Part Number.

A. ADDITIONAL INFORMATION — The table of contents located at the right of each microfiche grid lists sectioned titles in alphabetical order. Some microfiche will require separate tables of contents for the Engine and Frame sections which will be noted in a sub-heading; the introduction section (Row "A") of these microfiche will have the contents of the Engine Section on even number grids and the contents of the Frame Section on odd number grids.

NOTE:

- The Block No. listed in the upper right hand corner of the Description heading refers to a complete illustration page and it's text, and should not be confused with the GRID NO. when using microfiche.
- Rear view mirrors are standard equipment on all street legal models.

COMMONLY REQUIRED REPLACEMENT PARTS

K - XL350 K1 - XL350K1		XL350				QTY REQ	PART NUMBER	HONDA CODE
Ref. No.	DESCRIPTION	K	K1	SERIAL NUMBER				
		K	K1	FROM	TO			
	BATTERY ASSY.	K	K1	-----	-----	1	31500-329-677	1550581
	BATTERY ASSY.	K	K1	-----	-----	1	31500-324-601	0381954
	BATTERY ASSY.	K	---	-----	-----	1	31500-329-671	0280743
	BATTERY, 6N6-3B	K	K1	-----	-----	1	98202-63260	0389148
	BATTERY, 6N6-3B	K	K1	-----	-----	1	98203-63260	0421859
	BATTERY, 6N6-3B	K	K1	-----	-----	1	98203-63250	0420554
	BULB, TURN SIGNAL	K	K1	-----	-----	4	34905-053-003	0342725
	BULB, TURN SIGNAL (6V17W)	K	K1	-----	-----	4	34905-358-003	0709584
	BULB, TURN SIGNAL (6V18W)	K	K1	-----	-----	4	34905-056-671	0156802
	BULB, TURN SIGNAL (6V18W)	K	K1	-----	-----	4	34905-053-000	0134072
	CHAIN, DRIVE (D1050DS-100E)	K	K1	-----	-----	1	40530-356-305	0337410
	DISK, CLUTCH FRICTION	K	K1	-----	-----	7	22201-286-010	0180299
	FUSE A (10A)	K	K1	-----	-----	3	98200-11000	0294439
	FUSE A (10A)	K	K1	-----	-----	1	98200-11000	0294439
	GASKET SET	K	K1	-----	-----	1	16010-356-004	0355974
	GASKET, EX. PIPE	K	K1	-----	-----	1	18291-283-306	4350443
	GASKET, EX. PIPE	K	K1	-----	-----	1	18291-283-010	0076851
	GASKET, EX. PIPE	K	K1	-----	-----	1	18291-MM8-880	3971652
	GRIP, L. HANDLE	K	K1	-----	-----	1	53166-362-000	0334557
	GRIP, R. HANDLE	K	K1	-----	-----	1	53165-362-000	0334540
	HANDLEBAR	---	K1	-----	-----	1	53100-356-700	0398941
	HANDLEBAR	K	---	-----	-----	1	53100-356-000	0338053
	HEADLIGHT UNIT	K	K1	-----	-----	1	33120-329-671	0280933
	LENS, TAILLIGHT	K	K1	-----	-----	1	33702-329-671	0290726
	MIRROR, L.	K	K1	-----	-----	1	88120-333-611	0483750
	MIRROR, L.	K	K1	-----	-----	1	88120-333-610	0418814
	MIRROR, L.	K	K1	-----	-----	1	88120-333-004	0297325
	MIRROR, R.	K	K1	-----	-----	1	88110-333-611	0469429
	MIRROR, R.	K	K1	-----	-----	1	88100-333-004	0297317
	PLUG, SPARK (D-7ES NGK)	K	K1	-----	-----	1	98069-57711	0263145
	PLUG, SPARK (D-BES NGK)	K	K1	-----	-----	1	98079-58721	0387571

COMMONLY REQUIRED REPLACEMENT PARTS

K = XL350 K1 = XL350K1		XL350				QTY REQ	PART NUMBER	HONDA CODE
Ref. No.	DESCRIPTION	K	K1	SERIAL NUMBER				
		K	K1	FROM	TO			
	PLUG, SPARK (D-BES NGK)	K	K1	-----	-----	1	98069-58717-S	2522258
	PLUG, SPARK (D-BES-L NGK)	K	K1	-----	-----	1	98069-38710	0290130
	PLUG, SPARK (D7EA NGK)	K	K1	-----	-----	1	98069-57717	0633248
	PLUG, SPARK (D8EA NGK)	K	K1	-----	-----	1	98069-58717	0627935
	PLUG, SPARK (X-24ES ND)	K	K1	-----	-----	1	98069-58720	0335679
	PLUG, SPARK (X22ES ND)	K	K1	-----	-----	1	98069-57723	0253906
	PLUG, SPARK (X24ES ND)	K	K1	-----	-----	1	98069-58721	0251033
	POINTS (ND)	K	K1	-----	-----	1	30202-107-004	0216192
	POINTS (TOYO)	K	K1	-----	-----	1	30202-107-154	0363184
	POINTS ASSY. (ND)	K	K1	-----	-----	1	30200-329-004	0278424
	RUBBER, KICK STARTER	K	K1	-----	-----	1	28311-329-000	0293159
	SPROCKET, DRIVE (14T)	K	K1	-----	-----	1	23801-356-810	0336966
	SPROCKET, DRIVE (15T)	K	K1	-----	-----	1	23801-348-690	0336958
	TIRE, FR. (3.00-21) (NITTO)	K	---	-----	1022687	1	44711-356-006	0337626
		---	K1	-----	2015245	1	44711-356-006	0337626
	TIRE, RR. (4.00-18) (BS)	K	K1	-----	-----	1	42711-356-671	0432971
	TIRE, RR. (4.00-18) (BS)	K	---	-----	1022687	1	42711-329-671	0277707
		---	K1	-----	2012097	1	42711-329-671	0277707
	TIRE, RR. (4.00-18) (NITTO)	K	---	-----	-----	1	42711-329-672	0337535
		---	K1	-----	2015245	1	42711-329-672	0337535
		---	K1	2012098	-----	1	42711-329-672	0337535

XL350 ENGINE NO.; XL350E-1000001 TO 1023391
 XL350 FRAME NO.; XL350-1000001 TO 1021659
 XL350K1 ENGINE NO.; XL350E-2000001 TO 2017022
 XL350K1 FRAME NO.; XL350-2000001 TO 2016790

BULK HOSE

Bulk Hose Cross Reference Chart

To convert a cut hose part number to the equivalent of roll hose simply match the two part numbers using the following chart, cutting the required length indicated by the cut hose part number.

FUEL HOSE				VACUUM HOSE			
CURRENT CATALOG LISTING		BULK HOSE PART NUMBER		CURRENT CATALOG LISTING		BULK HOSE PART NUMBER	
95001-35	-2	95001-35003-20M		95005-35	-2	95001-35003-20M	
95001-35	-4	95001-35003-40M		95005-35	-3	95001-35003-20M	
95001-45	-2	95001-45003-20M		95005-35	-1	95001-35003-20M	
95001-45	-4	95001-45008-40M					
95001-55	-2	95001-55008-20M		95005-45	-2	95001-35003-20M	
95001-55	-4	95001-55008-40M		95005-45	-3	95001-35003-20M	
95001-75	-4	95001-75008-40M					
				95005-50	-3	95005-50003-30M	
				95005-55	-2	95005-55003-20M	
				95005-70	-3	95005-70003-30M	
				95005-75	-1	95005-75003-10M	
				95005-75	-2	95005-75003-10M	
				95005-80	-1	95005-80008-10M	
				95005-80	-2	95005-80008-10M	
				95005-80	-3	95005-80008-10M	
				95005-12	-2	95005-12003-10M	

ORDERING INFORMATION

FUEL HOSE

PART NUMBER	H/C	INSIDE DIAMETER	ROLL LENGTH
95001-35003-20M	2380533	3.5 (mm)	3M (9.9ft)
95001-35003-40M	2380541	3.5 (mm)	3M (9.9ft)
95001-45003-20M	2380558	4.5 (mm)	3M (9.9ft)
95001-45008-30M	2324986	4.5 (mm)	8M (26.4ft)
95001-55008-20M	2386134	5.3 (mm)	8M (26.4ft)
95001-55008-30M	2385896	5.3 (mm)	8M (26.4ft)
95001-75008-20M	2385094	7.5 (mm)	3M (9.9ft)
95001-75003-30M	2385904	7.5 (mm)	3M (9.9ft)


VACUUM HOSE

PART NUMBER	H/C	INSIDE DIAMETER	ROLL LENGTH
95001-35003-10M	2325058	3.5 (mm)	3M (26.4ft)
95001-35003-10M	2325082	4.5 (mm)	3M (26.4ft)
95001-45003-30M	2383608	5.0 (mm)	3M (9.9ft)
95001-45008-10M	2386886	5.5 (mm)	8M (26.4ft)
95001-55008-20M	2380624	6.5 (mm)	8M (9.9ft)
95001-55008-10M	2380640	7.3 (mm)	8M (9.9ft)
95001-75008-10M	2325108	8.0 (mm)	3M (26.4ft)
95001-75003-10M	2383657	12.0 (mm)	3M (9.9ft)
95005-14003-20M	2380665	14.0 (mm)	3M (9.9ft)

CAUTION: Damage to vacuum hose will result from contact with fuel. Do not use vacuum hose in place of fuel hose.


BULK HOSE

Construction of Fuel and Vacuum Hose Part Number

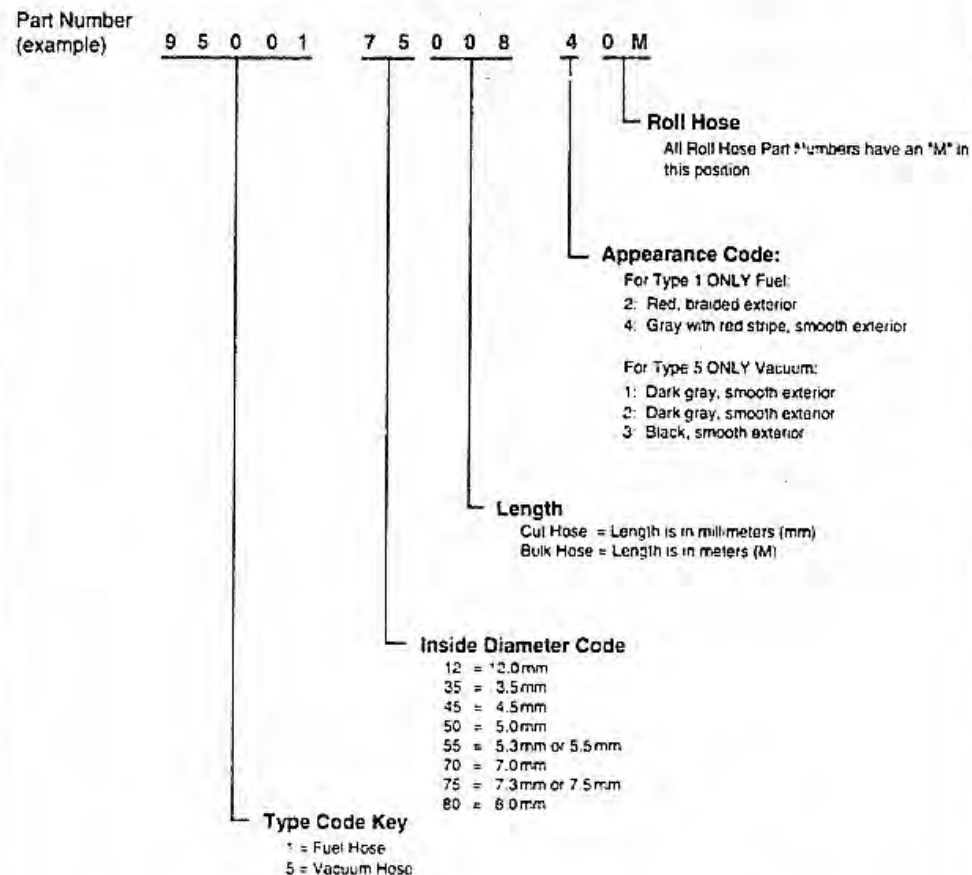


CAUTION: Damage to vacuum hose will result from contact with fuel. Do not use vacuum hose in place of fuel hose.

MODEL ID PHOTO

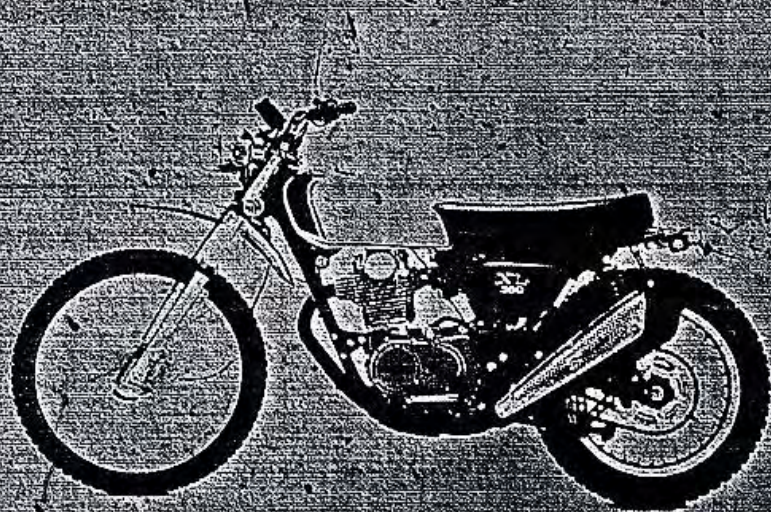

XL350

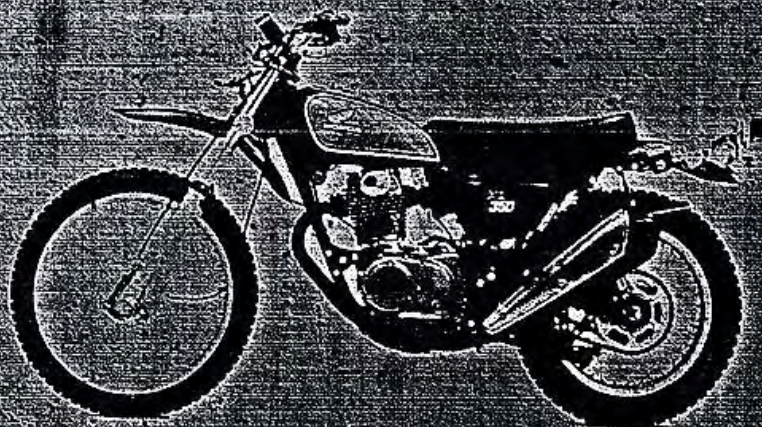

XL350K1

SPECIFICATIONS

SECTION/SUBJECT	XL350	XL350K1
ENGINE		
Cylinder	Single cylinder	Single cylinder
Stroke	4-Stroke	4-Stroke
Cooling	Air Cooled	Air Cooled
Camshaft	SOHC	SOHC
Valves per cylinder	4-Valve	4-Valve
Displacement	348cc	348cc
Lubrication system	Wet Sump	Wet Sump
Carburetor	Piston Valve, 32mm	Piston Valve, 32mm
Main jet	≈ 130	≈ 130
Slow jet	≈ 48	≈ 48
TRANSMISSION		
Transmission type	Manual	Manual
Transmission speeds	5 Speed	5 Speed
Clutch	Manual	Manual
Shift pattern	1-N-2-3-4-5	1-N-2-3-4-5
CHASSIS		
Fuel tank capacity (Std)	2.2gal	2.2gal
Fuel tank capacity (Res)	0.5gal	0.5gal
Air filter type	Foam	Foam
Foam filter oil - Pro Honda	08207-0001	08207-0001
Countershaft sprocket	15T	15T
Rear wheel sprocket	45T	45T
Drive chain	530-100L	530-100L
Front Brake	Internal expand shoe	Internal expand shoe
Rear Brake	Internal expand shoe	Internal expand shoe
Front tire	3.00-21-4PR	3.00-21-4PR
Tire pressure	21PSI	21PSI
Rear tire	4.00-18-4PR	4.00-18-4PR
Tire pressure	21PSI	21PSI
SERVICE TUNING		
Valve clearance		
Intake	0.05mm (0.002")	0.05mm (0.002")
Exhaust	0.08mm (0.003")	0.08mm (0.003")
Ignition type	Flywheel Magneto	Flywheel Magneto
Points gap	0.3-0.4mm (0.012-0.016")	0.3-0.4mm (0.012-0.016")
Spark plug gap	0.6-0.7mm (0.024-0.028")	0.6-0.7mm (0.024-0.028")
LUBRICATION		
Recommended fuel	86 + Octane	86 + Octane
Engine oil - Pro Honda		
GN4 10W/40	08C35-A141M01	08C35-A141M01
GN4 20W/50	08C35-A251M01	08C35-A251M01
Engine oil capacity:		
After draining	1.9qt	1.9qt
Chain lubricant		
Pro Honda chain lube	08209-0002	08209-0002
Fork oil		
Pro Honda (5W SS-7)	08208-0005	08208-0005
Pro Honda (10W SS-8)	08208-0010	08208-0010
Capacity after draining	150cc	150cc

COLOR TABLES

Color chart

- (WL) = Stripes and labels other than caution labels are included in parts whose part name end in (WL).
- (WOL) = Stripes and labels are not included in parts whose part name end in (WOL).

COLOR CODE TABLE (Color descriptions omitted from the main text of the catalog)

TYPE OF PARTS	COLOR CODE	COLOR DESCRIPTION
PAINTED PARTS	A	WHITE
	B	BLACK
	C	SCARLET
	E	ROYAL BLUE
	N	DARK BLUE
	Q	MARUEN BLUE
	R	IVORY YELLOW
	S	DARK SILVER
	T	METALLIC SILVER
	Z	PRIMER
	ZZ	PRIMER
	XW	CHROME
VINYL PARTS	A	BLACK
	B	BLUE
	D	LIGHT BLUE
	E	SCARLET
	G	DARK ROSE
	N	ELEPHANT GRAY & IVORY
	Q	WHITE
	V	IVORY

MANUALS


DESCRIPTION	PART NUMBER	H/C
XL350,K1 MICROFICHE	133560M	4418547

SERIAL NUMBERS

Models and applicable serial numbers

Models and applicable serial Nos. given in this parts catalog can be identified as follows.
Parts with types are exclusive for models destined for countries designated.
If no types are listed, parts are for common use.

Model	Applicable Engine Serial No.	Applicable Frame Serial No.	Applicable Carburetor Identification No.
XL350	XL350E-1000001 ~ 1023391	XL350*1000001 ~ 1021659	
XL350K1	XL350E-2000001 ~ 2017022	XL350*2000001 ~ 2016790	

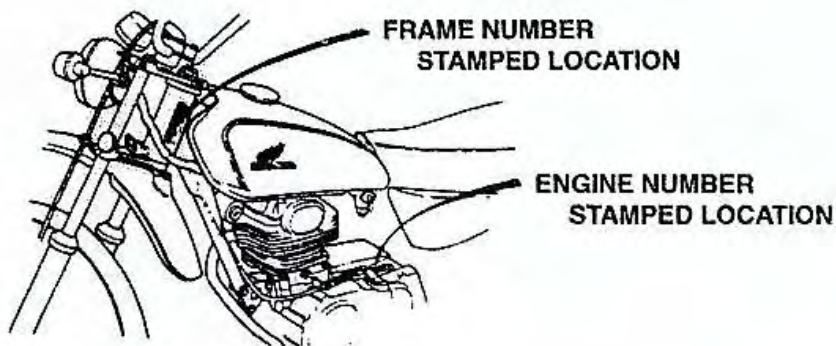

CONSTRUCTION OF VEHICLE IDENTIFICATION NUMBER (V.I.N.)

(Example) W.M.I. J H 2 V.D.S. R C 0 4 0 * B M V.I.S. 2 0 0 0 0 1
W.M.I. ... World manufacturer identifier
V.D.S. ... Vehicle descriptor section
V.I.S. ... Vehicle indicator section

Sequential Production number

Plant representation

A ... OHIO factory in U.S.A.
B ... AALST factory in BELGIUM
C ... SAITAMA factory in JAPAN
D ... GUADALAJARA factory in MEXICO
E ... MONTESSA factory in SPAIN
F ... ATESSA factory in ITALY
K ... KUMAMOTO factory in JAPAN
M ... HAMAMATSU factory in JAPAN
R ... MANAUS factory in BRAZIL
S ... SUZUKA factory in JAPAN
T ... TOCHIGI factory in JAPAN

Model year

(Example) B. 1981 C. 1982 D. 1983 ... X. 1999
<Except I.O.Q.U>

Check digit

This code is used to detect errors in the V.I.N. and consists of a single-digit number (0-9) or a letter "X". It has no direct bearing upon the V.D.S. and V.I.S.

Vehicle description code

(Example) RC040 .. CB750F NC030 .. CB400T
Refer to: SERIAL NUMBERS

Make and Type of vehicle


JH2 ... HONDA, Motorcycle (Manufactured in JAPAN)
1HF ... HONDA, Motorcycle (Manufactured in U.S.A.)
YC1 ... HONDA, Motorcycle (Manufactured in BELGIUM)
9C2 ... HONDA, Motorcycle (Manufactured in BRAZIL)
3H1 ... HONDA, Motorcycle (Manufactured in MEXICO)
VTM ... HONDA, Motorcycle (Manufactured in SPAIN)
ZDC ... HONDA, Motorcycle (Manufactured in ITALY)
JH3 ... HONDA, All terrain vehicle (Manufactured in JAPAN)
478 ... HONDA, All terrain vehicle (Manufactured in U.S.A.)

Any change or modification of parts is directly related to the V.D.S. and V.I.S.
A V.I.S. number will appear in the "Serial No." column of the Parts Catalog if a part is changed or modified.

COMMENT


This example is generic and applies to 1981 and newer vehicles. 1980 models and prior are referred to as "FRAME NUMBERS" and the construction is designed by using the model designation or code followed by a sequential number.

Cylinder Head • Cylinder

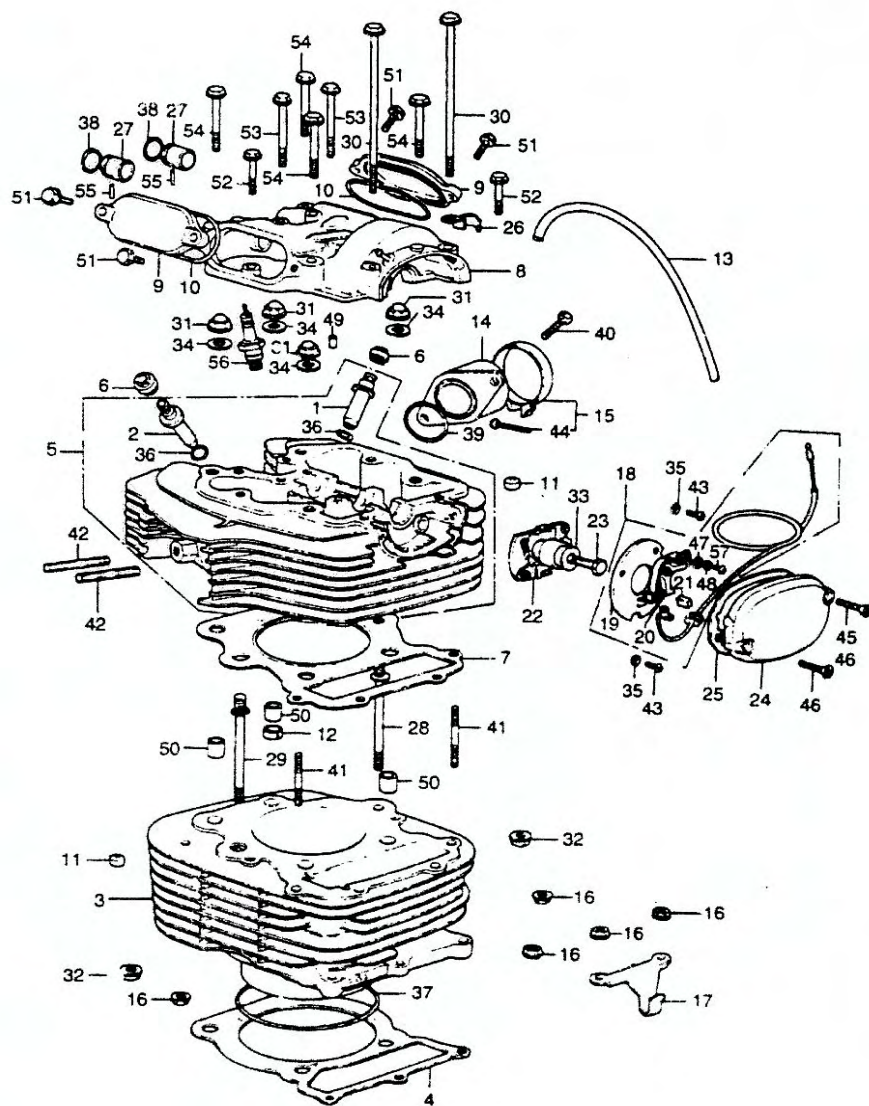


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Guide, In. Valve	K	K1			2	12021-329-300	0279786
2	Guide, In. Valve	K	K1			2	12021-329-405	4085445
	Guide, Ex. Valve	K	K1			2	12023-356-305	0355842
3	Cylinder Comp.	K	K1			1	12100-356-010	0336289
4	Gasket, Cylinder	K	K1			1	12191-356-000	0336297
5	Head Comp., Cylinder	K	K1			1	12200-356-010	0336305
6	Seal, Valve Stem (Nippon)	K	K1			4	12209-333-005	0281675
7	Gasket, Cylinder Head	K	K1			1	12251-356-010	0336313
	Gasket, Cylinder Head	K	K1			1	12251-356-306	4503017
8	Cover, Cylinder Head	K	--			1	12310-356-000	0336321
	Cover, Cylinder Head	--	K1	2016954		1	12310-356-000	0336321
	Cover, Cylinder Head	--	K1	2016955		1	12310-385-000	0429787
9	Cover, Valve Adj.	K	--			2	12351-329-000	0279844
	Cover, Valve Adj.	--	K1	2017030		2	12351-329-000	0279844
	Cover, Valve Adj.	K	K1			2	12351-329-770	0375154
10	Gasket, Valve Adj. Cap	K	K1			2	12392-329-000	0279836
11	Rubber, Insert	K	K1			10	12620-329-000	0279885
12	Gasket, Cylinder Head	K	K1			1	12909-333-000	0281758
	Gasket, Cylinder Head	K	K1			1	12909-428-003	0714717
13	Tube, Point Breather	K	K1			1	15772-356-000	0336537
14	Insulator, Carburetor	K	K1			1	16211-356-000	0336552
15	Band, Carburetor Insulator	K	K1			1	17255-356-000	0336677
16	Nut, Flange, 6MM	K	K1			5	18362-720-000	0293084
	Nut, Flange, 6MM	K	K1			5	94050-06000	0471623
17	Receiver, Clutch Cable	K	K1			1	22821-356-000	0336842
	Receiver, Clutch Cable	K	K1			1	22821-356-010	0699173
18	Points Assy. (ND)	K	K1			1	30200-329-004	0278424
19	Plate, Points Base (ND)	K	K1			1	30201-329-004	0293167
20	Points (ND)	K	K1			1	30202-107-004	0216192
	Points (Toyo)	K	K1			1	30202-107-154	0363184
21	Felt, Oil (Kokusun)	K	K1			1	30205-028-003	0179218
	Felt, Oil (ND)	K	K1			1	30205-028-004	0179226
22	Advancer Assy., Spark (ND)	K	--	1016455		1	30220-329-024	0278432
	Advancer Assy., Spark	K	--	1016456		1	30220-356-004	0380337
		--	K1			1	30220-356-004	0380337
23	Bolt, Spark Advancer Setting	K	K1			1	30225-246-004	0278440
24	Cover, Points	K	--			1	30370-329-000	0278416
	Cover, Points	--	K1			1	30370-329-700	0382192
25	Gasket, Points Cover	K	K1			1	30372-329-000	0281097
26	Clamp A, Wire	K	K1			1	32111-333-000	0301424
	Clamp A, Wire	K	K1			1	32117-371-000	0417808
27	Plug, Rocker Arm Shaft	K	K1			2	90011-356-000	0338251
28	Bolt, Cylinder Flange, 8MM	K	K1			1	90032-356-000	0338277
29	Bolt, Cylinder Flange, 12x8	K	K1			1	90033-356-000	0356154
30	Bolt, Flange, 6x131	K	K1			2	90048-329-000	0293738
31	Nut, Flange Cap, 8MM	K	K1			4	90202-329-000	0279604
32	Nut, Flange, 8MM	K	K1			2	90236-300-000	0189183
	Nut, Flange, 8MM	K	K1			2	94050-08000	0481143
	Nut, Flange, 8MM	K	K1			2	94050-08000-0S	0678011
33	Washer, Shiftdrum Side	K	K1			1	90417-035-303	0293845
34	Washer, Seal, 10MM	K	K1			4	90441-329-000	0279653
35	Washer, 5MM	K	K1			2	90482-028-000	0014472
36	O-Ring, 10x1.6	K	K1			4	31301-200-000	0022673
37	O-Ring, 88x2	K	K1			1	91302-356-000	0338483
38	O-Ring, 16x1.9	K	K1			2	91306-329-000	0280404
39	O-Ring, 42x2.4	K	K1			1	91304-704-000	2043172
	O-Ring, 42x2.4	K	K1			1	91325-568-000	0338491
40	Bolt, Hex., 6x16	K	K1			2	92000-06016	0054239
	Bolt, Hex., 6x16	K	K1			2	92000-06016-0A	0313197
	Bolt, Hex., 6x16	K	K1			2	92000-06016-1A	0915124
	Bolt, Hex., 6x16	K	K1			2	92100-06016-0A	1685726
	Bolt, Hex., 6x16	K	K1			2	92101-06016-0A	2479590
	Bolt, Hex., 6x16	K	K1			2	92200-06016-0A	1842400

Cylinder Head • Cylinder

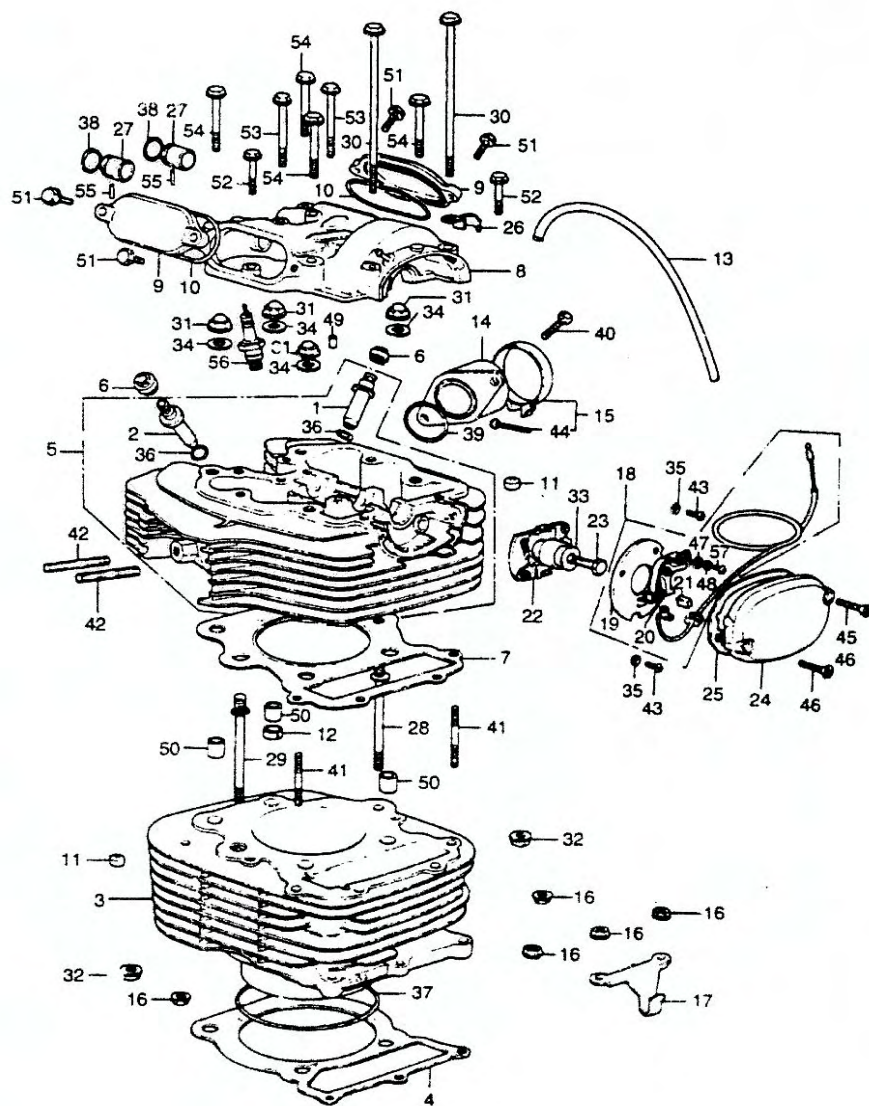

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
41	Bolt, Stud, 6x40	K	K1			2	92700-06040	0058693
	Bolt, Stud, 6x40	K	K1			2	92700-06040-0B	0699546
	Bolt, Stud, 6x28	K	K1			2	92900-06028-0B	1366616
	Bolt, Stud, 6x28	K	K1			2	92900-06028-08	2787570
42	Bolt, Stud, 8x45	K	K1			2	92700-08045	0269019
	Bolt, Stud, 8x45	K	K1			2	92700-08045-0B	0810077
	Bolt 2, Stud, 8x28	K	K1			2	92900-08028-0B	1869676
43	Screw, Pan, 5x10	K	K1			2	93500-05010	0057125
	Screw, Pan, 5x10	K	K1			2	93500-05010-0A	0156976
	Screw, Pan, 5x10	K	K1			2	93500-05010-1A	0814343
	Screw, 5x10	K	K1			2	93510-05010-0A	0173583
44	Screw, Pan, 5x20	K	K1			1	93500-05020-0G	0294181
45	Screw, Oval, 5x16	--	K1			1	93700-05016-0A	0166975
46	Screw, Oval, 5x22	K	--			2	93700-05022-0A	0315556
		--	K1			1	93700-05022-0A	0315556
47	Washer, Plain, 4MM	K	K1			2	94101-04000	0059048
48	Washer, Spring, 4MM	K	K1			2	94111-04000	0058958
49	Pin A, Dowel, 6x10	K	K1			1	94301-06100	0294256
50	Pin A, Dowel, 12x20	K	K1			3	94301-12200	0165324
51	Bolt, Flange, 6x20	K	K1			4	95700-06020-00	0488684
	Bolt, Flange, 6x20	K	K1			4	95701-06020-00	2105815
52	Bolt, Flange, 6x28	K	K1			2	95700-06028-00	0483933
	Bolt, Flange, 6x28	K	K1			2	95701-06028-00	2105849
53	Bolt, Flange, 6x50	K	K1			2	95700-06050-00	0483974
	Bolt, Flange, 6x50	K	K1			2	95701-06050-00	2410975
54	Bolt, Flange, 8x45	K	K1			4	95700-08045-00	0496497
	Bolt, Flange, 8x45	K	K1			4	95701-08045-00	2533859
55	Roller, 6x16	K	K1			2	96220-60160	0338624
56	Plug, Spark (D-8ES-L NGK)	K	K1			1	98069-38710	0290130
	Plug, Spark (D-7ES NGK)	K	K1			1	98069-57711	0263145
	Plug, Spark (D-7EA NGK)	K	K1			1	98069-57717	0633248
	Plug, Spark (X22ES ND)	K	K1			1	98069-57723	0253906
	Plug, Spark (D-8EA NGK)	K	K1			1	98069-58717	0627935
	Plug, Spark (D-8ES NGK)	K	K1			1	98069-58717-S	2522258
	Plug, Spark (X24ES ND)	K	K1			1	98069-58720	0335679
	Plug, Spark (X24ES ND)	K	K1			1	98069-58721	0251033
	Plug, Spark (D-8ES NGK)	K	K1			1	98079-58721	0387571
57	Screw, Hollow Pan, 4x7	K	K1			2	99500-04007-0A	0215889


Crankshaft • Piston

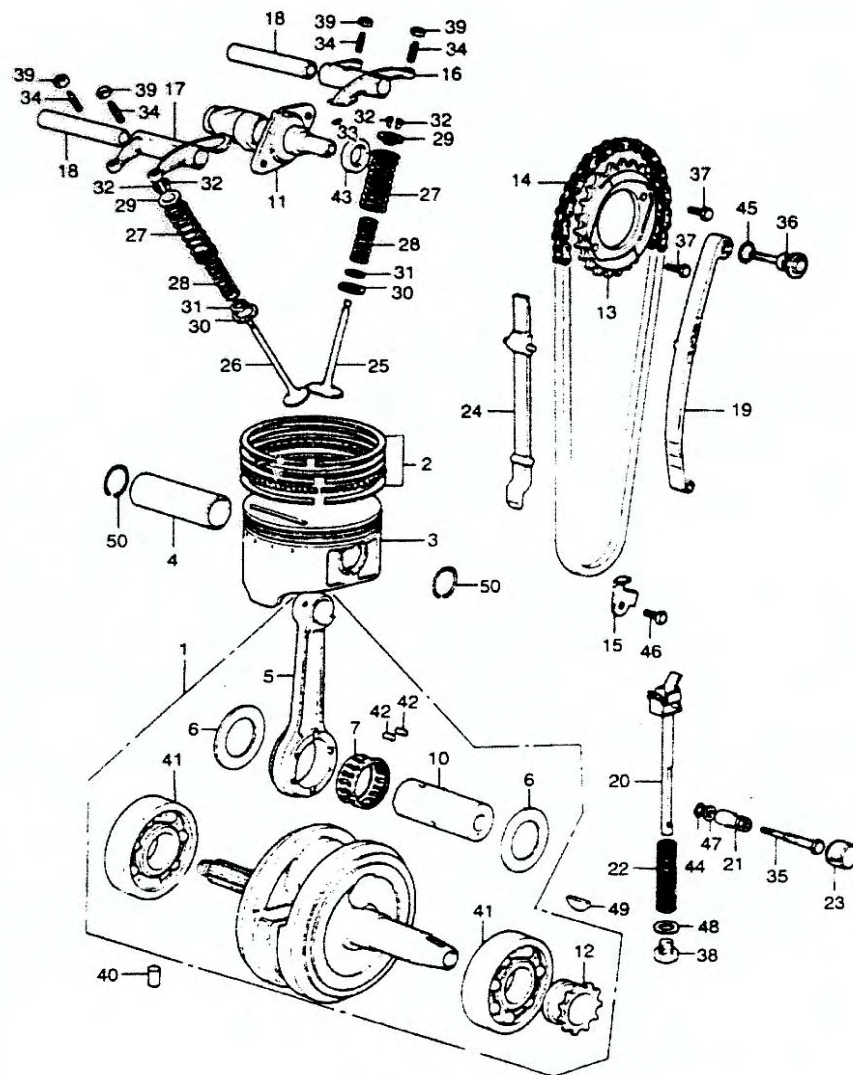

E1335600;


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Crankshaft Comp.	K	K1			1	13000-356-020	0355206
2	Ring Set, Piston (Std.) (Nippon)	K	K1			1	13011-356-003	0355859
	Ring Set, Piston (0.25) (Nippon)	K	K1			1	13012-356-003	0355867
	Ring Set, Piston (0.50) (Nippon)	K	K1			1	13013-356-003	0355875
	Ring Set, Piston (0.75) (Nippon)	K	K1			1	13014-356-003	0355883
	Ring Set, Piston (1.00) (Nippon)	K	K1			1	13015-356-003	0355891
3	Piston (Std.)	K	K1			1	13101-356-000	0336362
	Piston (0.25)	K	K1			1	13102-356-000	0355909
	Piston (0.50)	K	K1			1	13103-356-000	0355917
	Piston (0.75)	K	K1			1	13104-356-000	0355925
	Piston (1.00)	K	K1			1	13105-356-000	0355933
4	Pin, Piston	K	K1			1	13111-356-000	0336370
5	Rod, Connecting	K	K1			1	13201-356-300	3190949
6	Plate, Connecting Rod Side	K	K1			2	13202-356-300	3190956
	Plate, Connecting Rod Side	K	K1			2	13202-385-300	3193950
7	Bearing, Connecting Rod	K	K1			1	13211-356-004	3190964
	Bearing, Connecting Rod	K	K1			1	13211-356-008	3193968
10	Pin, Crank	K	K1			1	13351-356-300	3190972
11	Camshaft	K	K1			1	14101-356-000	0355941
12	Sprocket, Timing	K	K1			1	14312-356-300	0355958
13	Sprocket, Cam	K	K1			1	14321-329-000	0292896
14	Chain, CAM (Daido)	K	K1			1	14401-356-003	0336396
15	Plate, Cam Chain Set	K	K1			1	14414-329-000	0280032
16	Arm, Valve Rocker	K	K1			1	14431-356-010	0336404
17	Arm, Valve Rocker	K	--	1024513		1	14441-356-010	0336412
		--	K1	2016954		1	14441-356-010	0336412
	Arm, Valve Rocker	K	--	1024514		1	14441-385-000	0429803
		--	K1	2016955		1	14441-385-000	0429803
18	Shaft, Valve Rocker Arm	K	--	1024513		2	14451-329-000	0280024
		--	K1	2016954		2	14451-329-000	0280024
	Shaft, Valve Rocker Arm	K	--	1024514		2	14451-385-000	0428508
		--	K1	2016955		2	14451-385-000	0428508
19	Tensioner, Cam Chain	K	K1			1	14500-356-003	0336420
20	Bar Comp., Cam Chain Tensioner S	K	K1			1	14510-329-000	0280057
21	Nut, Cam Chain Tensioner Setting	K	K1			1	14515-329-000	0280065
22	Spring, Cam Chain Tensioner	K	K1			1	14541-329-000	0280073
23	Cap, Cam Chain Tensioner Setting	K	K1			1	14561-329-000	0280081
	Cap, Cam Chain Tensioner Setting	K	K1			1	14561-391-000	0419481
24	Guide, Cam Chain	K	--	1024663		1	04611-329-000	0280099
	Guide, Cam Chain	--	K1	2016972		1	04611-329-000	0280099
	Guide, Cam Chain	K	K1			1	14611-376-000	0400820
25	Valve, In.	K	K1			2	14711-356-000	0336438
26	Valve, Ex.	K	K1			2	14721-356-000	0336446
27	Spring, Valve Outer (Nippon Hajutsu)	K	K1			4	14571-329-005	0280123
28	Spring, Valve Outer (Nippon Hajutsu)	K	K1			4	14761-329-005	0280131
29	Retainer, Valve Spring	K	K1			4	14771-329-000	0280149
30	Seat, Valve Spring	K	K1			4	14775-329-000	0280156
31	Seat, Valve Spring Inner	K	K1			4	14776-MA6-000	1377563
	Seat, Valve Spring	K	K1			4	14776-329-000	0280164
32	Cotter, Valve (Sanko)	K	K1			8	14781-107-003	0822478
	Cotter, Valve In.	K	K1			8	14781-107-020	0214742
33	Pin, Camshaft, 3x5.2	K	K1			1	30905-216-000	0025064
34	Screw, Tappet Adjusting	K	K1			4	90012-300-000	0189027
	Screw, Tappet Adjusting	K	K1			4	90012-426-000	0768499
35	Bolt, Tensioner Adjusting	K	K1			1	90018-329-000	0279539
36	Bolt, Tensioner	K	K1			1	90019-329-000	0279547
37	Bolt, Hex. Knock, 7x12	K	K1			2	90081-246-000	0192674
38	Bolt, Drain	K	--	1024368		1	90107-538-010	0297879
	Bolt, Drain	--	K1	2015482		1	90107-538-010	0297879
	Bolt, Drain Plug, 12MM	K	--	1024369		1	92800-12000	0053975
	Bolt, Drain Plug, 12MM	--	K1	2015483		1	92800-12000	0053975
39	Nut, Tappet Adjusting	K	K1			4	90206-250-000	0040139
40	Pin, Dowel, 7x12	K	K1			1	90708-286-000	0156414

Crankshaft • Piston

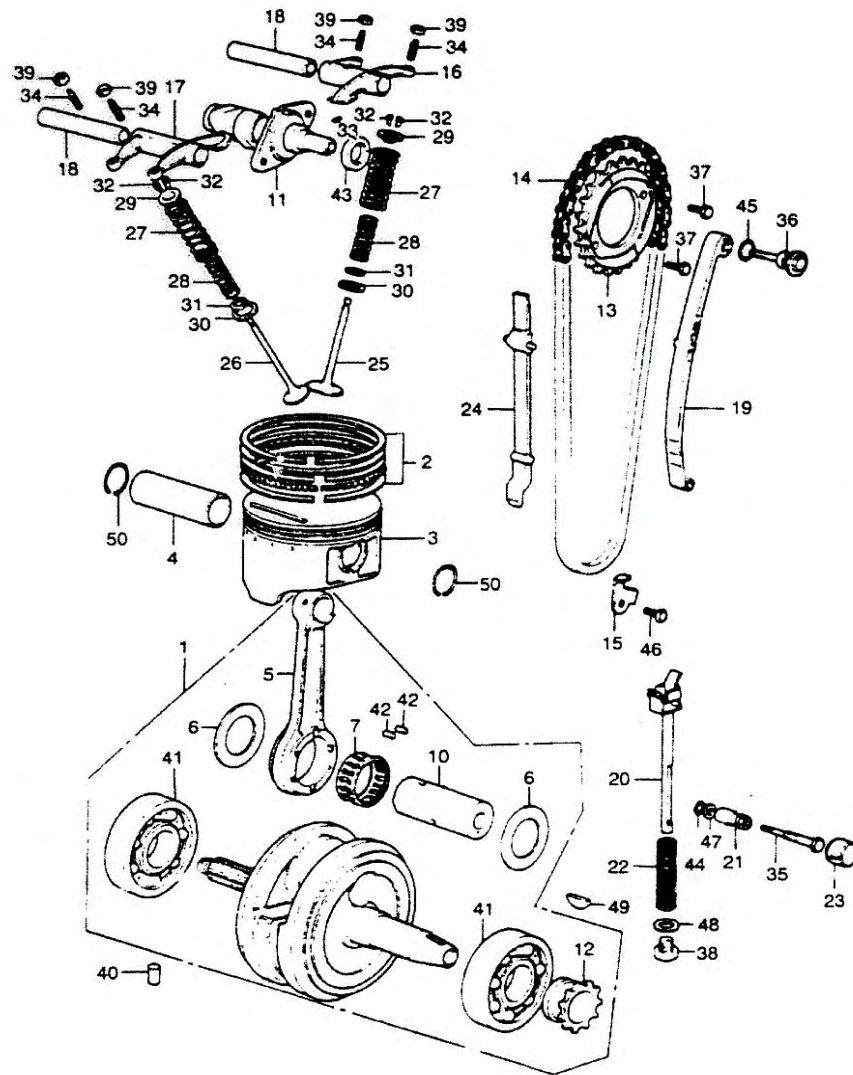

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
41	Bearing, Special Ball, 6306 (Nachi)	K	K1			2	91001-356-003	0338376
42	Roller-1, 3.5x15.8 (Toyo)	K	K1			26	91105-356-008	0338392
	Roller-2, 3.5x15.8 (Toyo)	K	K1			26	91106-356-008	0338400
	Roller-3, 3.5x15.8 (Toyo)	K	K1			26	91107-356-008	0338418
	Roller-4, 3.5x15.8 (Toyo)	K	K1			26	91008-356-008	0338426
	Roller-5, 3.5x15.8 (Toyo)	K	K1			26	91009-356-008	0338434
43	Oil Seal, 15x27x7	K	K1			1	91207-329-003	0293977
44	O-Ring, 5x2.4	K	K1			1	91301-283-000	0074559
	O-Ring, 5x2.4	K	K1			1	91301-283-005	0334904
	O-Ring, 5x2.5	K	K1			1	91301-393-000	0450213
	O-Ring, 4.9x2.5	K	K1			1	91301-426-010	1113349
45	O-Ring, 13x2.5	K	K1			1	91319-300-000	0112474
46	Bolt, Hex., 6x12	K	K1			1	92000-06012	0054197
	Bolt, Hex., 6x12	K	K1			1	92101-06012	2738821
	Bolt, Hex., 6x12	K	K1			1	92101-06012-0A	3591500
47	Washer, Plain, 6mm	K	K1			1	94101-06000	0059071
	Washer, Plain, 6mm	K	K1			1	94101-06080	3136074
	Washer, Plain, 6mm	K	K1			1	94101-06800	0345900
48	Washer, Drain Plug, 12mm	K	K1			1	94109-12000	0171868
49	Key, Woodruff, 25x18	K	K1			1	94401-25180	0053777
50	Clip, Piston Pin, 21mm	K	K1			2	94601-21000	0338582


Right Crankcase Cover • Clutch

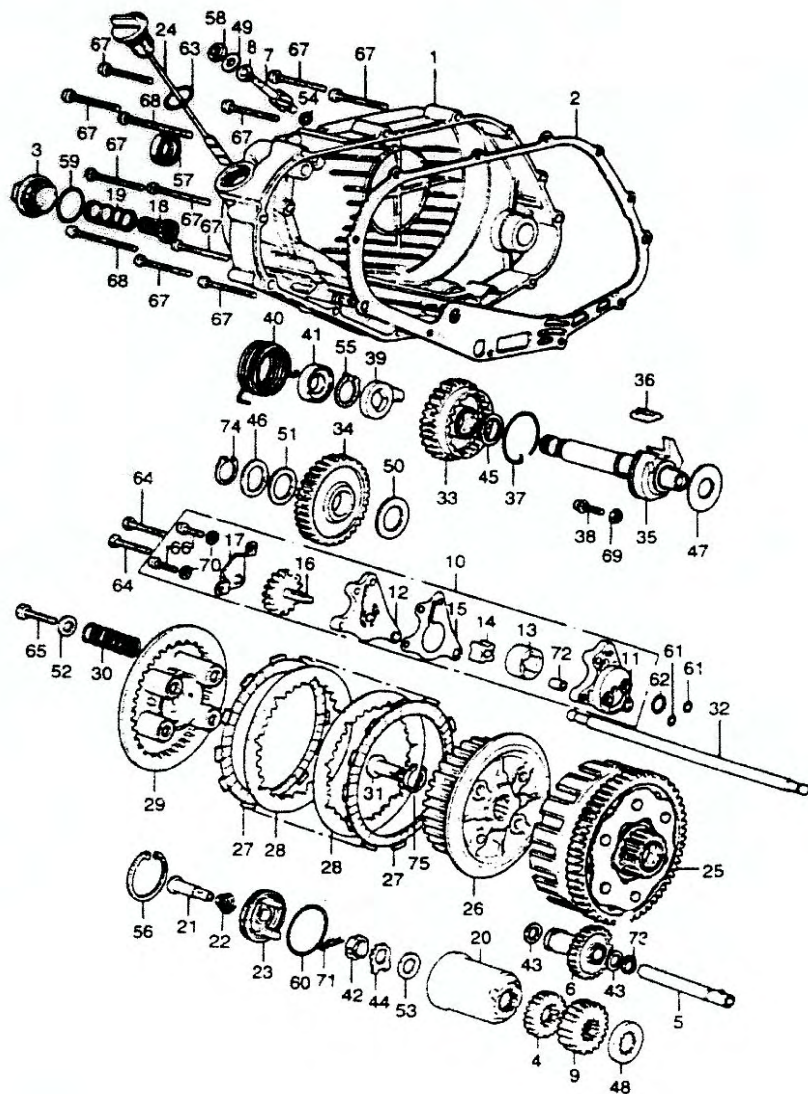

E13356003


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Cover Comp., R. Crankcase	K	K1			1	11330-356-010	0336248
2	Gasket, R. Crankcase Cover	K	K1			1	11394-356-000	0336263
	Gasket, R. Crankcase Cover	K	K1			1	11394-356-306	4371399
3	Cap, Valve Adjusting	K	K1			1	12361-107-000	0214510
	Cap, Tappet Adjusting Hole	K	K1			1	12361-383-000	0420646
4	Gear, Tachometer Idler Drive	K	K1			1	12401-356-010	0336339
5	Shaft, Tachometer Idler	K	K1			1	12410-356-010	0336347
6	Pinion Comp., Tachometer	K	--	1024366		1	12420-329-000	0279877
	Pinion Comp., Tachometer	K	K1			1	12420-329-700	0382093
7	Gear, Tachometer	K	K1			1	12431-246-000	0195412
8	Collar, Tachometer Gear Thrust	K	K1			1	12435-329-000	0292227
9	Gear, Primary Drive	K	K1			1	13611-356-010	0336388
10	Pump Assy., Oil	K	K1			1	15100-356-000	0336453
11	Body, Oil Pump	K	K1			1	15111-329-010	0292904
12	Cover, Oil Pump	K	K1			1	15121-356-000	0336461
13	Rotor, Oil Pump Outer	K	K1			1	15122-329-010	0280214
14	Rotor, Oil Pump Inner	K	K1			1	15123-329-010	0280222
15	Gasket, Oil Pump Cover	K	K1			1	15129-329-010	0280198
16	Gear, Oil Pump Drive	K	K1			1	15131-356-000	0336479
17	Plate, Oil Pump Setting	K	K1			1	15197-329-000	0280248
18	Screen, Oil Filter	K	K1			1	15421-329-000	0277871
19	Spring, Oil Filter Screen	K	K1			1	15426-107-000	0214866
20	Rotor, Oil Filter	K	K1			1	15441-362-000	0333088
21	Through, Oil	K	K1			1	15445-356-000	0336487
22	Spring, Oil Through	K	K1			1	15446-356-000	0336495
23	Cap, Oil Filter	K	K1			1	15450-329-000	0277897
24	Gauge, Oil Filter	K	K1			1	15650-356-000	0336503
	Gauge, Oil Level	K	K1			1	15650-393-000	0450189
25	Outer Comp., Clutch	K	K1			1	22100-356-000	0356097
26	Center, Clutch	K	K1			1	22120-329-010	0277970
27	Disk, Clutch Friction	K	K1			7	22201-286-010	0180299
28	Plate B, Clutch	K	K1			6	22321-329-000	0278002
29	Plate, Clutch Pressure	K	K1			1	22350-329-000	0277996
30	Spring, Clutch	K	K1			4	22401-356-000	0336826
31	Piece, Clutch Lifter Joint	K	K1			1	22838-329-000	0278044
32	Rod, Clutch Lifter	K	--	1020042		1	22850-329-000	0278069
	Rod, Clutch Lifter	K	K1			1	22850-329-070	0375279
33	Pinion Comp., Kick Starter	K	--	1016455		1	28210-356-010	0337014
	Pinion Comp., Kick Starter	K	--	1016455		1	28210-356-020	0381574
	Pinion Comp., Kick Starter	K	K1			1	28210-356-020	0381574
34	Gear, Kick Starter Idle	K	K1			1	28221-356-010	0337022
35	Spindle Comp. Kick Starter	K	K1			1	28250-356-000	0337048
36	Pawl, Kick Starter	K	K1			1	28252-356-000	0337055
37	Spring, Kick Starter Ratchet	K	K1			1	28253-300-000	0193698
38	Pin, Kick Stopper	K	K1			1	28254-356-000	0337063
39	Retainer, Kick Starter Spring	K	K1			1	28258-329-000	0293142
40	Spring, Kick Starter Ratchet	K	K1			1	28261-329-000	0278382
41	Collar, Kick Starter Spring	K	K1			1	28262-329-000	0278390
42	Nut, Lock, 16MM	K	K1			1	90231-200-010	0026757
43	Washer, 10MM	K	K1			2	90412-329-000	0279620
44	Washer, Spring, 16MM	K	K1			1	90431-292-000	0151647
45	Washer A, Thrust, 22MM	K	K1			1	90452-504-010	0279679
46	Washer, Thrust, 20MM	K	K1			1	90453-329-000	0293860
47	Washer, 16MM	K	K1			1	90454-329-000	0293878
48	Washer A, Thrust, 25MM	K	K1			1	90456-356-010	0338343
49	Washer, Tachometer Gear Thrust	K	K1			1	90458-286-000	0172791
50	Washer, Thrust, 20MM	K	K1			1	90458-292-000	0143396
51	Washer, Thrust, 20MM	K	K1			1	90458-329-010	0293894
52	Washer, 6x19	K	K1			4	90481-259-000	0040220
53	Washer, 16MM	K	K1			1	90481-292-000	0151654
54	Washer, Speedometer Pinion	K	K1			1	90539-011-000	0012385
55	Circlip, 22MM	K	K1			1	90601-329-000	0279711
56	Circlip, Internal, 45MM	K	K1			1	90604-292-000	0143404

Right Crankcase Cover • Clutch

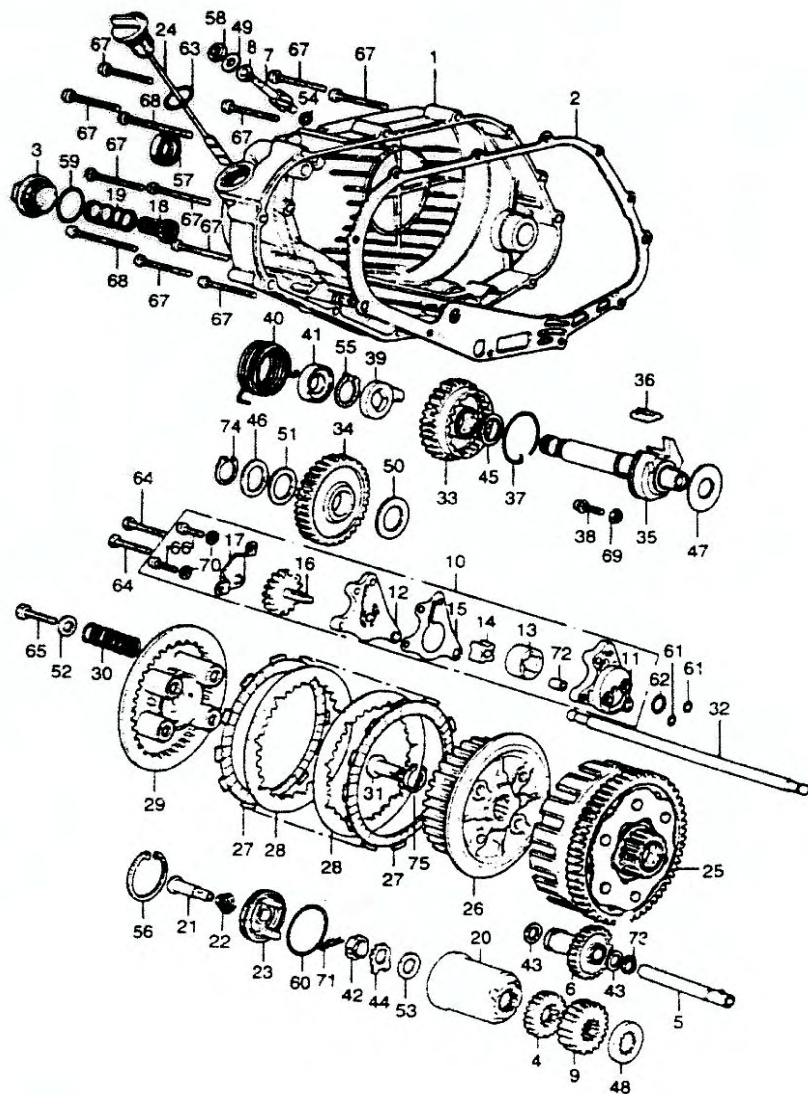


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
57	Oil Seal, 18x29x7	K	K1			1	91204-286-003	0153254
58	Oil Seal, 18x29x7	K	K1			1	91204-286-005	0342394
	Oil Seal, 4.8x14.5x4	K	K1			1	91211-286-003	0172783
	Oil Seal, 4.8x14.5x4	K	K1			1	91256-096-651	2073096
59	O-Ring, 35x3	K	K1			1	91303-107-000	0213322
60	O-Ring, 39x1.8	K	K1			1	91310-329-000	0280412
61	O-Ring, 7x1.7	K	K1			2	91312-107-000	0213348
62	O-Ring, 13x2.5	K	K1			1	91319-300-000	0112474
63	O-Ring, 23MM	K	K1			1	91354-702-000	0122143
64	Bolt, Hex., 6x28	K	K1			2	92000-06028	0054346
	Bolt, Hex., 6x28	K	K1			2	92101-06028-0A	3459427
65	Bolt, Hex., 6x20	K	K1			4	92020-06020	0241117
66	Screw, Pan, 6x18	K	K1			2	93500-06018	0057471
67	Screw, Pan, 6x45	K	K1			10	93500-06045	0057638
	Screw, Pan, 6x45	K	K1			10	93500-06045-0A	1509199
68	Screw, Pan, 6x55	K	K1			2	93500-06055	0057661
	Screw, Pan, 6x55	K	K1			2	93500-06055-0A	1972967
69	Nut, Hex., 10MM	K	K1			1	94002-10000-0S	0156984
70	Washer, Spring, 6MM	K	K1			2	94111-06000	0058974
71	Pin, Lock, 8MM	K	K1			1	94251-08000	0115527
72	Pin A, Dowel, 8x10	K	K1			1	94301-08100	0081711
73	Circlip, External, 10MM	K	K1			1	94510-10000	0156992
74	Circlip, External, 20MM	K	K1			1	94510-20000	0053629
75	Circlip, External, 25MM	K	K1			1	94510-25000	0079830

Left Crankcase Cover • Alternator

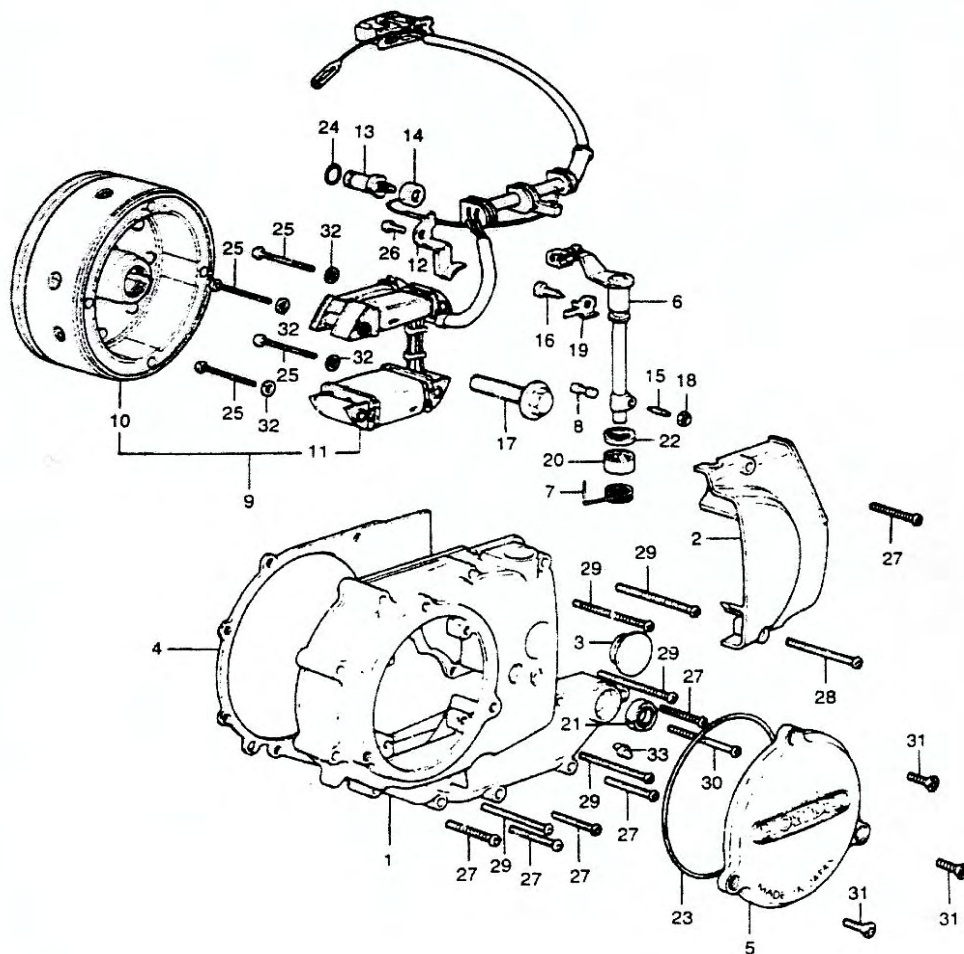


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Cover, Comp., L. Crankcase	K	--	1016455		1	11341-329-000	0277806
	Cover, Comp., L. Crankcase	K	K1			1	11341-329-010	0378380
2	Cover, L. Crankcase RR.	K	K1			1	11351-329-000	0277814
3	Cap, Clutch Adjusting Hole	K	K1			1	11391-329-000	0277848
4	Gasket, L. Crankcase Cover	K	K1			1	11395-329-000	0277822
	Gasket, L. Crankcase Cover	K	K1			1	11395-329-306	4434403
5	Cover, Alternator	K	K1			1	11431-329-000	0277863
6	Lever, Comp. Clutch	K	K1			1	22810-356-000	0336834
7	Spring, Clutch Lever	K	K1			1	22815-329-000	0278028
8	Piece, Lifter Rod End	K	K1			1	22841-329-000	0278051
9	Alternator Assy., A.C. (ND)	K	--	1016455		1	31100-356-014	0337113
	Alternator Assy., A.C. (ND)	K	--	1016456		1	31100-356-024	0395004
	Alternator Assy., A.C. (ND)	--	K1			1	31100-356-024	0395004
10	Flywheel Comp. (ND)	K	--	1016455		1	31121-356-014	0337121
	Flywheel Comp. (ND)	K	--	1016456		1	31121-356-024	0395012
	Flywheel Comp. (ND)	--	K1			1	31121-356-024	0395012
11	Stator Assy. (ND)	K	K1			1	31141-329-004	0279505
12	Clamp, Wire	K	K1			1	32111-329-000	0278481
13	Contact Assy., Neutral Switch	K	K1			1	35750-028-000	0014035
14	Spacer, Neutral Switch	K	K1			1	35752-329-300	0293266
15	Screw, Tappet Adjusting	K	K1			1	90012-333-000	0294819
16	Bolt, Knock, 6MM	K	K1			1	90017-329-000	0279521
17	Bolt, Flange, 12x40	K	K1			1	90023-329-000	0279554
18	Nut, Tappet Adjusting	K	K1			1	90206-246-000	0173898
19	Washer, Lock, 6MM	K	K1			1	90434-329-000	0293852
20	Bearing, Needle, 16MM	K	K1			1	91031-329-000	0280313
21	Seal, Oil, 14x28x7	K	K1			1	91206-286-005	0293969
	Seal, Oil, 14x28x7	K	K1			1	91206-286-006	0338442
	Seal, Oil, 14x28x7 (Arai)	K	K1			1	91206-286-013	0153270
22	Seal, Oil, 16x22x3.5	K	K1			1	91206-329-000	0280354
	Seal, Oil, 16x22x3.5	K	K1			1	91206-329-154	0387555
	Seal, Dust, 16x22x3.2	K	K1			1	91251-964-000	1423292
23	O-Ring, 109x3	K	K1			1	91301-329-000	0280388
24	O-Ring, 7x1.7	K	K1			1	91312-107-000	0213348
25	Screw, Pan, 5x45	K	K1			4	93500-05045-0A	0197715
26	Screw, Pan, 6x12	K	K1			1	93500-06012	0057422
	Screw, Pan, 6x12	K	K1			1	93500-06012-0A	0182360
	Screw, Pan, 6x12	K	K1			1	93500-06012-00	2711489
27	Screw, Pan, 6x32	K	K1			6	93500-06032	0057562
	Screw, Pan, 6x32	K	K1			6	93500-06032-0A	0666065
28	Screw, Pan, 6x32	K	K1			1	93500-06032	0057562
	Screw, Pan, 6x32	K	K1			1	93500-06032-0A	0666065
29	Screw, Pan, 6x55	K	K1			5	93500-06055	0057661
	Screw, Pan, 6x55	K	K1			5	93500-06055-0A	1972967
30	Screw, Pan, 6x60	K	K1			1	93500-06060	0057687
	Screw, Pan, 6x60	K	K1			1	93500-06060-0A	1445394
31	Screw, Oval, 6x16	K	K1			3	93700-06016-0B	1062421
	Screw, Oval, 6x16	K	K1			3	93700-06016-02	0056481
32	Washer, Plain, 5MM	K	K1			4	94101-05000	0059055
33	Fitting, Grease, A.45	K	K1			1	96201-30001	0258046

Transmission • Gearshift

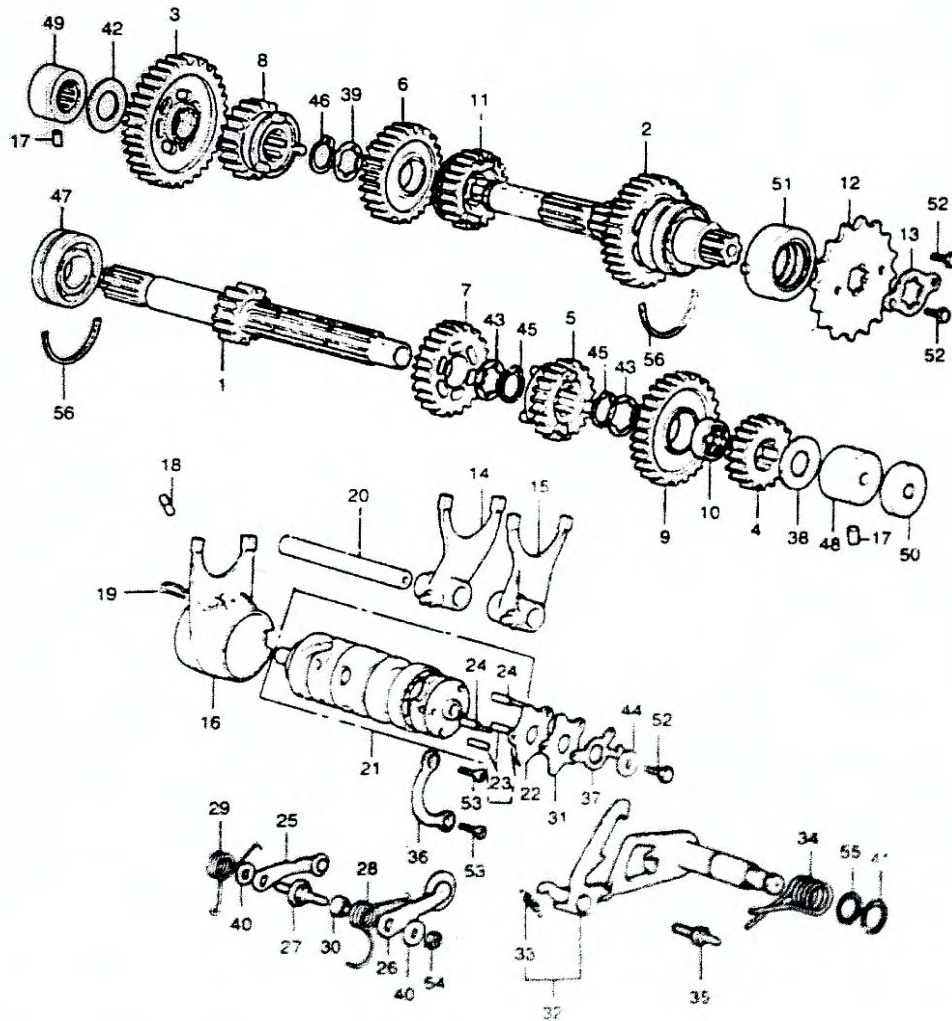


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Mainshaft, Transmission (16T)	K	K1			1	23211-356-000	0336875
2	Countershaft, Transmission (35T)	K	K1			1	23220-356-000	0336883
3	Gear, Countershaft Low (40T)	K	K1			1	23410-356-000	0336891
4	Gear, Mainshaft Second (21T)	K	K1			1	23421-329-000	0278093
5	Gear, Mainshaft Third (25T)	K	K1			1	23441-329-000	0293100
6	Gear, Countershaft Third (31T)	K	K1			1	23451-356-000	0336909
7	Gear, Mainshaft Fourth (29T)	K	K1			1	23461-356-000	0336917
8	Gear, Countershaft Fourth (27T)	K	K1			1	23471-356-000	0336925
9	Gear, Mainshaft Top (32T)	K	K1			1	23481-356-000	0336933
10	Bush, Spline, 22MM	K	K1			1	23485-329-000	0278150
11	Gear, Countershaft Top (24T)	K	K1			1	23491-356-000	0336941
12	Sprocket, Drive (15T)	K	K1			1	23801-348-690	0336958
	Sprocket, Drive (14T)	K	K1			1	23801-356-810	0336966
13	Plate, Drive Sprocket Fixing	K	K1			1	23811-292-000	0151241
14	Fork, R. Gearshift	K	K1			1	24211-329-000	0278192
15	Fork, L. Gearshift	K	K1			1	24212-356-000	0336974
16	Fork, Center Gearshift	K	K1			1	24213-329-000	0278184
	Fork C, Gearshift	K	K1			1	24213-376-000	0396127
17	Pin, Gearshift Fork Guide	K	K1			2	24261-283-000	0075911
18	Pin, Gearshift Fork Guide	K	K1			2	24261-283-000	0075911
19	Clip, Gearshift Fork Guide Pin	K	K1			1	24263-028-000	0014266
20	Shaft, Gearshift Fork Guide	K	K1			1	24265-356-000	0336990
21	Drum Comp., Gearshift	K	K1			1	24301-329-010	0278226
22	Plate, Drum Stopper Cam	K	K1			1	24305-329-300	0278234
23	Pin, Gearshift Drum	K	K1			2	24306-235-300	0151282
24	Pin, Gearshift Drum 4MM	K	K1			2	24308-329-310	0278242
25	Arm Comp., Neutral Stopper	K	K1			1	24420-329-000	0278259
26	Stopper, Gearshift Drum	K	K1			1	24430-329-030	0278267
27	Shaft, Shift Drum Stopper	K	K1			1	24434-329-010	0278275
28	Spring, Shift Drum Stopper	K	K1			1	24435-329-010	0278317
29	Spring, Neutral Stopper	K	K1			1	24436-329-010	0278283
30	Collar, Shift Drum Stopper	K	K1			1	24437-329-010	0278291
31	Plate, Roller Stopper	K	K1			1	24439-329-010	0278309
32	Spindle Comp., Gearshift	K	K1			1	24610-329-000	0278325
33	Spring, Gearshift Arm	K	K1			1	24641-329-010	0297853
34	Spring, Gearshift Return	K	K1			1	24651-329-000	0278333
35	Pin, Shift Return Spring	K	K1			1	24652-300-000	0190033
36	Plate, Bearing Set	K	K1			1	24710-329-000	0278341
37	Rotor, Neutral Switch	K	K1			1	35753-329-010	0279513
38	Washer, Thrust, 17x32	K	K1			1	90411-356-000	0356188
39	Washer, Thrust, 25MM	K	K1			1	90451-300-000	0190710
40	Washer, Shift Drum Stopper	K	K1			2	90453-292-010	0143362
41	Washer, Thrust, 14MM	K	K1			1	90454-500-000	0279687
42	Washer, Thrust, 20MM	K	K1			1	90458-292-000	0143396
43	Washer, Thrust, 22MM	K	K1			2	90463-329-000	0279703
44	Washer, 6x19	K	K1			1	90481-259-000	0040220
45	Circlip, 22MM	K	K1			2	90601-329-000	0279711
46	Circlip, External, 25MM	K	K1			1	90602-259-010	0080101
47	Bearing, Ball, 5205HS (Toyo)	K	K1			1	91002-286-008	0156422
48	Bearing, Needle, 17MM (Toyo)	K	K1			1	91021-356-018	0338384
49	Bearing B, Needle, 20MM (Koyo)	K	K1			1	91022-312-004	0233056
50	Oil Seal, 8x24x8	K	K1			1	91203-292-005	0342790
51	Oil Seal, 34x52x13.5x15.5	K	K1			1	91205-333-005	0297366
	Oil Seal, 34x52x13.5x15.5	K	K1			1	91205-333-015	0461897
52	Bolt, Hex., 6x12	K	K1			3	92000-06012	0054197
	Bolt, Hex., 6x12	K	K1			3	92101-06012	2738821
	Bolt, Hex., 6x12	K	K1			3	92101-06012-0A	3591500
53	Screw, Flat, 6x14	K	K1			2	93600-06014	0055780
	Screw, Flat, 6x14	K	K1			2	93600-06014-0A	3370905

Transmission • Gearshift

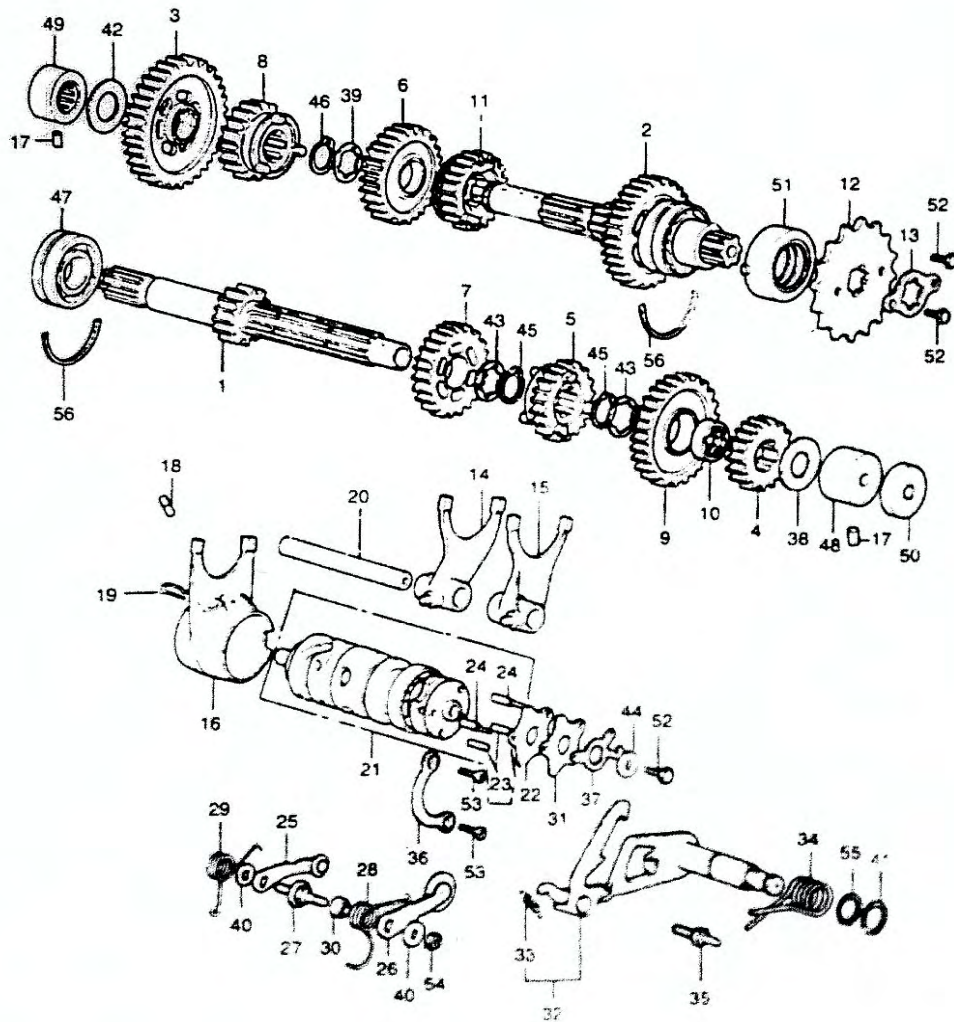


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
54	Nut, Hex., 6MM	K	K1			1	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	K1			1	94000-06000-OS	1391283
	Nut, Hex., 6MM	K	K1			1	94001-06000	0058016
	Nut, Hex., 6MM	K	K1			1	94001-06000-OS	0156067
	Nut, Hex., 6MM	K	K1			1	94001-06008-OS	2829414
	Nut, Hex., 6MM	K	K1			1	94001-06200-OS	2043255
	Nut, Hex., 6MM	K	K1			1	94030-06000	1642693
55	Circlip, External, 14MM	K	K1			1	94510-14000	0213389
56	Set Ring, 520	K	K1			2	95015-25200	0294314

Crankcase

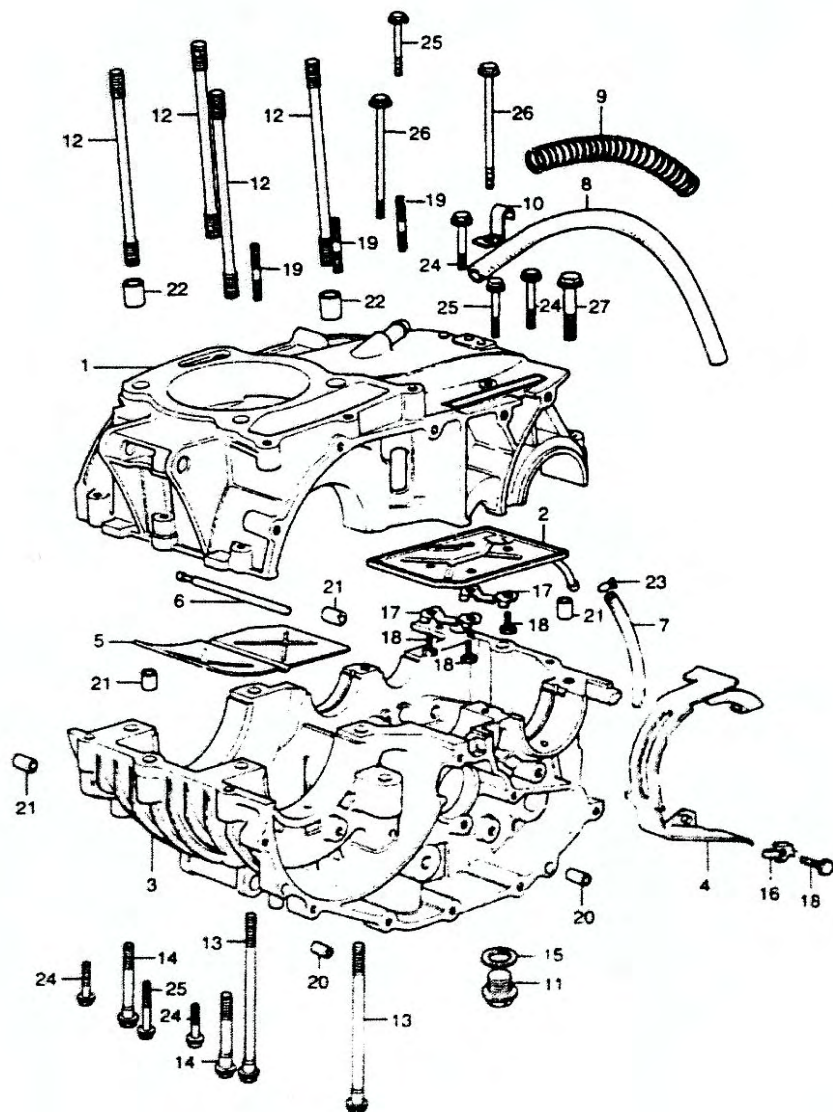


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Crankcase Comp., Upper	K	--	1016455		1	11100-356-010	0336214
	Crankcase Comp., Upper	K	K1			1	11100-356-020	0378364
2	Plate Comp., Breather	K	K1			1	11110-356-000	0336222
3	Crankcase Comp., Lower	K	--	1016456		1	11200-356-010	0336230
	Crankcase Comp., Lower	K	K1	1016456		1	11200-356-020	0378372
		K	K1	1016456		1	11200-356-020	0378372
		--	K1			1	11200-356-020	0378372
4	Protector, Case	K	K1			1	11353-356-000	0336255
5	Separator, Oil	K	K1			1	11761-356-000	0336271
6	Bar, Oil Separator Setting	K	K1			1	11762-329-000	0277855
7	Tube, Oil Return	K	K1			1	15713-356-000	0336511
8	Tube, Breather	K	K1			1	15771-356-000	0336529
9	Protector, Breather Tube	K	K1			1	15773-356-000	0355966
10	Clamp, Alternator Cord	K	K1			1	32112-329-000	0293209
11	Bolt, Drain Valve	K	K1			1	90013-230-000	0139303
12	Bolt, Cylinder Stud, 10MM	K	K1			4	90031-356-000	0338269
13	Bolt, UBS, 8x160	K	K1			2	90044-356-000	0338285
14	Bolt, UBS, 8x114	K	K1			2	90045-329-000	0293720
15	Gasket, Drain Valve	K	K1			1	90407-205-000	0026773
16	Washer, Lock, 6MM	K	K1			1	90434-329-000	0293852
17	Washer, 6MM	K	K1			2	90484-329-000	0293902
18	Bolt, Hex., 6x16	K	K1			5	92000-06016	0054239
	Bolt, Hex., 6x16	K	K1			5	92000-06016-0A	0313197
	Bolt, Hex., 6x16	K	K1			5	92000-06016-1A	0915124
	Bolt, Hex., 6x16	K	K1			5	92100-06016-0A	1685726
	Bolt, Hex., 6x16	K	K1			5	92101-06016-0A	2479590
	Bolt, Hex., 6x16	K	K1			5	92200-06016-0A	1842400
19	Bolt, Stud, 6x40	K	K1			3	92700-06040	0058693
	Bolt, Stud, 6x40	K	K1			3	92700-06040-0B	0699546
	Bolt, Stud, 6x28	K	K1			3	92900-06028-0B	1366616
	Bolt, Stud, 6x28	K	K1			3	92900-06028-08	2787570
20	Pin A, Dowel, 8x14	K	K1			2	94301-08140	0069310
21	Pin A, Dowel, 10x14	K	K1			4	94301-10140	0069336
22	Pin, Knock, 12x16	K	K1			2	94301-12160	0165316
23	Clip, Tube, C11	K	K1			1	95002-70000	0053595
24	Bolt, Flange, 6x35	K	K1			4	95700-06035-00	0483941
	Bolt, Flange, 6x35	K	K1			4	95701-06035-00	2105864
25	Bolt, Flange, 6x55	K	K1			3	95700-06055-00	0483982
	Bolt, Flange, 6x55	K	K1			3	95701-06055-00	2533834
26	Bolt, Flange, 6x90	K	K1			2	95700-06090-00	0484014
	Bolt, Flange, 6x90	K	K1			2	95701-06090-00	2533842
27	Bolt, Flange, 8x45	K	K1			1	95700-08045-00	0496497
	Bolt, Flange, 8x45	K	K1			1	95701-08045-00	2533859

Carburetor

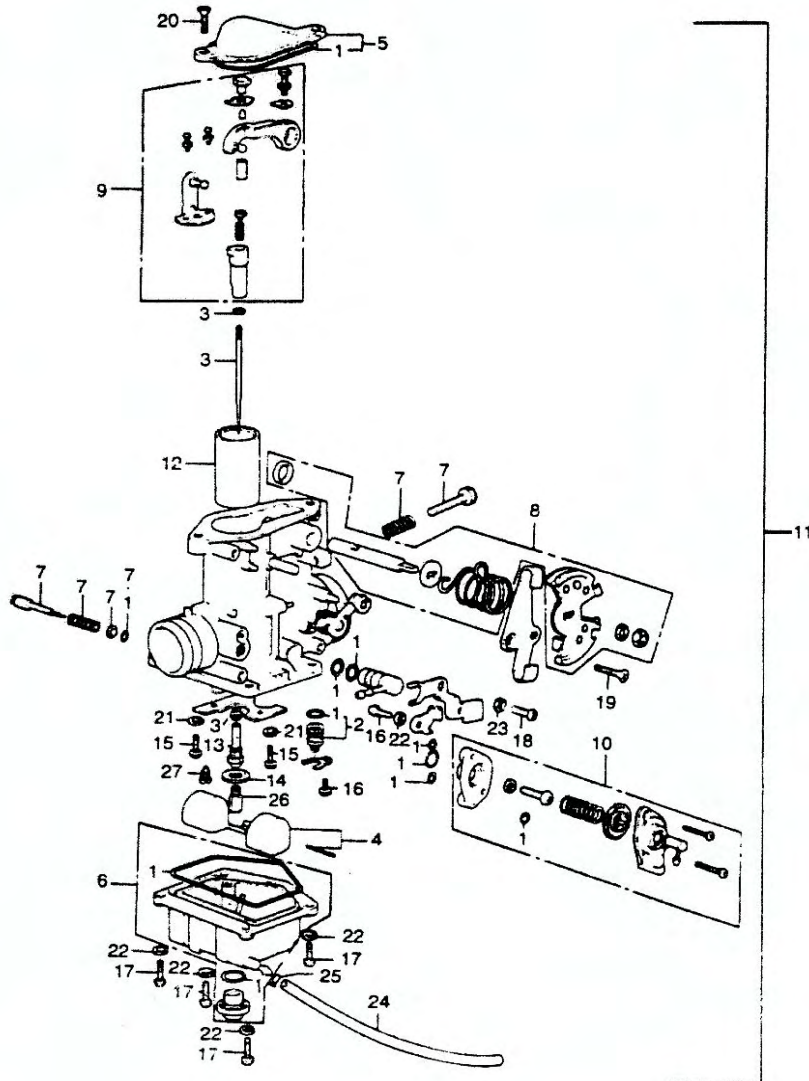


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Gasket Set	K	K1			1	16010-356-004	0355974
2	Valve Set, Float	K	K1			1	16011-356-004	0348573
3	Needle Set, Jet	K	K1			1	16012-356-004	0355982
4	Float Set	K	K1			1	16013-360-004	0338996
5	Top Set	K	K1			1	16014-356-004	0355990
6	Chamber Set, Float	K	K1			1	16015-356-004	0356006
7	Screw Set	K	K1			1	16016-329-004	0292979
8	Link Set	K	K1			1	16017-356-004	0356014
9	Arm Set, Link	K	K1			1	16018-356-004	0356022
10	Valve Set, Air Cut	K	K1			1	16048-356-004	0356030
11	Carburetor Assy.	K	K1			1	16100-356-004	0336545
12	Valve, Throttle	K	K1			1	16111-356-004	0356048
13	Holder, Needle Jet	K	K1			1	16165-356-004	0356055
14	Holder, Jet	K	K1			1	16168-356-004	0356063
	Holder, Jet	K	K1			1	16168-357-004	0328385
15	Screw, Pan, 3x6	K	K1			2	93500-03006-0A	0166652
16	Screw, Pan, 4x10	K	K1			2	93500-04010-0A	0188359
17	Screw, Pan, 4x14	K	K1			4	93500-04014-0A	0156471
18	Screw, Pan, 5x10	K	K1			1	93500-05010-0A	0156976
19	Screw, Flat, 5x12	K	K1			1	93600-05012-0A	0145367
20	Screw, Oval, 4x18	K	K1			2	93700-04018-0A	0261867
21	Washer, Spring, 3MM	K	K1			2	94111-03000	0058941
22	Washer, Spring, 4MM	K	K1			5	94111-04000	0058958
23	Washer, Spring, 5MM	K	K1			1	94111-05000	0058966
24	Tube, 3.5x300 (Bulk Hose: 95001-356-004)	K	K1			1	95001-35300-40	0263194
25	Clip, Tube, B7	K	K1			1	95002-02070	0250639
26	Jet, Main, =125	K	K1			1	99101-357-1250	0341701
	Jet, Main, =128	K	K1			1	99101-357-1280	0341719
	Jet, Main, =130	K	K1			1	99101-357-1300	0341727
27	Jet, Slow, =48	K	K1			1	99103-356-0480	0356204

Handlebar • Handle Lever

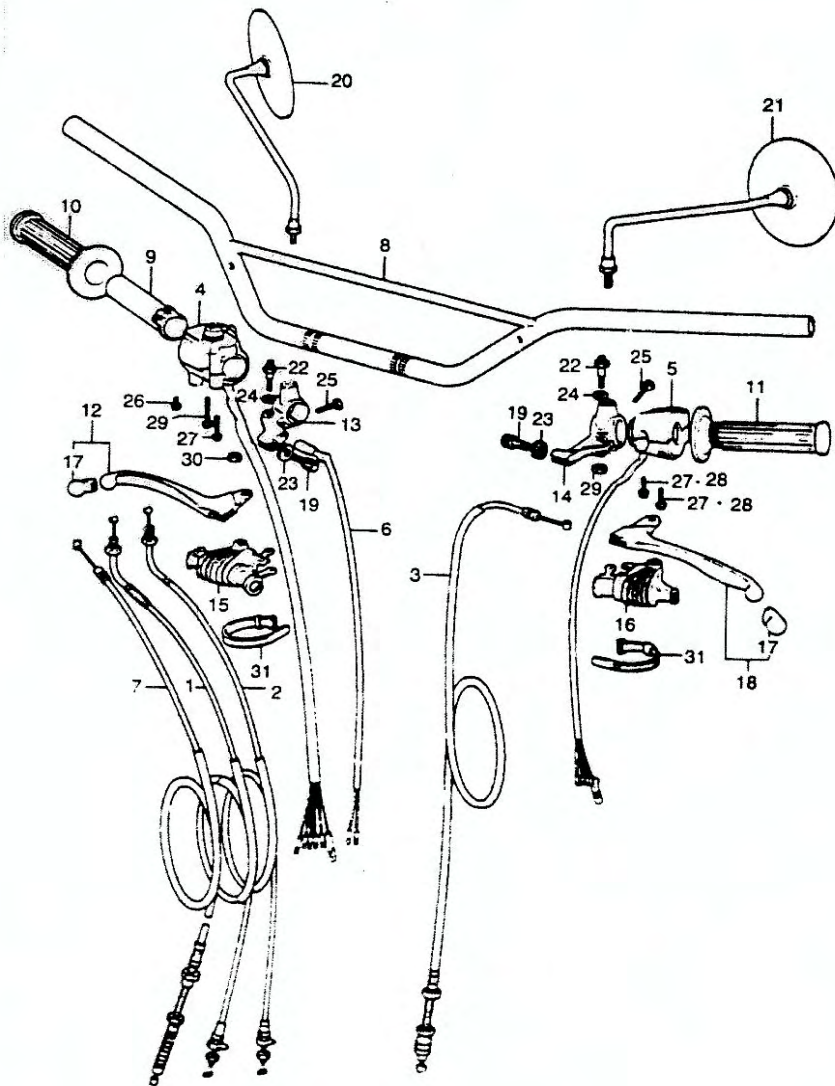


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Cable Comp. A, Throttle	K	K1			1	17910-356-000	0336727
	Cable Comp. A, Throttle	K	K1			1	17910-385-000	0428722
2	Cable Comp. B, Throttle	K	K1			1	17920-356-000	0336735
3	Cable Comp., Clutch	K	K1			1	22870-KB4-000	1183847
	Cable Comp., Clutch	K	K1			1	22870-356-000	0336859
4	Switch Assy., Lighting Kill	K	--			1	35300-329-672	0281253
	Switch Assy., Lighting Kill	--	K1			1	35150-356-712	0382200
5	Switch Assy., Turn Signal Horn	K	--			1	35250-329-003	0333922
	Switch Assy., Turn Signal Horn	--	K1			1	35200-356-701	0382218
6	Switch Comp., FR. Stop	K	K1			1	35330-391-690	0462945
	Switch Comp., FR. Stop	K	K1			1	35340-147-000	2739944
	Switch Comp., FR. Stop	K	K1			1	35340-329-000	0281279
	Switch Comp., FR. Stop	K	K1			1	35340-329-010	4314126
7	Cable Comp., Fr. Brake	K	K1			1	45450-329-010	0281832
8	Handlebar	K	--			1	53100-356-000	0338053
	Handlebar	--	K1			1	53100-356-700	0398941
9	Pipe, Throttle Grip	K	K1			1	53141-356-000	0338061
10	Grip, R. Handle	K	K1			1	53165-362-000	0334540
11	Grip, L. Handle	K	K1			1	53166-362-000	0334557
12	Lever Comp., R. Handle	K	--	1017039		1	53170-329-000	0282228
	Lever Comp., R. Handle	K	--	1017039		1	55170-329-010	0381186
		K	--	1017040		1	55170-329-010	0381186
		--	K1			1	55170-329-010	0381186
	Lever Comp., R. Handle	K	--	1017039		1	53175-329-000	0424267
		K	--	1017040		1	53175-329-000	0424267
		--	K1			1	53175-329-000	0424267
	Lever Comp., R. Handle	K	--	1017039		1	53175-369-700	0487934
		K	--	1017040		1	53175-369-700	0487934
		--	K1			1	53175-369-700	0487934
13	Bracket, R. Control Lever	K	K1			1	53171-312-003	0232512
14	Bracket, L. Control Lever	K	K1			1	53172-310-010	0113639
15	Cover, R. Control Lever	K	K1			1	53176-329-000	0293571
16	Cover, L. Control Lever	K	K1			1	53179-329-000	0293589
17	Cap, Control Lever	K	--	1017039		2	53180-286-000	0178335
	Cap, Control Lever	K	--	1017039		2	95010-16000	0300947
	Cap A, Lever	K	--	1017039		2	95010-16001	4225710
18	Lever Comp., L. Handle	K	--	1017039		1	53178-329-000	0424275
		K	--	1017040		1	53178-329-000	0424275
		--	K1			1	53178-329-000	0424275
	Lever Comp., L. Handle	K	--	1017039		1	53178-369-700	0487942
		K	--	1017040		1	53178-369-700	0487942
		--	K1			1	53178-369-700	0487942
	Lever Comp., L. Handle	K	--	1017039		1	53190-329-000	0282236
	Lever Comp., L. Handle	K	--	1017039		1	53190-329-010	0381194
		K	--	1017040		1	53190-329-010	0381194
		--	K1			1	53190-329-010	0381194
19	Bolt, Clutch Cable Adjusting	K	K1			2	53192-312-000	0232520
20	Mirror, R.	K	K1			1	88100-333-004	0297317
	Mirror, R.	K	K1			1	88110-333-611	0469429
21	Mirror, L.	K	K1			1	88120-333-004	0297325
	Mirror, L.	K	K1			1	88120-333-610	0418814
	Mirror, L.	K	K1			1	88120-333-611	0483750
22	Bolt, Handlebar Lever Pivot	K	K1			2	90114-329-000	0293761
23	Nut, Fixing	K	K1			2	90321-315-670	0241273
	Nut, Fixing	K	K1			2	90321-968-000	1550763
24	Washer, 7x12	K	--			2	90501-310-000	0113654
25	Bolt, Hex., 6x25	K	K1			2	93000-06025	0294173
26	Screw, Pan, 5x6	K	--			1	93500-05006-0A	0209841
27	Screw, Pan, 5x25	K	--			3	93500-05025-0A	0145565
		--	K1			1	93500-05025-0A	0145565
28	Screw, Pan, 5x28	--	K1			2	93500-05028-0A	0171819
29	Screw, Pan, 5x32	K	K1			1	93500-05032-0A	0219923

Handlebar • Handle Lever

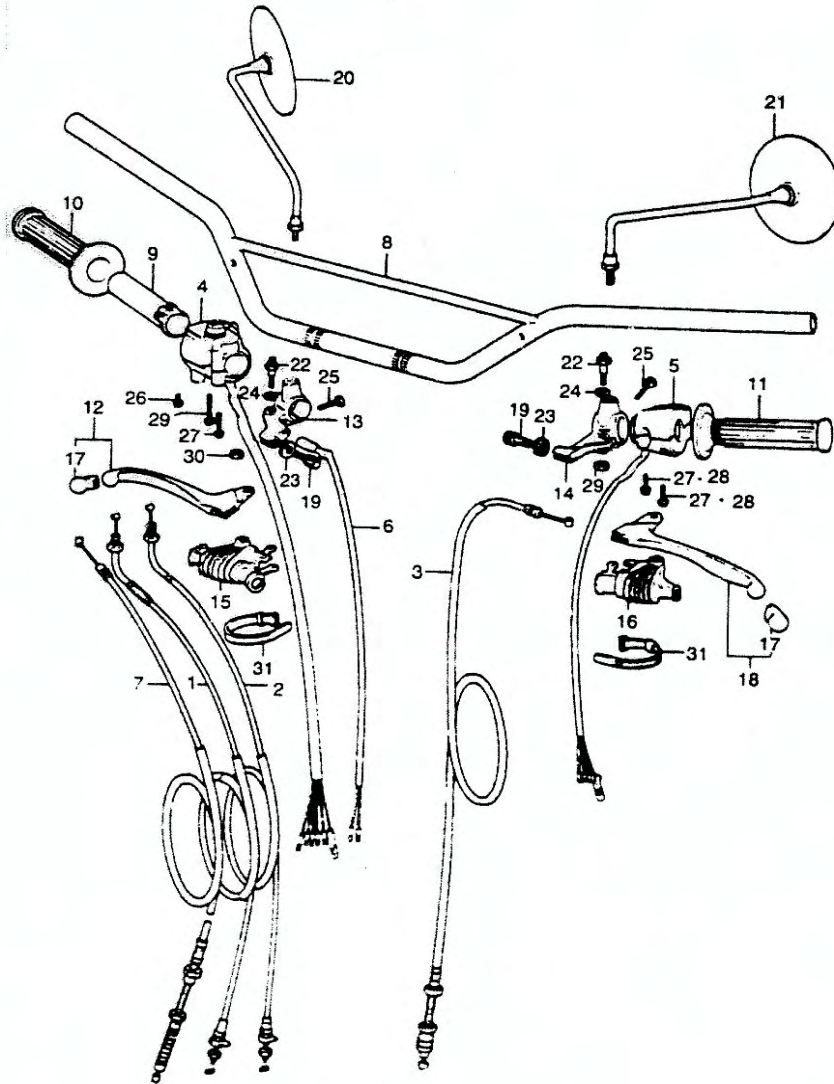

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
30	Nut, Hex., 6MM	K	K1			2	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	K1			2	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	K1			2	94001-06000	0058016
	Nut, Hex., 6MM	K	K1			2	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	K1			2	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	K1			2	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	K1			2	94030-06000	1642693
31	Band B1, Wire	K	K1			2	95014-62100	0270546


Speedometer • Tachometer

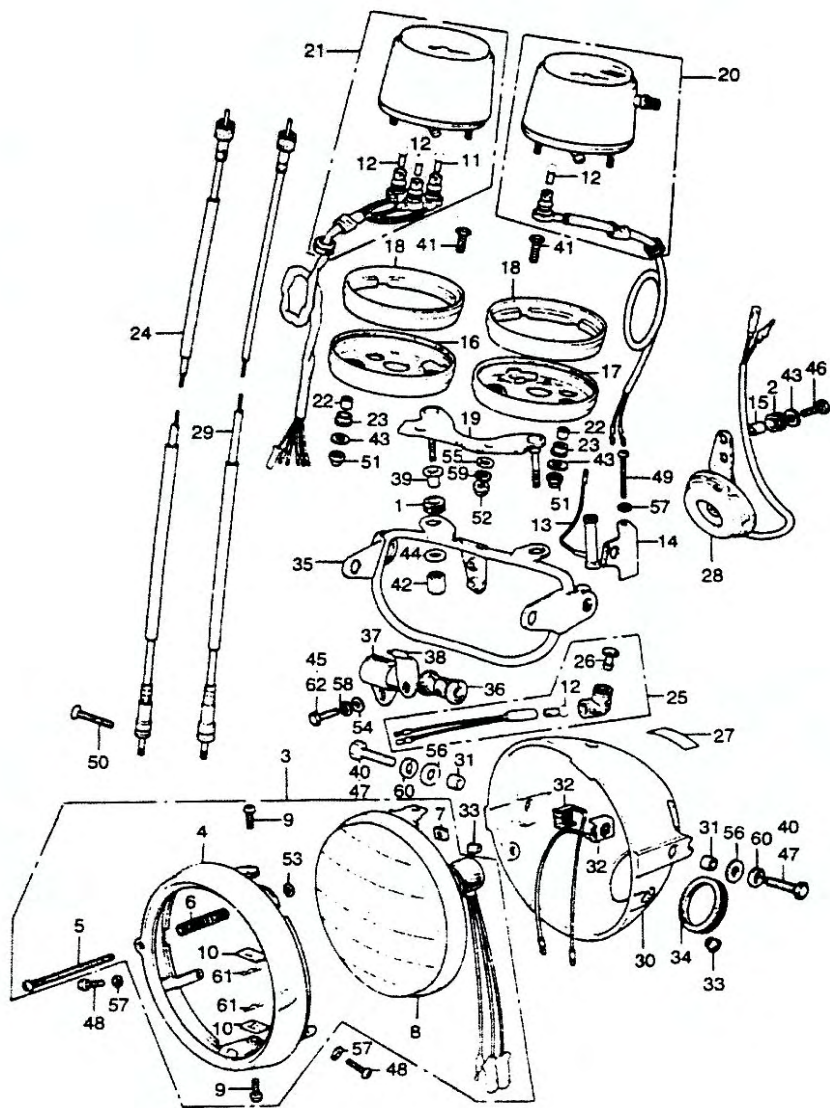

F13356002


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Rubber, Air Cleaner Case Setting	K	K1			2	17245-107-010	0213462
2	Rubber, Regulator Cushion	K	K1			2	31403-300-000	0191825
	Rubber, Regulator Cushion	K	K1			2	31403-323-000	0254300
3	Headlight Assy. (6V 35/25W)	K	K1			1	33100-329-671	0280842
4	Rim, Headlight	K	K1			1	33101-329-671	0280867
5	Screw, Headlight Beam Adjusting	K	K1			1	33103-329-671	0280891
6	Spring, Headlight Beam Adjusting	K	K1			1	33107-283-000	0112151
7	Nut, Headlight Beam Adjusting	K	K1			1	33117-292-003	0146407
8	Headlight Unit	K	K1			1	33120-329-671	0280933
9	Screw, Unit Holder	K	K1			2	33125-329-003	0293225
10	Nut, Unit Holder	K	K1			2	33128-200-033	0249714
11	Bulb, Dash (6V 3W)	K	K1			1	34902-202-000	0029629
12	Bulb, Speedometer (6V 1.7W)	K	K1			4	34908-230-000	0148924
13	Resistor Comp.	K	K1			1	35400-329-671	0281287
14	Stay, Resister	K	K1			1	35403-356-670	0337352
15	Collar, Starter Magnetic Switch Setti	K	K1			2	35851-292-000	0178384
16	Ring, R. Meter Setting	K	K1			1	37111-453-008	0303990
17	Ring, L. Meter Setting	K	K1			1	37112-453-008	0304006
18	Rubber, Meter	K	K1			2	37113-453-008	0304014
19	Plate, Meter Set	K	K1			1	37211-356-000	0337360
20	Speedometer Assy.	K	--			1	37230-356-671	0337378
	Speedometer Assy. (MPH)	--	K1	2000513		1	37230-356-700	0382226
	Speedometer Assy. (MPH)	--	K1	2000514		1	37230-356-701	0413369
21	Tachometer Assy.	K	--			1	37240-356-008	0337386
	Tachometer Assy.	--	K1			1	37240-356-700	0382234
22	Collar, Instrument Setting	K	K1			4	37243-453-000	0304048
23	Rubber, Meter Setting	K	K1			4	37244-307-670	0196212
24	Cable Assy. Tachometer	K	K1			1	37260-356-000	0337394
25	Light Assy., Beam Pilot (Imasen)	K	K1			1	37550-329-005	0281345
	Light Assy., Beam Pilot (Imasen)	K	K1			1	37550-329-015	1069004
26	Lens, Beam Pilot (Imasen)	K	K1			1	37551-329-005	0281352
	Lens, Beam Pilot (Imasen)	K	K1			1	37551-329-015	1069012
27	Label, Beam Pilot Lamp	--	K1			1	37555-370-740	0382622
28	Horn Assy. (Mitsuba)	K	K1			1	38100-329-014	0281410
29	Cable Assy., Speedometer	K	K1			1	44830-MA1-730	1091370
	Cable Assy., Speedometer	K	K1			1	44830-356-000	0337634
	Cable Assy., Speedometer	K	K1			1	44830-426-830	0926840
30	Case, Headlight (Custom Silver)	K	K1			1	61301-336-000NQ	0282145
31	Collar, Headlight Case	K	K1			2	61302-292-000	0151506
32	Washer, Headlight Case	K	K1			2	61303-336-000	0268367
33	Collar, Headlight Case Setting	K	K1			2	61304-292-000	0151514
34	Grommet, Headlight Case	K	K1			1	61304-336-003	0282152
35	Stay Assy., Headlight (Off Black)	K	K1			1	61313-329-020CT	0282160
36	Rubber Headlight Stay	K	K1			1	61316-329-010	0282178
37	Stay A, Headlight Lower	K	K1			1	61317-329-020	0282186
38	Stay B, Headlight Lower	K	K1			1	61318-329-010	0293605
39	Collar C, Mounting	K	K1			2	80109-329-000	0282376
40	Bolt, Flange, 10x25	--	K1			2	90124-369-000	0365825
41	Bolt, Meter Setting	K	K1			2	90159-356-000	0350157
42	Nut, 6x15	K	K1			2	90282-329-000	0293795
43	Washer B, Handle Holder Setting	K	K1			6	90525-030-000	0021287
44	Washer, 6.5x20	K	K1			2	90545-292-000	0144915
45	Bolt, Hex., 6x12	K	--			1	92000-06012	0054197
	Bolt, Hex., 6x12	K	--			1	92101-06012	2738821
	Bolt, Hex., 6x12	K	--			1	92101-06012-0A	3591500
46	Bolt, Hex., 6x20	K	K1			2	92000-06020	0054270
	Bolt, Hex., 6x20	K	K1			2	92101-06020-0A	2528925
47	Bolt, Hex., 10x25	K	--			2	92000-10025-0B	0166595
	Bolt, Hex., 10x25	K	--			2	92101-10025-0B	4544870
48	Screw, Pan, 5x16	K	K1			2	93500-05016-0B	0192914
49	Screw, Pan, 5x55	K	K1			1	93500-05055-0A	0294199
50	Screw, Oval, 6x22	K	K1			1	93700-06022	0056531

Speedometer • Tachometer

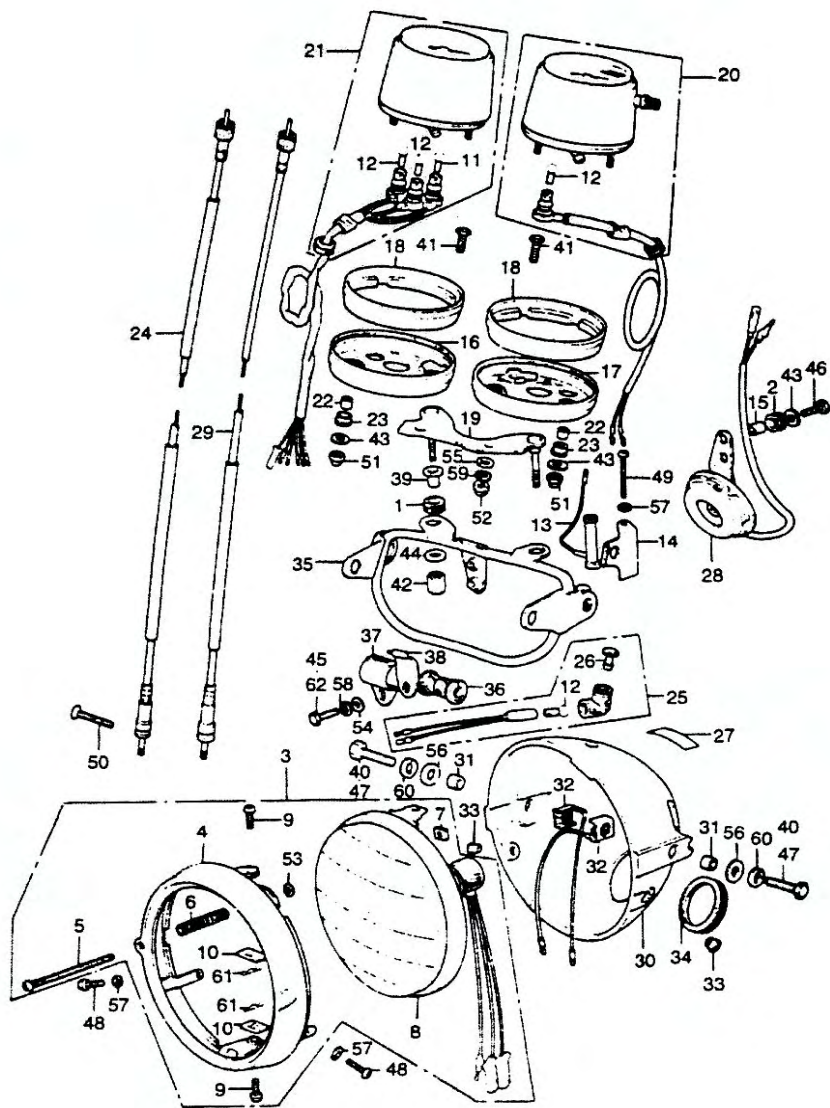

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
51	Nut, Cap, 6MM	K	K1			4	94021-06000	0057885
	Nut, Cap, 6MM	K	K1			4	94021-06000-0S	0203620
	Nut, Cap, 6MM	K	K1			4	94021-06020	0057893
	Nut, Cap, 6MM	K	K1			4	94021-06020-0S	0169516
	Nut, Cap, 6MM	K	K1			4	94022-06020	0203109
52	Nut, Cap, 8MM	K	--		1017069	2	94021-08000-0S	0188789
	Nut, Cap, 8MM	K	--	1017070		2	94021-08070-0S	0394940
		--	K1			2	94021-08070-0S	0394940
53	Washer, Plain, 4MM	K	K1			1	94101-04000	0059048
54	Washer, Plain, 6MM	K	--			1	94101-06000	0059071
	Washer, Plain, 6MM	K	--			1	94101-06080	3136074
	Washer, Plain, 6MM	K	--			1	94101-06800	0345900
55	Washer, Plain, 8MM	K	K1			2	94101-08000	0059097
56	Washer, Plain, 10MM	K	--			2	94101-10000	0059113
57	Washer, Spring, 5MM	K	K1			3	94111-05000	0058966
58	Washer, Spring, 6MM	K	--			1	94111-06000	0058974
59	Washer, Spring, 8MM	K	K1			2	94111-08000	0058982
60	Washer, Spring, 8MM	K	--			2	94111-10000	0059006
61	Pin, Lock, 5MM	K	K1			2	94251-05000	0119305
62	Bolt, Flange, 6x12	--	K1			1	95700-06012-00	0487025
	Bolt, Flange, 6x12	--	K1			1	95701-06012-00	2105799


Front Fork • Steering Stem

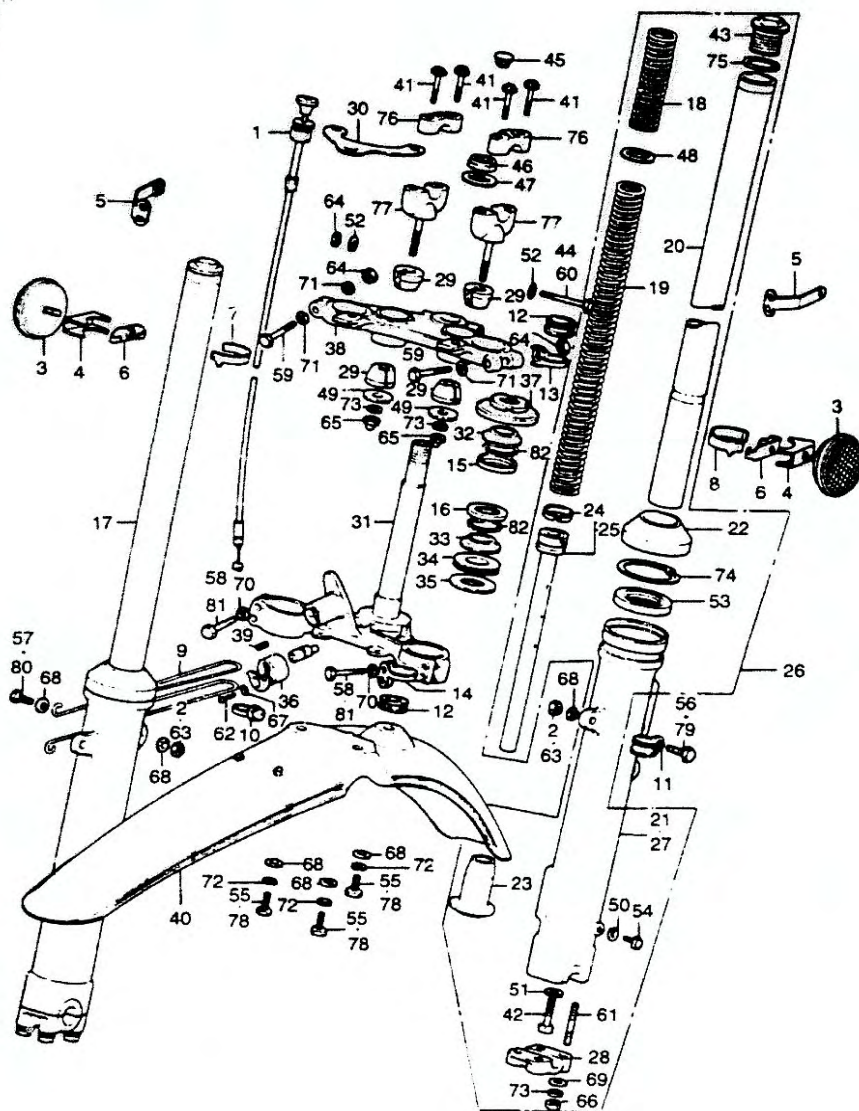

F13356003

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Cable Comp., Choke	K	--			1	17950-356-000	0336743
	Cable Comp., Choke	K	K1			1	17950-356-700	0382150
2	Nut, Flange, 6MM	--	K1			3	18362-720-000	0293084
	Nut, Flange, 6MM	--	K1			3	94050-06000	0471623
3	Reflector, Fr. Reflex	K	K1			2	33741-340-670	0265454
4	Stay, Fr. Reflector	K	--			2	33750-329-000	0337311
5	Stay, Fr Reflex Reflector	--	K1			2	33750-362-000	0333898
6	Plate, Holder	K	--			2	33751-329-000	0337329
7	Holder, R. Fr. Reflector	K	--			1	33752-329-010	0337337
8	Holder, L. Fr. Reflector	K	--			1	33753-329-010	0337345
9	Clamp, Speedometer	K	K1			1	44832-329-000	0281782
10	Grommet, Wire	K	K1			1	45451-283-000	0133272
11	Clip, Fr. Brake Cable	K	K1			1	45465-329-010	0281840
12	Inner, Cable Guide	K	K1			2	45466-329-000	0293324
	Inner, Cable Guide	K	K1			2	45466-430-000	0679977
13	Clip A, Fr. Brake Cable	K	K1			1	45467-329-000	0293332
14	Clip B, Fr. Brake Cable	K	K1			1	45468-329-000	0293340
15	Race, Steering Top Ball	K	K1			1	50301-200-315	0028522
	Race, Steering Top Ball	K	K1			1	50301-268-000	0101121
	Race, Steering Top Ball	K	K1			1	50301-268-010	1977669
	Race, Steering Upper Ball	K	K1			1	50301-268-305	0043232
	Race, Steering Top Ball	K	K1			1	50302-200-000	0097733
	Race, Steering Lower Ball	K	K1			1	50302-200-305	0028530
16	Race, Steering Top Ball	K	K1			1	50301-268-000	0101121
	Race, Steering Top Ball	K	K1			1	50301-268-010	1977669
	Race, Steering Upper Ball	K	K1			1	50301-268-305	0043232
17	Fork Assy., R. Fr.	K	--	1020821		1	51400-356-000	0337808
	Fork Assy., R. Fr.	K	--			1	51400-356-010	0451302
18	Spring A, Fr. Fork	K	K1			2	51401-356-000	0337816
19	Spring B, Fr. Fork	K	K1			2	51402-356-000	0337824
20	Pipe, Comp., Fr. Fork	K	K1			2	51420-356-000	0337832
21	Case, R. Fr. Fork Lower	K	K1			1	51421-340-300	0265496
22	Dust Seal, Fr. Fork	K	K1			2	51425-340-000	0265504
	Dust Seal, Fr. Fork	K	K1			2	91254-435-003	0960278
23	Piece, Oil Lock	K	K1			2	51432-357-000	0321455
24	Ring, Piston	K	K1			2	51437-329-010	0293456
25	Pipe Comp., Lower	K	K1			2	51440-356-000	0337840
26	Fork Assy., L. Fr.	K	--	1020821		1	51500-356-000	0337857
	Fork Assy., L. Fr.	K	--			1	51500-356-010	0647321
27	Case, L. Fr. Fork Lower	K	K1			1	51521-356-300	0337865
28	Holder, Fr. Axle	K	K1			2	51634-340-000	0265538
29	Rubber, Handlebar Cushion	K	K1			4	53133-303-000	0197038
30	Plate, Holder	K	K1			1	53137-329-000	0293530
31	Stem Comp., Steering	K	K1			1	53200-329-020B	0282244
32	Race, Steering Upper Cone	K	K1			1	53211-200-305	0030148
33	Race, Steering Lower Cone	K	K1			1	53212-200-305	0030163
34	Dust Seal, Steering Head	K	K1			1	53214-200-000	0030197
35	Washer, Steering Head Top	K	K1			1	53215-200-000	0030205
36	Cover Comp. Handlebar Lock Case	K	K1			1	53215-317-000	0238394
37	Thread Comp., Steering Head Top	K	K1			1	53220-303-000	0198135
38	Bridge, Fork Top	K	K1			1	53230-340-000	0265264
	Bridge Set, Fork Top	K	K1			1	53230-340-305	0443713
39	Spring, Handlebar Lock	K	K1			1	53631-268-020	0045971
40	Fender Comp., Fr. (Stripe Blue)	K	--			1	61110-356-000SU	0338079
	Fender, Fr. (Excel Black)	--	K1			1	61100-329-700UN	0382358
41	Bolt, Flange, 8x36	K	K1			4	90111-362-000	0338293
42	Bolt, Socket, 8MM	K	K1			2	90116-283-010	0254169
	Bolt, Socket, 8MM (Showa)	K	K1			2	90116-383-721	0750919
43	Bolt, Fr. Fork	K	K1			2	90123-300-000	0194993
44	Bolt, Flange, 8x72	--	K1			1	90124-458-000	0367557
45	Cap, Stem Nut	K	K1			1	90303-329-670	0293803
46	Nut, Steering Stem	K	K1			1	90304-329-000	0293811
47	Washer, Steering Stem	K	K1			1	90503-222-000	0034249


Front Fork • Steering Stem

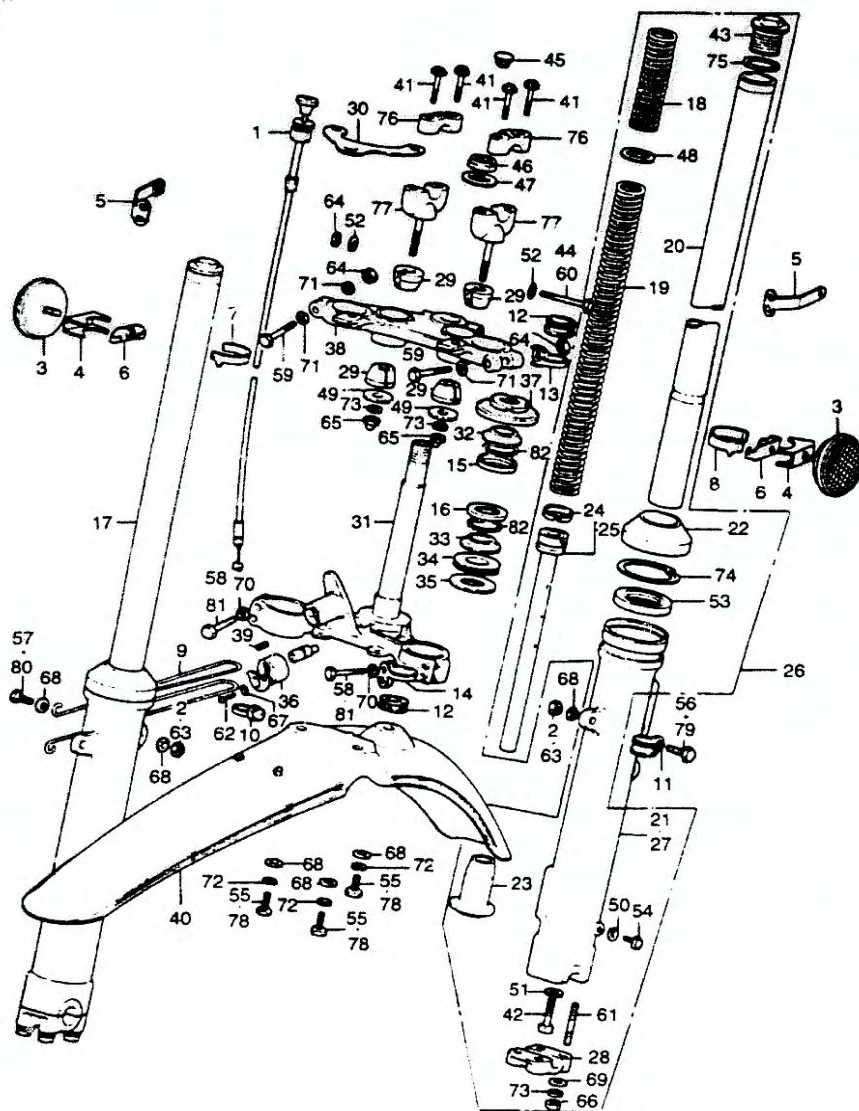

F13356003


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
48	Washer, 16MM	K	K1			2	90504-356-000	0356196
49	Washer A, Handle Holder Setting	K	K1			2	90524-030-000	0021279
50	Gasket, Fr. Fork Drain Valve	K	K1			2	90543-273-000	0052209
51	Washer, Special, 8MM	K	K1			2	90544-283-000	0259457
52	Washer, Plain, 8MM	K	K1		1020659	5	90518-921-000	0265272
		K	--	1020660		2	90518-921-000	0265270
	Washer Special	K	K1		1020659	5	90518-931-000	0274316
		K	--	1020660		2	90518-931-000	0274316
	Washer Special	K	K1		1020659	5	90555-283-000	0078865
		K	--	1020660		2	90555-283-000	0078865
53	Oil Seal, 35x48x11	K	K1		1020821	2	91255-KBH-003	4154134
		K	K1			2	91255-KBH-003	4154134
	Oil Seal, 35x48x11	K	K1		1020821	2	91255-MA6-013	3523867
		K	K1			2	91255-MA6-013	3523867
	Oil Seal, 35x48x11	K	K1		1020821	2	91255-300-023	0240846
		K	K1		1020821	2	91255-300-025	0240853
		K	K1			2	91255-300-025	0240853
	Oil Seal, 35x48x11	K	K1		1020821	2	91255-300-033	0391359
		K	K1			2	91255-300-033	0391359
	Oil Seal, 35x48x11	K	K1		1020821	2	91255-323-013	0254227
		K	K1			2	91255-323-013	0254227
	Oil Seal, 35x48x11	K	K1		1020821	2	91255-434-003	0711515
		K	K1			2	91255-434-003	0711515
	Oil Seal, 35x48x11	K	K1		1020821	2	91255-434-013	0918425
		K	K1			2	91255-434-013	0918425
54	Bolt, Hex., 6x10	K	K1			2	92000-06010	0054171
	Bolt, Hex., 6x10	K	K1			2	92101-06010-0A	3307048
55	Bolt, Hex., 6x14	K	--			3	92000-06014	0054213
	Bolt, Hex., 6x14	K	--			3	92101-06014-0A	2552198
56	Bolt, Hex., 6x16	K	--			1	92000-06016	0054239
	Bolt, Hex., 6x16	K	--			1	92000-06016-0A	0313197
	Bolt, Hex., 6x16	K	--			1	92000-06016-1A	0915124
	Bolt, Hex., 6x16	K	--			1	92100-06016-0A	1685726
	Bolt, Hex., 6x16	K	--			1	92101-06016-0A	2479590
	Bolt, Hex., 6x16	K	--			1	92200-06016-0A	1842400
57	Bolt, Hex., 6x20	K	--			2	92000-06020	0054270
	Bolt, Hex., 6x20	K	--			2	92101-06020-0A	2528925
58	Bolt, Hex., 6x32	K	--			4	92000-08032-0A	0112276
	Bolt, Hex., 6x32	K	--			4	92000-08032-0B	0145474
	Bolt, Hex., 6x32	K	--			4	92101-08032-0B	4281986
59	Bolt, Hex., 6x56	K	K1			2	92000-08056-0B	0192567
	Bolt, Hex., 6x56	K	K1			2	92101-08056-0B	4296695
60	Bolt, Hex., 6x74	K	--			1	92000-08074-0B	0145441
61	Bolt, Stud, 8x50	K	K1			8	92700-08050-3B	0416966
	Bolt, Stud, 8x50	K	K1			8	92700-08050-30	0256883
	Bolt, Stud, 8x50	K	K1			8	92900-08028-3B	2892685
62	Screw, Pan, 3x8	K	K1			1	93500-03008-0A	0198176
63	Nut, Hex., 6MM	K	--			3	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	--			3	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	--			3	94001-06000	0058016
	Nut, Hex., 6MM	K	--			3	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	--			3	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	--			3	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	--			3	94030-06000	1642693
64	Nut, Hex., 8MM	K	K1			3	94001-08020	0058040
	Nut, Hex., 8MM	K	K1			3	94001-08020-0S	0145573
65	Nut, Cap, 8MM	K	K1			2	94021-08000-0S	0188789
66	Nut, Hex., 8MM	K	K1			8	94030-08000	0114686
67	Washer, Plain, 3MM	K	K1			1	94101-03000	0059030
68	Washer, Plain, 6MM	K	--			8	94101-06000	0059071
	Washer, Plain, 6MM	K	--			8	94101-06080	3136074
	Washer, Plain, 6MM	K	--			8	94101-06800	0345900
69	Washer, Plain, 8MM	K	K1			8	94101-08000	0059097

Front Fork • Steering Stem

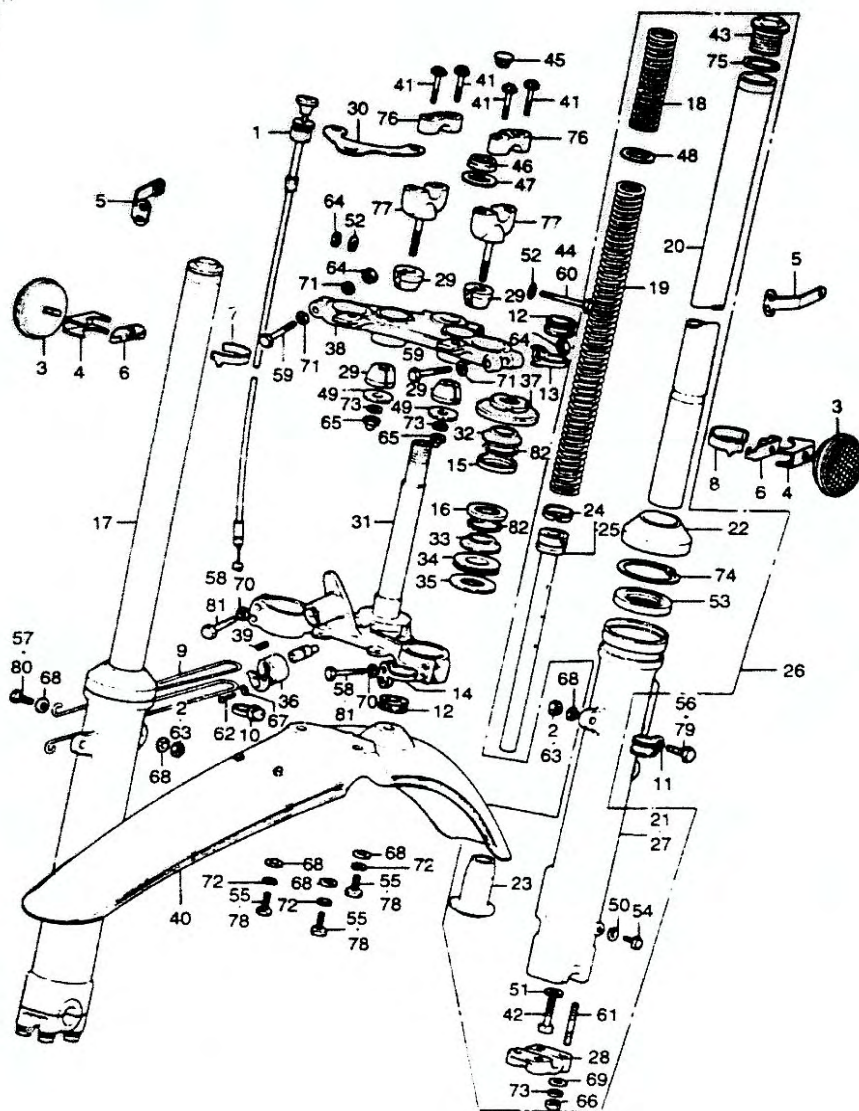

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
70	Washer, Plain, 8MM	K	--			4	94102-08000	0199596
71	Washer, Flat, 8MM	K	--	1020660		3	94102-08200	0268276
72	Washer, Spring, 6MM	K	--			3	94111-06000	0058974
73	Washer, Spring, 8MM	K	K1			10	94111-08000	0058982
74	Circlip, Internal, 48MM	K	K1			2	94521-48000	0255349
75	O-Ring, 23x2.8	K	K1			2	94608-50000	0255588
76	Holder B2, Handlebar Upper	K	K1			2	95014-22200	0265249
77	Holder C2, Handlebar	K	K1			2	95014-33200	0265256
78	Bolt, Flange, 6x14	--	K1			3	95700-06014-00	0671198
	Bolt, Flange, 6x14	--	K1			3	95701-06014-00	2410884
79	Bolt, Flange, 6x16	--	K1			1	95700-06016-00	0496653
	Bolt, Flange, 6x16	--	K1			1	95701-06016-00	2410892
80	Bolt, Flange, 6x20	--	K1			2	95700-06020-00	0488684
	Bolt, Flange, 6x20	--	K1			2	95701-06020-00	2105815
81	Bolt, Flange, 6x32	--	K1			4	95700-08032-00	0637173
	Bolt, Flange, 6x32	--	K1			4	95701-08032-00	2751725
82	Ball, Steel, #8 (1/4)	K	K1			36	96211-08000	0079905


Wheel

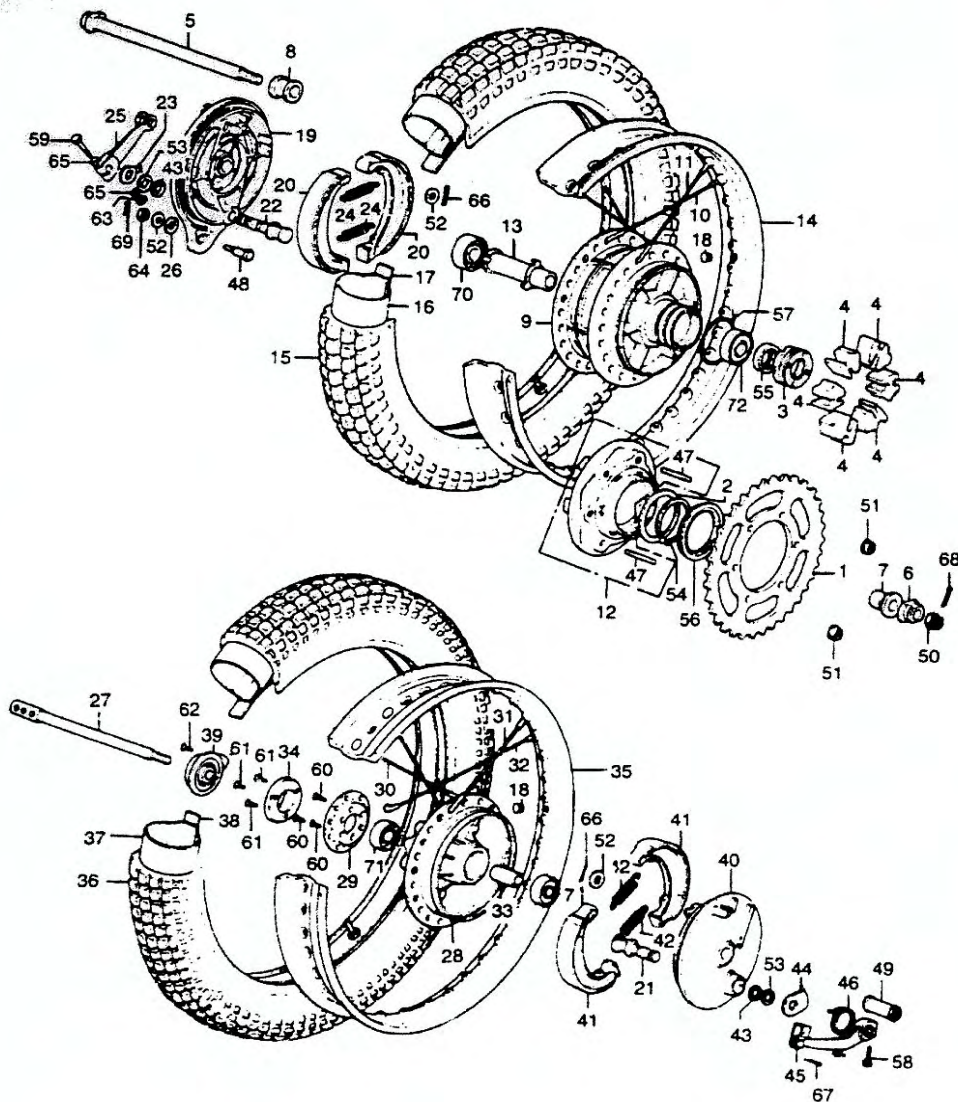

F13356004

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Sprocket, Final Driven (45T)	K	K1			1	41201-356-000	0337428
2	Washer, 66MM	K	K1			1	41202-329-010	0281493
3	Retainer, Rr. Wheel Bearing	K	K1			1	41231-356-000	0337436
4	Damper, Rr. Wheel	K	K1			6	41242-356-000	0337444
5	Axle, Rr. Wheel	K	K1			1	42301-356-000	0337451
6	Collar, Rr. Axle	K	K1			1	42306-356-000	0356121
7	Collar, Rr. Wheel Side	K	K1			1	42311-356-000	0337469
8	Collar, Rr. Brake Panel Side	K	K1			1	42313-356-000	0337477
9	Hub Comp., Rr. Wheel	K	K1			1	42601-356-000	0337485
10	Spoke A, Rr., 8x160.5	K	K1			18	42606-356-000	0337493
11	Spoke B, Rr., 8x159.5	K	K1			18	42607-356-000	0337501
12	Flange Assy., Driven	K	K1			1	42615-356-000	0337519
13	Collar, Rr. Axle Distance	K	K1			1	42620-356-000	0337527
14	Rim, Rr. Wheel (18)	K	K1			1	42701-357-000	0321075
	Rim, Rr. Wheel (Daido)	K	K1			1	42701-381-003	0411231
	Rim, Rr. Wheel (Daido)	K	K1			1	42701-385-741	0703298
15	Tire, Rr. (4.00-18) (BS)	K	--	1022687		1	42711-329-671	0277707
	Tire, Rr. (4.00-18) (Nitto)	--	K1	2012097		1	42711-329-671	0277707
	Tire, Rr. (4.00-18) (Nitto)	K	--			1	42711-329-672	0337535
	Tire, Rr. (4.00-18) (Nitto)	--	K1	2015245		1	42711-329-672	0337535
	Tire, Rr. (4.00-18) (BS)	K	K1	2012098		1	42711-329-672	0337535
	Tire, Rr. (4.00-18) (BS)	K	K1			1	42711-356-671	0432971
16	Tube, Tire (4.00-18) (BS)	K	K1			1	08400-34001	0722611
	Tube, Tire (Inoue) (100/100-18)	K	K1			1	42712-KT1-671	2305407
	Tube, Tire (4.00-18) (BS)	K	--	1022688		1	42712-300-000	0191296
	Tube, Tire (4.00-18) (BS)	--	K1	2012098		1	42712-300-000	0191296
	Tube, Tire (4.00-18) (BS)	K	--	1022688		1	42712-300-003	0434258
	Tube, Tire (4.00-18) (BS)	--	K1	2012098		1	42712-300-003	0434258
	Tube, Tire (4.00-18) (BS)	K	--	1022688		1	42712-310-004	0113233
	Tube, Tire (4.00-18) (BS)	--	K1	2012098		1	42712-310-004	0113233
	Tube, Tire (4.00-18) (BS)	K	K1			1	42712-312-003	0229351
	Tube, Tire (4.00-18) (Nitto)	K	K1			1	42712-340-006	0265884
	Tube, Tire (3.75-18) (BS)	K	K1			1	42712-374-003	0362590
	Tube, Tire (4.10-18) (BS)	K	K1			1	42712-400-003	1561349
	Tube, Tire (4.00-18) (BS)	K	K1			1	42712-425-003	0824656
	Tube, Tire (4.00-18) (BS)	K	K1			1	42712-435-003	0788877
	Tube, Tire (3.25/3.50-19) (Dunlop)	K	K1			1	44712-300-004	1006477
17	Flap, Tire (2.15-18) (BS)	K	--	1022688		1	42713-300-003	0791194
	Flap, Tire (2.15-18) (BS)	--	K1	2012098		1	42713-300-003	0791194
	Flap, Tire (18) (BS)	K	K1			1	42713-268-003	0049650
	Flap, Tire (18) (Nitto)	K	K1			1	42713-340-006	0265892
18	Cap, Rim Hole	K	K1			3	42717-329-000	0293308
19	Panel Comp., Rr. Brake	K	--	1016909		1	43100-356-000	0337543
	Panel Comp., Rr. Brake	--	K1			1	43100-329-770	0375345
20	Shoe Comp., Brake	K	--	1021819		2	43120-329-000	0281634
	Shoe Comp., Fr. Brake	K	--	1021819		2	43120-329-670	0381244
	Shoe Comp., Fr. Brake	K	K1	1021820		2	43120-329-670	0381244
21	Cam, Rr. Brake	K	--	1021819		1	43141-286-010	0154005
	Cam, Fr. Brake	K	K1	1021820		1	45141-329-770	0375394
22	Cam, Rr. Brake	K	--	1021819		1	43141-312-000	0233296
	Cam, Rr. Brake	K	K1	1021820		1	43141-329-770	0375352
23	Indicator, Rr. Brake	K	K1	1021820		1	43145-329-770	0375360
24	Spring, Rr. Brake Shoe	K	K1			2	43151-329-000	0281642
25	Arm, Rr. Brake	K	--	1021819		1	43410-312-000	0233304
	Arm, Rr. Brake	K	--	1021819		1	43410-329-770	0375378
	Arm, Rr. Brake	K	K1	1021820		1	43410-329-770	0375378
26	Rubber, Stopper Arm Cushion	K	K1			1	43434-286-000	0172726
27	Axle, Fr. Wheel	K	K1			1	44301-329-000	0281683
28	Hub, Fr. Wheel	K	K1			1	44601-356-000	0337568
	Hub, Fr. Wheel	K	K1			1	44601-356-670	0356139
29	Flange, Fr. Spoke	K	K1			1	44603-329-000	0281709
30	Spoke A, Fr. 8x193.5	K	K1			9	44606-356-000	0337576
	Spoke Assy., Fr.	K	K1			9	44606-358-305	0349563


Wheel

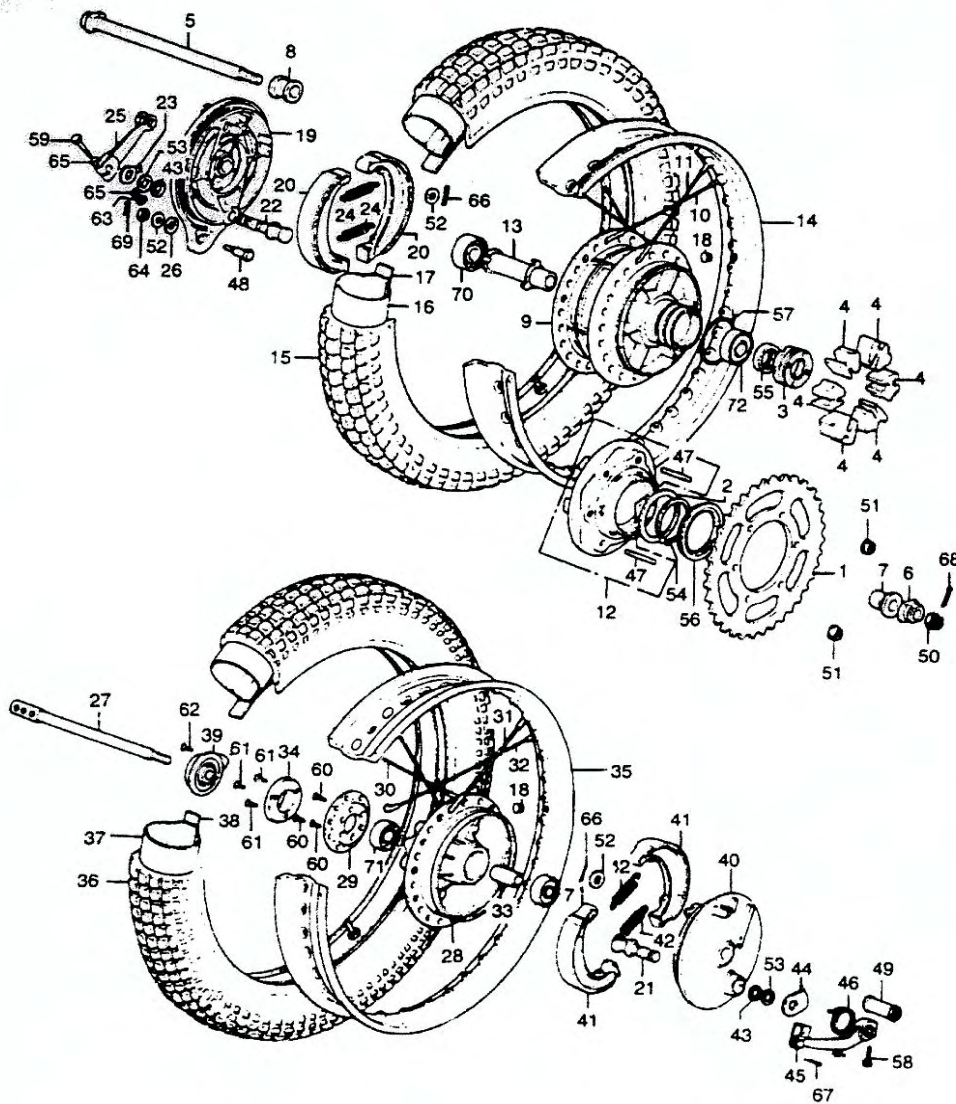

F13356004


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
31	Spoke B, Fr., 8x193	K	K1			9	44607-356-000	0337584
	Spoke B Assy., Fr.	K	K1			9	44607-358-305	0349571
32	Spoke C, Fr. 8x236	K	K1			18	44608-356-000	0337592
33	Collar, Fr. Axle Distance	K	K1			1	44620-286-000	0154088
34	Retainer, Gear Box	K	K1			1	44641-356-000	0337600
35	Rim, Fr. Wheel (21)	K	K1			1	44701-356-000	0337618
	Rim, Fr. Wheel (Daido)	K	K1			1	44701-385-405	3177862
	Rim, Fr. Wheel	K	K1			1	44701-385-741	0703280
36	Tire, Fr. (3.00-21) (Nitto)	K	--		1022687	1	44711-356-006	0337626
		--	K1		2015245	1	44711-356-006	0337626
37	Tube, Tire (2.75/3.50-21)	K	K1			1	0Y400-33100	2579605
	Tube, 275/325-21	K	K1			1	08400-33100	1204833
	Tube, (275/300x21)	K	K1			1	08400-34010	0646893
	Tube, Tire	K	K1			1	44712-KB1-911	1323906
	Tube, (275/300-2)	K	K1			1	44712-MC4-005	1275502
	Tube, (275/300x21TR6)	K	K1			1	44712-329-003	0281733
	Tube, 275/300x21	K	K1			1	44712-331-671	0249201
	Tube, Fr. Wheel (BS) (2.75/3.00-21)	K	K1			1	44712-340-003	0265405
	Tube, 275/300x21	K	K1			1	44712-340-006	0269332
	Tube, Tire (Dunlop) (2.75/3.00-21)	K	K1			1	44712-400-004	0439364
	Tube, 275/300-21	K	K1			1	44712-437-971	2060689
	Tube, Tire (BS) (2.75/3.00-21)	K	K1			1	44712-446-003	0766964
	Tube, Tire (Inoue) (2.75/3.00-21)	K	K1			1	44712-446-631	1006485
38	Flap, Tire (BS) (1.4x21)	K	--		1022687	1	44713-329-003	0281741
		--	K1		2012097	1	44713-329-003	0281741
	Flap, Tire (21) (Nitto)	K	--		1022687	1	44713-331-671	0249219
		--	K1		2015245	1	44713-331-671	0249219
	Flap, Tire (1.60x21) (BS)	K	--		1022688	1	44713-340-003	0265413
		--	K1		2012098	1	44713-340-003	0265413
		--	K1		2015246	1	44713-340-003	0265413
	Flap, Tire (1.60x21) (Nitto)	K	--		1022688	1	44713-340-006	0265421
		--	K1		2015246	1	44713-340-006	0265421
39	Box, Speedometer Gear	K	K1			1	44800-329-000	0281766
40	Panel Comp., Fr. Brake	K	--		1021820	1	45100-329-770	0375386
		--	K1			1	45100-329-770	0375386
	Panel Comp., Fr. Brake	K	--		1021819	1	45100-356-000	0337642
41	Shoe Comp., Fr. Brake	K	K1		1021819	2	45120-329-000	0281808
	Shoe Comp., Fr. Brake	K	--		1021819	2	45120-329-670	0381251
		K	K1		1021820	2	45120-329-670	0381251
42	Spring, Fr. Brake Shoe	K	K1			2	45133-329-000	0293316
43	Dust Seal, Brake Cam	K	K1			2	45134-250-000	0048397
44	Indicator, Fr. Brake	K	--		1021820	1	45145-329-770	0375402
45	Arm Comp., Fr. Brake	K	--		1021819	1	45410-329-010	0281816
	Arm Comp., Fr. Brake	K	K1			1	45410-329-770	0375410
46	Spring, Fr. Brake Arm Return	K	K1			1	45435-329-000	0281824
47	Bolt, Stud, 8x45	K	K1			6	90125-329-010	0293787
48	Bolt, Rr. Brake Stopper	K	K1			1	90127-001-010	0012112
	Bolt, Rr. Brake Stopper	K	K1			1	90127-400-000	0439828
49	Nut, Fr. Wheel Axle	K	K1			1	90305-329-000	0293829
50	Nut, Fr. Wheel Axle	K	--		1016400	1	90306-268-000	0051821
	Nut, Fr. Wheel Axle	K	K1		1016401	1	60306-329-770	0377960
51	Nut, Hex., 8MM	K	K1			6	90309-357-000	0322164
52	Washer A, Handle Holder Setting	K	K1			3	90524-030-000	0021279
53	Washer, 14MM	K	K1			2	90549-121-000	0293944
54	Circlip, External, 65MM	K	K1			1	90665-329-000	0293951
55	Dust Seal, 30x45x9.5	K	K1			1	91253-286-013	0155127
	Dust Seal, 30x45x9.5	K	K1			1	91253-356-005	0338459
56	Dust Seal, 60x85x7.5	K	K1			1	91256-356-005	0338467
57	O-Ring, 62x2	K	K1			1	91262-329-010	0293985
58	Bolt, Hex., 6x25	K	K1			1	92000-06025	0054320
	Bolt, Hex., 6x25	K	K1			1	92101-06025-0A	2206563
59	Bolt, Hex., 6x36	K	K1			1	92000-06036	0313205
	Bolt, Hex., 6x35	K	K1			1	92200-06035	0700773

Wheel

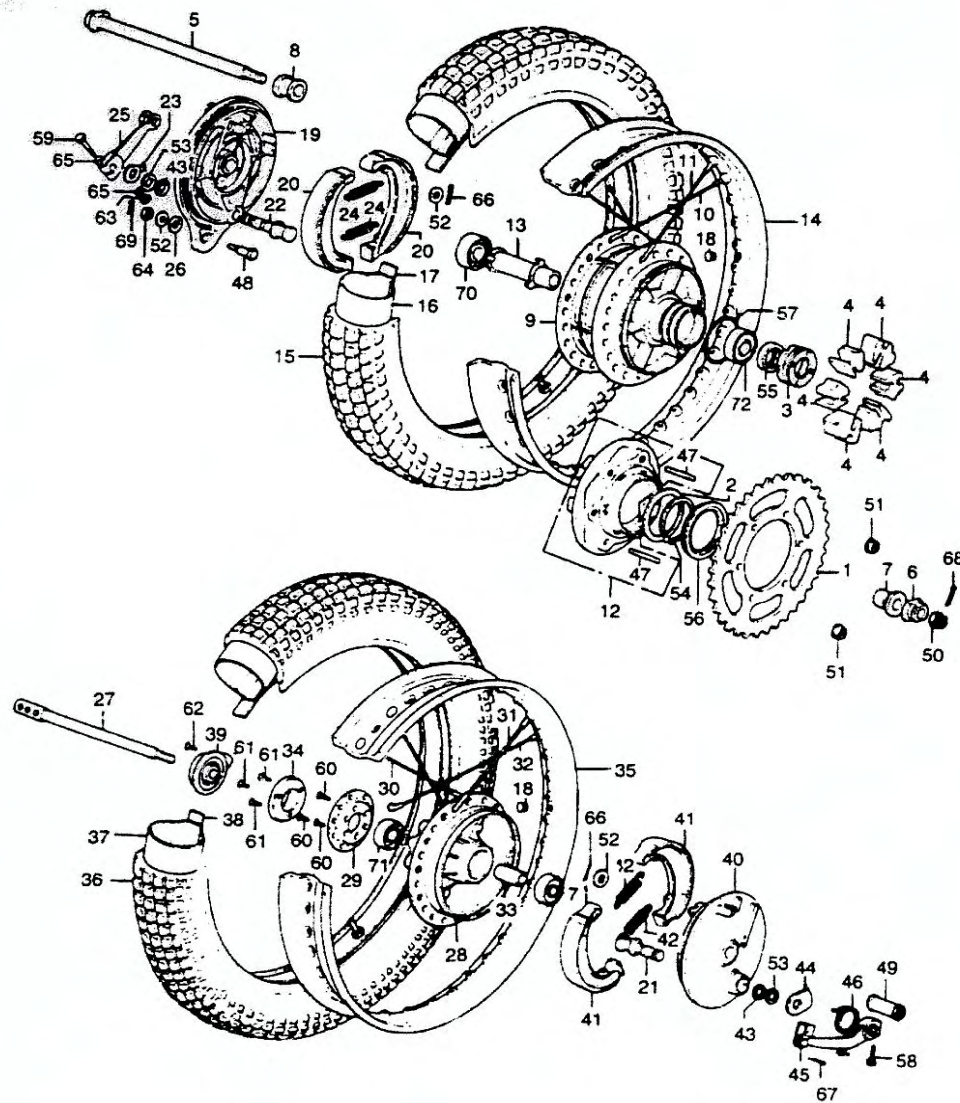

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
60	Screw, Flat, 5x16	K	K1			3	93600-05016-0A	0294215
61	Screw, Flat, 6x16	K	K1			3	93600-06016	0055798
	Screw, Flat, 6x16	K	K1			3	93600-06016-0A	0805358
62	Screw, Oval, 5x16	K	K1			1	93700-05016-0A	0166975
63	Nut, Hex., 6MM	K	K1			1	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	K1			1	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	K1			1	94001-06000	0058016
	Nut, Hex., 6MM	K	K1			1	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	K1			1	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	K1			1	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	K1			1	94030-06000	1642693
64	Nut, Hex., 8MM	K	K1			1	94001-08000-0S	0167338
65	Washer, Plain, 6MM	K	K1			2	94101-06000	0059071
	Washer, Plain, 6MM	K	K1			2	94101-06080	3136074
	Washer, Plain, 6MM	K	K1			2	94101-06800	0345900
66	Pin, Cotter 2.0x15	K	K1			2	94201-20150	0058347
67	Pin, Cotter 2.0x18	K	K1			1	94201-20180	0219279
	Pin, Cotter 2.0x20	K	K1			1	94201-20200	0058354
	Pin, Cotter 2.0x22	K	K1			1	94201-20220	0058362
	Pin, Cotter 2.0x25	K	K1			1	94201-20250	0058370
	Pin, Cotter 2.0x32	K	K1			1	94201-20320	0145607
	Pin, Cotter 2.0x35	K	K1			1	94201-20350	0058388
	Pin, Cotter 2.0x22	K	K1			1	94201-29220	1484047
68	Pin, Cotter 4.0x3.0	K	K1			1	94201-40300	0058461
69	Pin, Lock, 8MM	K	K1			1	94251-08000	0115527
70	Bearing, Radial Ball, 6204U	K	K1			1	96140-62040-10	0294371
71	Bearing, Radial Ball, 6302U	K	K1			2	96140-63020-10	0239889
	Bearing, Radial Ball, 6302UU	K	K1			2	96150-63020-10	1213347
72	Bearing, Radial Ball, 6304U	K	K1			1	96140-63040-10	0257790

Fuel Tank • Seat

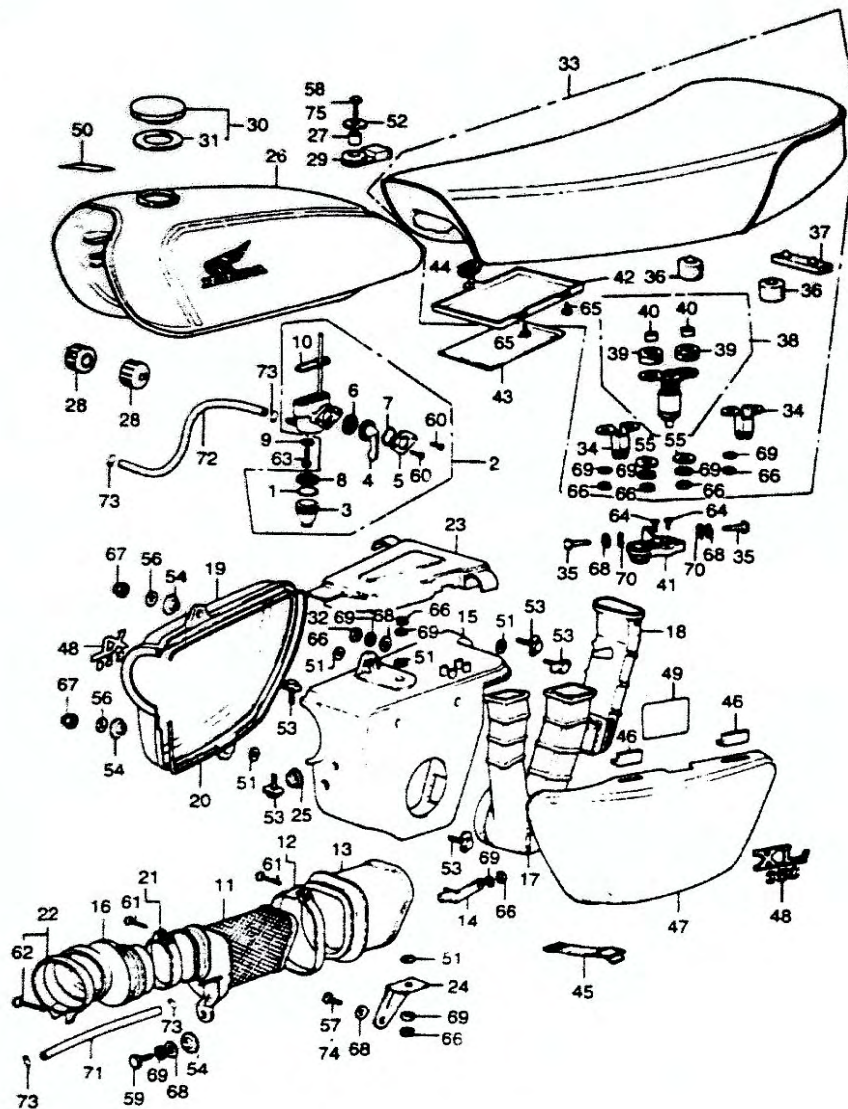


"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F13356005

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Gasket, Set, Valve	K	K1			1	16080-898-631	1176726
	Gasket, Fuel Strainer Cup	K	K1			1	16173-001-004	0005652
	Gasket, Fuel Strainer Cup	K	K1			1	16955-283-000	0076752
	Gasket, Cup	K	K1			1	16958-011-000	0006197
	Gasket, Cup	K	K1			1	16958-028-000	0014803
2	Valve Assy., Fuel	K	--			1	16950-356-005	0336560
	Valve Assy., Fuel	--	K1			1	16950-356-700	0389668
3	Cup, Fuel Strainer	K	K1			1	16952-028-000	0014787
4	Lever, Valve	K	--			1	16953-028-004	0179671
5	Plate, Valve Lever Setting	K	--			1	16954-028-000	0199976
6	Gasket, Valve Lever	K	K1			1	16955-028-004	0179689
7	Spring, Valve Lever	K	K1			1	16956-011-000	0006163
	Spring, Valve Lever	K	K1			1	16956-011-010	0006171
	Spring, Valve Lever	K	K1			1	16956-028-004	0179663
	Spring, Valve Lever	K	K1			1	16964-720-005	1066786
8	Screen, Fuel Strainer	K	K1			1	16957-028-000	0014795
9	Gasket, Valve Body	K	--		1016400	1	16993-011-000	0006262
10	Gasket, Valve Body	K	K1			1	16997-273-006	0085712
11	Body, Air Cleaner	K	K1			1	17211-356-000	0336578
12	Band, Air Cleaner Element	K	K1			1	17212-356-000	0336586
13	Element, Air Cleaner	K	K1			1	17213-356-000	0336594
14	Stay, Air Cleaner Body	K	K1			1	17214-356-000	0336602
15	Case, Air Cleaner Inner	K	K1			1	17221-356-000	0336610
16	Tube, Air Cleaner Connecting	K	K1			1	17222-356-000	0336628
17	Duct A, Air	K	K1			1	17224-356-000	0336636
18	Duct B, Air	K	K1			1	17225-356-000	0336644
19	Case, Air Cleaner Outer (Phantom E	K	--			1	17231-356-000NR	0356071
	Case, Air Cleaner Outer (Excel Blac	--	K1			1	17231-356-000UN	0382135
20	Gasket, Air Cleaner	K	K1			1	17233-356-000	0336651
21	Band, Connecting Tube	K	K1			1	17254-356-000	0336669
22	Band, Insulator	K	K1			1	16223-KS5-000	3355138
22	Band A, Air Cleaner Connecting Tub	K	K1			1	17255-329-000	0293035
23	Cover, Air Cleaner Case	K	K1			1	17257-356-000	0336685
24	Stay C, Air Cleaner Case	K	K1			1	17260-356-000	0356089
25	Grommet, Air Cleaner Case	K	K1			1	17261-356-000	0336693
26	Tank Comp., Fuel (Stripe Blue)	K	--			1	17500-356-000SU	0336701
	Tank Comp., Fuel (Excel Black)	--	K1			1	17500-356-305UN	0382143
27	Collar, Top Bridge	K	--		1016649	1	53236-086-000	0282269
	Collar, Fuel Tank	K	K1			1	17503-329-770	0375675
		K	--		1016649	1	17503-329-770	0375675
28	Rubber, Fuel Tank Fr.	K	K1			2	17611-KE8-000	4009635
	Rubber, Fuel Tank Fr.	K	K1			2	17611-286-000	0153452
29	Rubber, Fuel Tank Fr.	K	K1			1	17613-329-020	0336719
30	Cap Comp., Fuel Filler	K	K1			1	17620-317-000	0204073
	Cap Comp., Fuel Filler	K	K1			1	17620-329-000	0293043
	Cap Comp., Fuel Filler	K	K1			1	17620-329-010	0803288
	Cap Comp., Fuel Filler	K	K1			1	17620-402-000	1048776
	Cap Comp., Fuel Filler	K	K1			1	17620-402-010	2892610
31	Gasket, Fuel Filler Cap	K	K1			1	17631-329-000	0293050
	Gasket, Fuel Filler Cap	K	K1			1	17631-329-003	2820587
32	Nut, Flange, 6MM	--	K1			1	18362-720-000	0293084
	Nut, Flange, 6MM	--	K1			1	94050-06000	0471623
33	Seat Assy.	K	K1			1	77100-356-670	0338087
34	Hinge, Seat	K	K1			2	77201-356-000	0338095
35	Pin, Seat Hinge	K	K1			2	77203-356-000	0338103
36	Rubber A, Seat Setting	K	K1			2	77204-286-020	0154799
37	Rubber, Seat Setting	K	K1			1	77204-312-000	0229948
38	Bar Assy., Seat Lock	K	K1			1	77220-340-011	0265702
39	Rubber, Seat Lock Bar Rubber	K	K1			2	77228-340-001	0265710
40	Collar, Seat	K	K1			2	77229-340-000	4523114
	Collar, Seat Lock Bar	K	K1			2	77229-340-001	0265728
41	Lock Assy., Seat (Honda Lock)	K	K1			1	77230-107-711	0334649
	Lock Assy., Seat (Toyo)	K	K1			1	77230-347-003	0291450

Fuel Tank • Seat

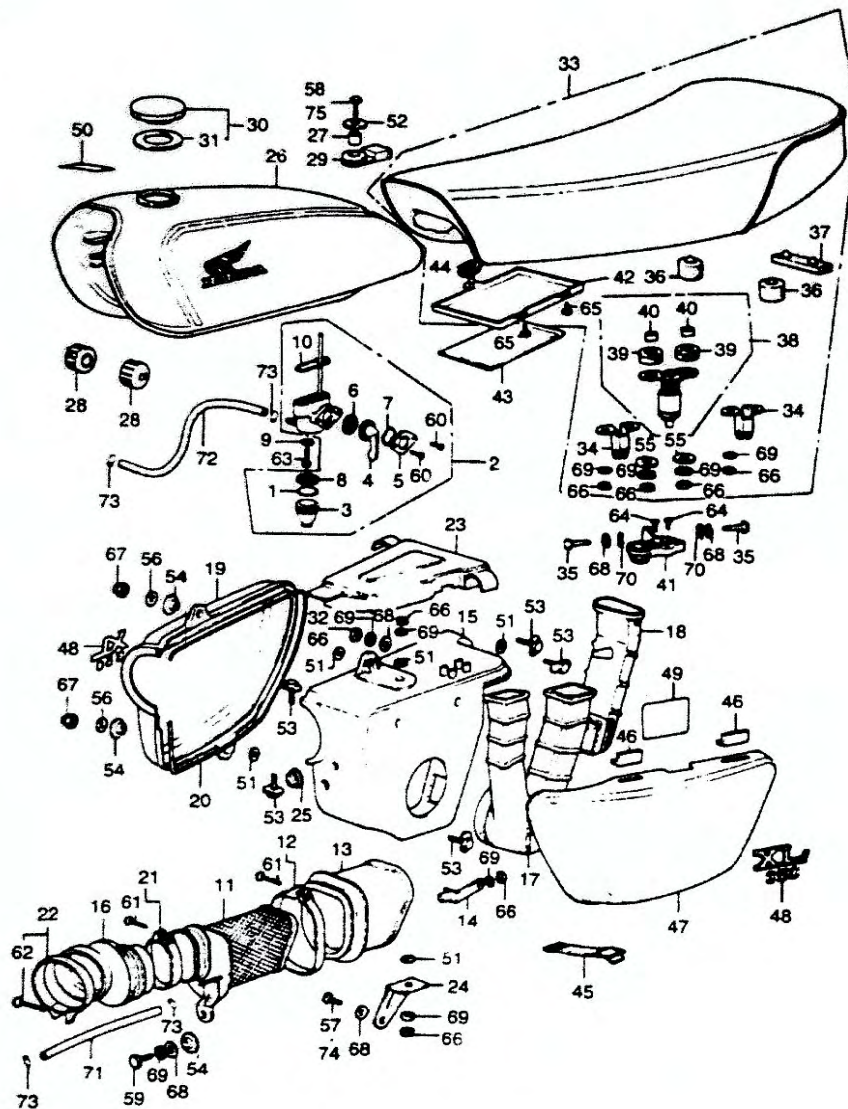


"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F 13356005

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
42	Lid, Seat Lower	K	K1			1	77250-342-300	0268383
43	Bag, Service Book	K	K1			1	77251-342-000	0275297
44	Grommet, Air Cleaner Case	K	K1			1	83551-300-000	0204990
45	Band, Side Cover	K	K1			1	83606-356-000	0338178
46	Grommet, Side Cover	K	K1			2	83621-333-000	0297200
47	Cover, L. Side (Phantom Black)	K	--			1	83750-356-000NR	0338194
	Cover, L. Side (Excel Black)	--	K1			1	83750-356-000UN	0382374
48	Mark, Side Cover	K	--			2	87123-356-300	0338228
	Mark, Side Cover	--	K1			2	87123-356-700	0382390
49	Mark, Battery Caution	K	K1			1	87506-356-670	0338244
50	Label, Drive Caution	K	K1			1	87560-323-670A	0269340
51	Plate, Snap	K	--	1014907		5	90351-356-000	0338335
	Circlip, 5MM	K	--	1014907		5	90605-230-000	0138768
		K	K1	1014908		4	90605-230-000	0138768
52	Washer, 8MM	K	K1			1	90501-819-000	0293910
53	Bolt, Air Cleaner Case Mount	K	K1			5	90511-329-000	0293928
54	Washer, 6x20	K	K1			3	90512-300-000	0191494
55	Washer, Tank Collar Locking	K	K1			2	90514-700-000	0073874
	Washer, Plain, 6MM	K	K1			2	94103-06800	0629824
56	Washer, Crank Arm	K	K1			2	90545-044-000	0127902
57	Bolt, Hex., 6x12	K	--			1	92000-06012	0054197
	Bolt, Hex., 6x12	K	--			1	92101-06012	2738821
	Bolt, Hex., 6x12	K	--			1	92101-06012-0A	3591500
58	Bolt, Hex., 8x28	K	--			1	92000-08028-0A	0155143
	Bolt, Hex., 8x28	K	--			1	92101-08028-0A	2298347
59	Bolt, Hex., 6x20	K	K1			1	92100-06020-09	0338509
60	Screw, Pan, 3x6	K	K1			2	93500-03006-0A	0166652
61	Screw, Pan, 4x20	K	K1			2	93500-04020-0G	0338566
62	Screw, Pan, 5x20	K	K1			1	93500-05020-0G	0294181
63	Screw, Pan, 6x16	--	K1			1	93500-06016	0057455
	Screw, Pan, 6x40	--	K1			1	93500-06040	0057612
	Screw, Pan, 6x40	K	K1			1	93500-06040-0A	1509181
64	Screw, Flat, 6x12	K	K1			2	93600-06012-0G	0265769
	Screw, Flat, 6x12	K	K1			2	93600-06012-07	0269365
65	Screw, Tapping, 5x8	K	K1			2	93901-25080	0265751
66	Nut, Hex., 6MM	K	K1			10	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	K1			10	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	K1			10	94001-06000	0058016
	Nut, Hex., 6MM	K	K1			10	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	K1			10	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	K1			10	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	K1			10	94030-06000	1642693
67	Nut, Cap, 6MM	K	K1			2	94021-06220	0304683
	Nut, Cap, 6MM	K	K1			2	94021-06220-0S	0359141
68	Washer, Plain, 6MM	K	--			5	94101-06000	0059071
	Washer, Plain, 6MM	--	K1			4	94101-06000	0059071
	Washer, Plain, 6MM	K	--			5	94101-06080	3136074
	Washer, Plain, 6MM	--	K1			4	94101-06080	3136074
	Washer, Plain, 6MM	K	--			5	94101-06800	0345900
	Washer, Plain, 6MM	--	K1			4	94101-06800	0345900
69	Washer, Spring, 6MM	K	--			11	94111-06000	0058974
	Washer, Spring, 6MM	--	K1			10	94111-06000	0058974
70	Pin, Lock, 6MM	K	K1			2	94251-06000	0058487
71	Tube, 4.5x105 (Bulk Hose: 95001-45)	K	--	1017069		1	95001-45105-40	0338590
	Tube, 4.5x115 (Bulk Hose: 95001-45)	K	K1	1017070		1	95001-45115-40	0394957
72	Tube, 4.5x140 (Bulk Hose: 95001-45)	K	K1			1	95001-45140-40	0290148
	Tube, 4.5x150 (Bulk Hose: 95001-45)	K	K1			1	95001-45150-40	0285684
	Tube, 4.5x200 (Bulk Hose: 95001-45)	K	K1			1	95001-45200-40S	2930873
73	Clip, Tube, B8	K	K1			4	95002-02080	0250647
74	Bolt, Flange, 6x12	--	K1			1	95700-06012-00	0487025
	Bolt, Flange, 6x12	--	K1			1	95701-06012-00	2105799
75	Bolt, Flange, 8x28	--	K1			1	95700-08028-00	0488676
	Bolt, Flange, 8x28	--	K1			1	95701-08028-00	2581387


Muffler • Pedal

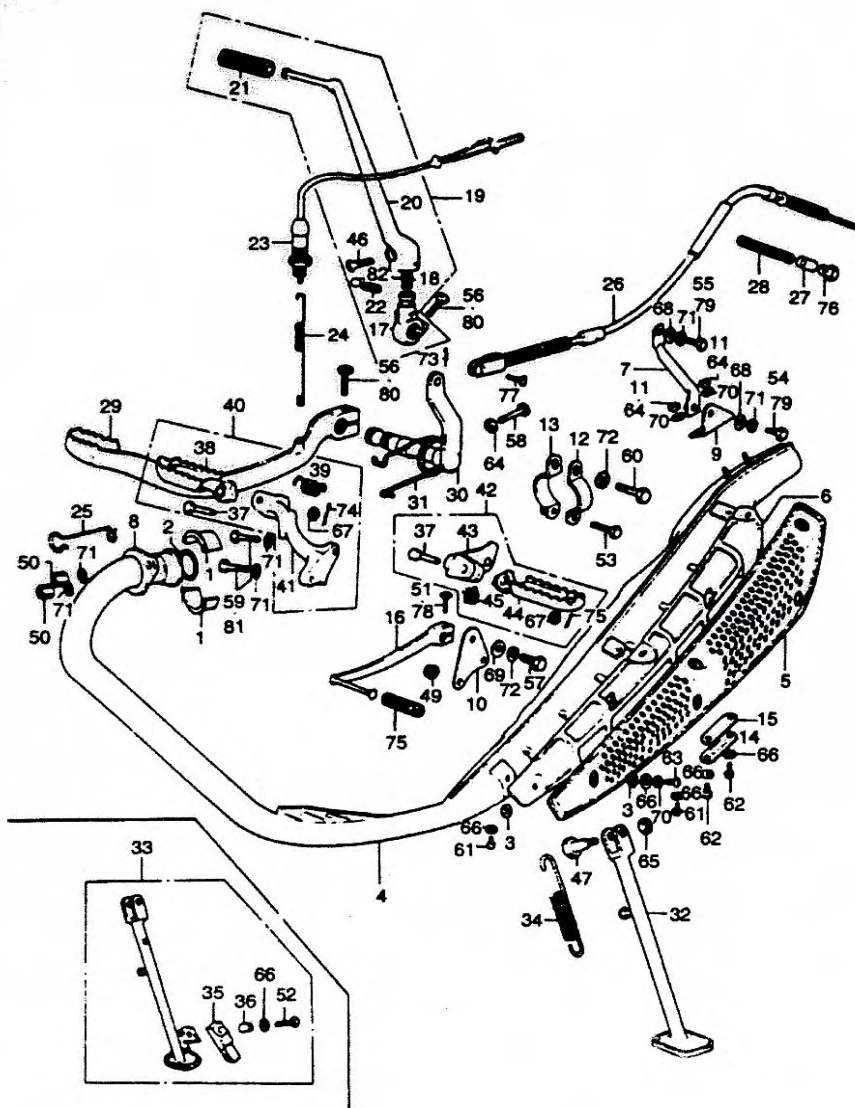

F13356006

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Collar, Ex. Pipe Joint	K	K1			2	18233-283-010	0118554
2	Gasket, Ex. Pipe	K	K1			1	18291-MM8-880	3971652
	Gasket, Ex. Pipe	K	K1			1	18291-283-010	0076851
	Gasket, Ex. Pipe	K	K1			1	18291-283-306	4350443
3	Gasket, Protector	K	K1			10	18292-167-890	4356325
	Gasket, Protector	K	K1			10	18292-329-000	0293068
4	Muffler Comp., Ex.	K	K1	2016739		1	18300-356-000	0336750
	Muffler Set, Ex.	K	K1	2016739		1	18300-356-315	0413401
		K	K1	2016740		1	18300-356-315	0413401
	Muffler Comp., Ex.	K	K1	2016739		1	18300-356-317	1492545
		K	K1	2016740		1	18300-356-317	1492545
5	Protector, Muffler	K	K1			1	18318-356-000	0336768
6	Protector, Muffler Inner	K	K1			1	18319-356-000	0336776
7	Stay, Muffler Rr.	K	K1			1	18321-356-000	0336784
8	Joint, Ex. Pipe	K	K1			1	18322-356-000	0336792
9	Bracket, Muffler, Rr.	K	K1			1	18323-356-000	0336800
10	Bracket, Fr. Muffler	K	K1			1	18326-356-000	0336818
11	Nut, Flange, 6MM	--	K1			2	18362-720-000	0293084
	Nut, Flange, 6MM	--	K1			2	94050-06000	0471623
12	Band A, Muffler	--	K1			1	18371-356-701	0382176
13	Band B, Muffler	--	K1			1	18372-356-701	0382184
14	Lid, Muffler	K	K1			1	18373-310-000	0113530
	Lid, Muffler	K	K1			1	18373-446-000	0766519
	Lid, Muffler	K	K1			1	18373-446-010	1286566
15	Gasket, Muffler	K	K1			1	18374-KR8-900	4503074
	Gasket, Muffler Lid	K	K1			1	18374-310-000	0113548
16	Pedal, Gear Change	K	K1			1	24700-356-000	0337006
17	Joint, Kick Arm	K	K1			1	28241-356-300	0337030
	Joint, Kick Arm	K	K1			1	28241-385-300	0428904
18	Spring, Kick Starter Knuckle	K	K1	2013645		1	28292-312-300	0230698
	Spring, Kick Starter Knuckle	K	K1	2013646		1	28292-312-310	0428912
19	Arm Assy., Kick Starter	K	K1			1	28300-356-000	0337071
20	Arm, Kick Starter	K	K1	2013645		1	28301-356-300	0337089
	Arm, Kick Starter	K	K1			1	28301-356-310	1101203
21	Rubber, Kick Starter	K	K1			1	28311-329-000	0293159
22	Spring, Kick Starter Stopper	K	K1			1	28333-300-000	0193763
23	Switch Assy., Stop	K	K1			1	35350-KJ9-405	3780665
	Switch Assy., Stop	K	K1			1	35350-336-000	0268623
24	Spring, Stop Switch	K	K1			1	35357-303-010	0198341
25	Clamp A, Tachometer Cable	K	K1			1	37262-356-000	0337402
26	Cable Comp., Rr. Brake	K	K1			1	43450-356-000	0337550
27	Joint, Rr. Brake Arm	K	--	1014381		1	43453-250-000	0051029
		--	K1			1	43453-250-000	0051029
	Joint B, Brake Arm	K	K1			1	95015-32000	0257758
	Joint B, Brake Arm	K	K1			1	95015-32001	0400945
28	Spring A, Brake Cable	K	K1			1	45452-044-300	0202689
29	Pedal, Brake	K	K1			1	46500-356-000	0337659
30	Shaft Comp., Rr. Brake Pivot	K	K1			1	46510-356-000	0337667
31	Spring, Brake Pedal	K	K1			1	46514-356-000	0337675
32	Bar, Side Stand	K	--			1	50530-356-000	0337758
33	Bar Assy., Side Stand	--	K1			1	50540-356-700	0382242
34	Spring, Side Stand	K	K1			1	50542-310-010	0112920
35	Rubber, Stand	--	K1			1	50548-356-700	0382648
36	Collar, Stand Rubber Setting	--	K1			1	50549-356-700	0382655
37	Pin, Step Bar	K	K1			2	50603-056-000	0128983
38	Step Comp., R.	K	K1			1	50616-356-000	0337766
39	Spring, R. Step Return	K	K1			1	50617-MM9-000	3085370
	Spring, R. Step Return	K	K1			1	50617-329-000	0293399
40	Bar Assy., R. Step	K	K1			1	50620-356-000	0337774
41	Bar Comp., R. Step	K	K1			1	50625-329-000	0281980
42	Bar Assy., L. Step	K	K1			1	50630-356-000	0337782
43	Bar Comp., L. Step	K	K1			1	50635-329-000	0282004
44	Step Comp., L.	K	K1			1	50642-356-000	0337790


Muffler • Pedal

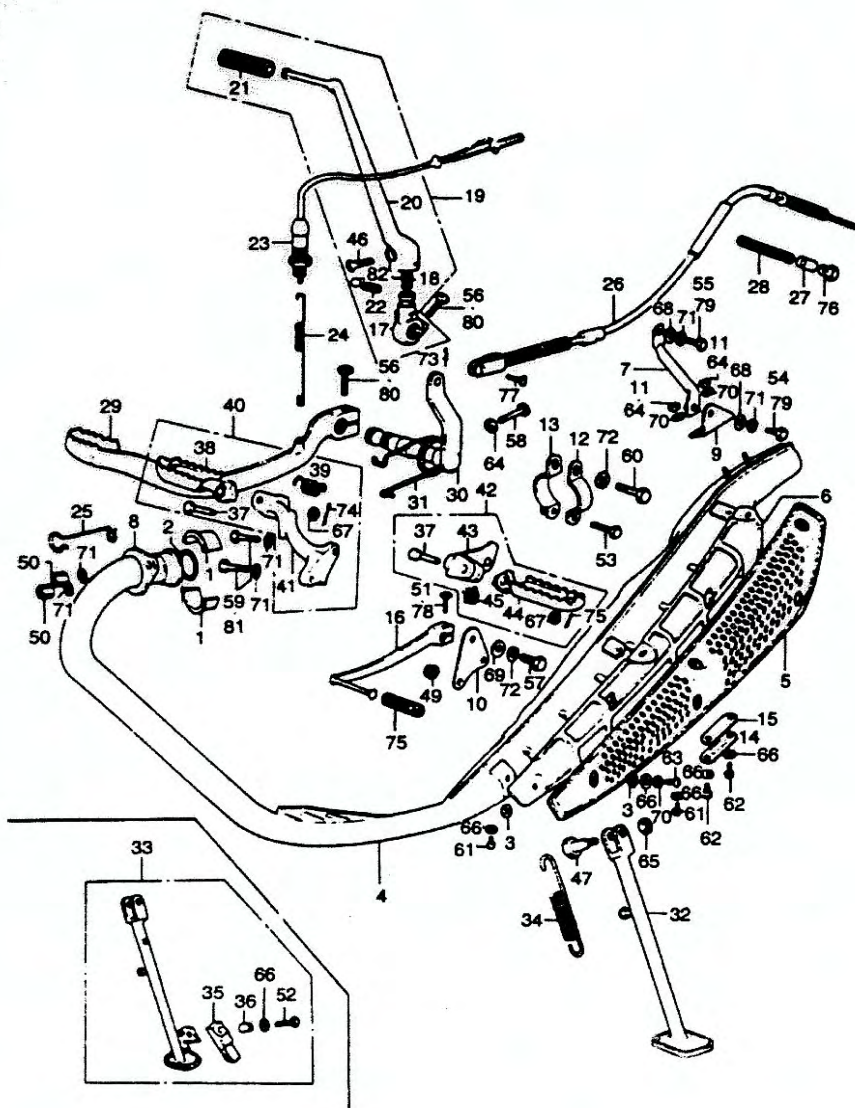

F13356006


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
45	Spring, L. Step Return	K	K1			1	50644-MM9-000	3085412
	Spring, L. Step Return	K	K1			1	50644-329-000	0282012
46	Bolt, Kick Arm	K	K1			1	90101-329-000	0293746
47	Screw, Side Stand Pivot	K	K1			1	90108-283-000	0078717
49	Nut, Hex., 8MM	K	K1			2	90309-357-000	0322164
50	Nut, Ex. Pipe Joint	K	K1			2	90323-356-000	0338327
51	Bolt, Hex., 6x20	K	--			1	92000-06020	0054270
	Bolt, Hex., 6x20	K	--			1	92101-06020-0A	2528925
52	Bolt, Hex., 6x28	--	K1			1	92000-06028	0054346
	Bolt, Hex., 6x28	--	K1			1	92101-06028-0A	3159427
53	Bolt, Hex., 8x16	--	K1			1	92000-08016-0A	0145433
	Bolt, Hex., 8x16	--	K1			1	92101-08016-0A	3391489
54	Bolt, Hex., 8x20	K	--			1	92000-08020-0A	0171728
	Bolt, Hex., 8x20	K	--			1	92101-08020-0A	2936243
55	Bolt, Hex., 8x25	K	--			1	92000-08025-0A	0159350
	Bolt, Hex., 8x25	K	--			1	92101-08025-0A	2651537
56	Bolt, Hex., 8x28	K	--			2	92000-08028-0A	0155143
	Bolt, Hex., 8x28	K	--			2	92101-08028-0A	2298347
57	Bolt, Hex., 10x25	K	K1			1	92000-10025-0A	0197491
	Bolt, Hex., 10x25	K	K1			1	92101-10025-0A	4224176
58	Bolt, Hex., 6x25	K	K1			1	92023-06025	0294132
	Bolt, Hex., 6x25	K	K1			1	92023-06025-0A	1656081
59	Bolt, Hex., 8x28	K	--			2	92212-08028-0A	0294140
60	Bolt, Hex., 10x35	K	--			1	92215-10035-0A	0294157
	Bolt, Hex., 10x40	--	K1			1	92200-10040-0A	4287785
	Bolt, Hex., 10x40	--	K1			1	92213-10040-0A	0382416
61	Screw, Cross, 6x8	K	K1	2016739		2	93500-06008	0057380
62	Screw, Pan, 6x12	K	K1			2	93500-06012	0057422
	Screw, Pan, 6x12	K	K1			2	93500-06012-0A	0182390
	Screw, Pan, 6x12	K	K1			2	93500-06012-00	2711489
63	Screw, 6x14	K	K1			5	93500-06014-02	0338574
64	Nut, Hex., 6MM	K	--			3	90310-KA3-711	1553916
	Nut, Hex., 6MM	--	K1			1	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	--			3	94000-06000-0S	1391283
	Nut, Hex., 6MM	--	K1			1	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	--			3	94001-06000	0058016
	Nut, Hex., 6MM	--	K1			1	94001-06000	0058016
	Nut, Hex., 6MM	K	--			3	94001-06000-0S	0156067
	Nut, Hex., 6MM	--	K1			1	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	--			3	94001-06008-0S	2829414
	Nut, Hex., 6MM	--	K1			1	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	--			3	94001-06200-0S	2043255
	Nut, Hex., 6MM	--	K1			1	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	--			3	94030-06000	1642693
	Nut, Hex., 6MM	--	K1			1	94030-06000	1642693
65	Nut, Hex., 10MM	K	K1			1	94030-10000	0223024
66	Washer, Plain, 6MM	K	--			8	94101-06000	0059071
	Washer, Plain, 6MM	--	K1	2016740	2016739	10	94101-06000	0059071
	Washer, Plain, 6MM	K	--			8	94101-06080	3136074
	Washer, Plain, 6MM	--	K1	2016740	2016739	10	94101-06080	3136074
	Washer, Plain, 6MM	K	--			8	94101-06800	0345900
	Washer, Plain, 6MM	--	K1	2016740	2016739	10	94101-06800	0345900
67	Washer, Plain, 8MM	K	K1			2	94101-08000	0059097
68	Washer, Plain, 8MM	K	K1			2	94102-08000	0199596
69	Washer, Plain, 10MM	K	K1			1	94102-10000	0172551
70	Washer, Spring, 6MM	K	--			7	94111-06000	0058974
	Washer, Spring, 6MM	--	K1			5	94111-06000	0058974
71	Washer, Spring, 8MM	K	--			6	94111-08000	0058982
	Washer, Spring, 8MM	--	K1			3	94111-08000	0058982
72	Washer, Spring, 8MM	K	K1			2	94111-10000	0059006
73	Pin, Cotter 1.6x12	K	K1			1	94201-16120	0251736
74	Pin, Cotter 1.6x15	K	K1			2	94201-16150	0058313
	Pin, Cotter 1.6x25	K	K1			2	94201-16250	0058339

Muffler • Pedal

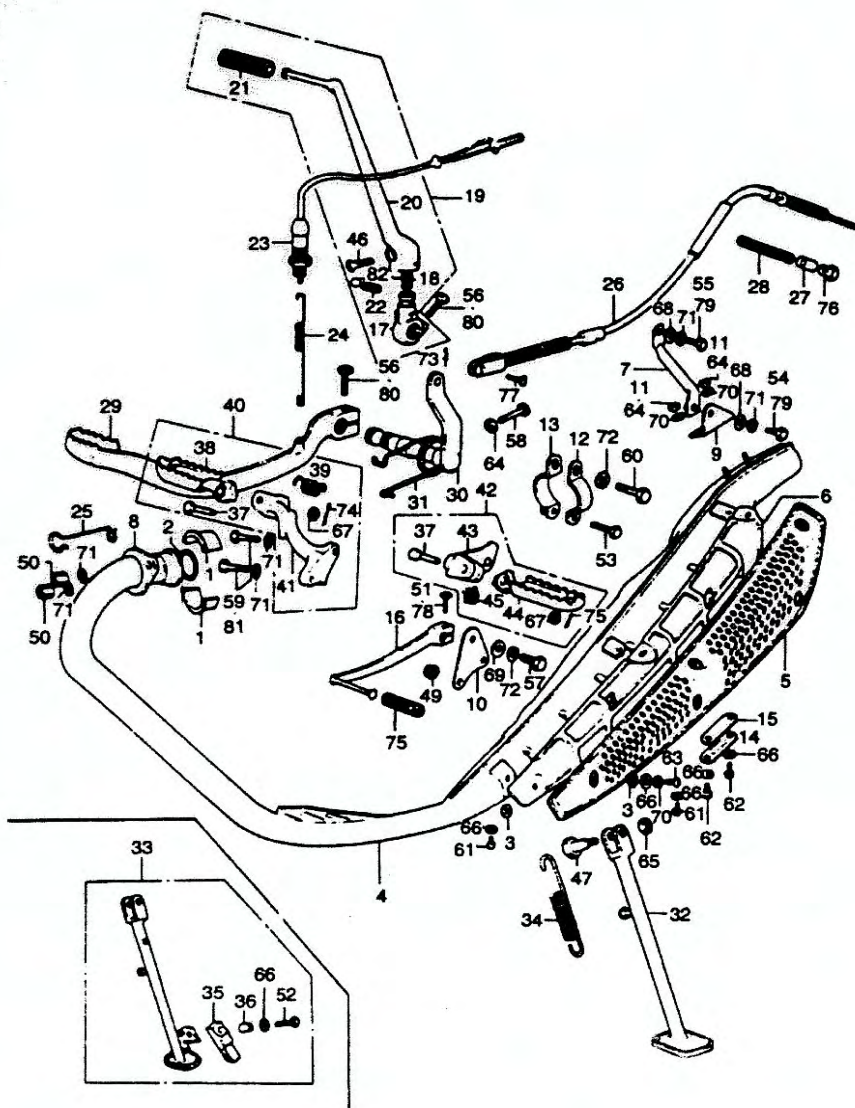

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
75	Rubber, Gearshift Pedal	K	K1			1	95011-40000	0255695
76	Nut B, Brake Rod Adjusting	K	K1			1	95015-42000	0257766
77	Pin B, Brake Rod Joint	K	K1			1	95015-52000	0257774
78	Bolt, Flange, 6x20	--	K1			1	95700-06020-00	0488684
	Bolt, Flange, 6x20	--	K1			1	95701-06020-00	2105815
79	Bolt, Flange, 8x20	--	K1			2	95700-08020-00	0477463
	Bolt, Flange, 8x20	--	K1			2	95701-08020-00	2552552
80	Bolt, Flange, 8x28	--	K1			2	95700-08028-00	0488676
	Bolt, Flange, 8x28	--	K1			2	95701-08028-00	2581387
81	Bolt, Flange, 8x28	--	K1			2	95814-08028	0344945
82	Ball, Steel, #8 (1/4)	K	K1			1	96211-08000	0079905

Shock Absorber • Swingarm

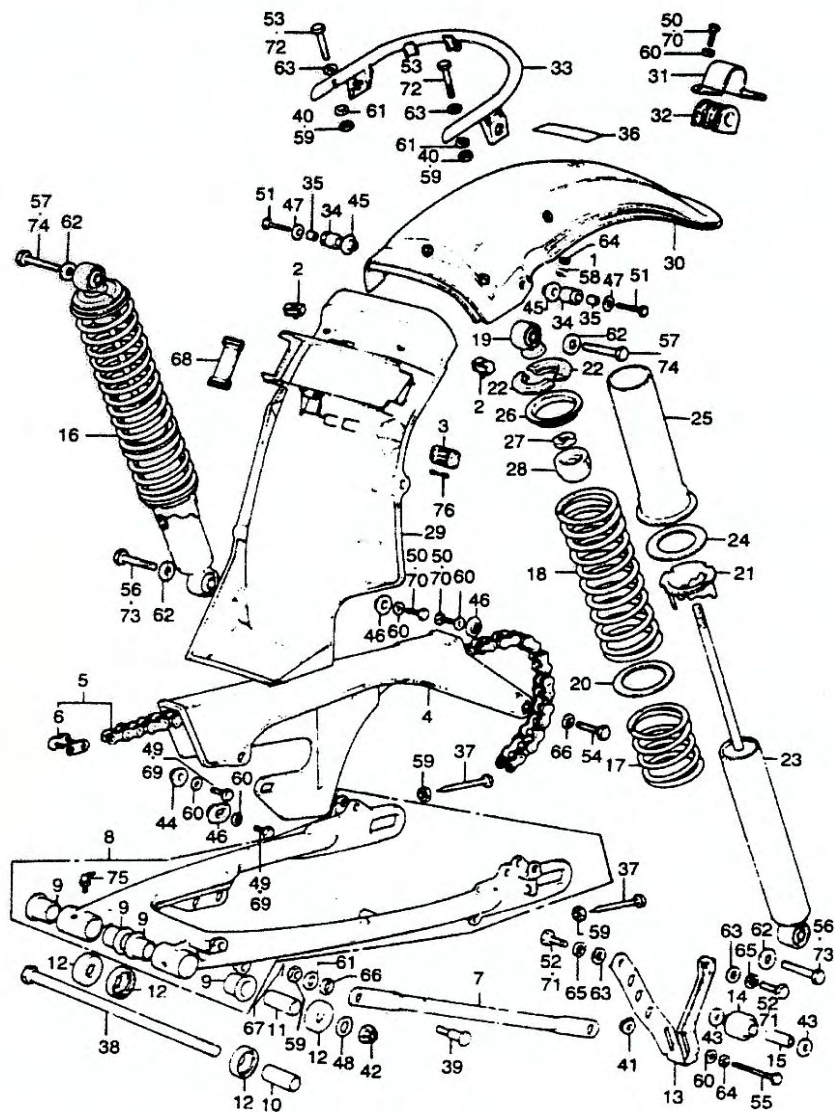


"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F13356001

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Nut, Flange, 6MM	--	K1			1	18362-720-000	0293084
	Nut, Flange, 6MM	--	K1			1	94050-06000	0471623
2	Grommet, Wire	K	K1			2	32985-300-000	0255554
3	Case, Fuse	K	K1			1	38205-115-000	0300871
4	Case, Driven Chain	K	K1			1	40510-329-000	0281477
5	Chain Drive (DID50DS-100E)	K	K1			1	40530-356-305	0337410
6	Joint, Drive Chain (Daido)	K	K1			1	40531-356-305	0356113
7	Arm, Rr. Brake Stopper	K	K1			1	43431-357-020	0321133
8	Swingarm Comp., Rr.	K	--		1022224	1	52100-356-000B	0337873
	Swingarm Assy., Rr.	K	--		1022224	1	52110-356-000B	0382325
		K	K1	1022225		1	52110-356-000B	0382325
9	Bush, Rr. Swingarm	K	K1			4	52108-356-006	0337881
	Bush, Rr. Fork	K	K1			4	52109-KC1-003	3458494
10	Collar, R. Rr. Swingarm	K	K1			1	52141-356-000	0337899
11	Collar, L. Swingarm	K	K1			1	52142-356-000	0337907
12	Cap, Swingarm Dust Seal	K	K1			4	52144-268-000	0048751
	Cap, Swingarm Dust Seal	K	K1			4	52144-286-000	0155358
	Cap, Swingarm Dust Seal	K	K1			4	52144-329-000	0282087
	Cap, Rr. Swingarm Dust Seal (Arai)	K	K1			4	52144-356-003	0687541
	Cap, Rr. Swingarm Dust Seal (NOK)	K	K1			4	52144-356-005	0337915
13	Guide, Chain	K	K1			1	52156-356-000	0337923
14	Roller, Tensioner	K	K1			1	52157-356-000	0337931
15	Collar, Roller	K	K1			1	52158-356-000	0337949
16	Shock Absorber Assy., Rr.	K	K1			2	52400-356-000	0337956
17	Spring A, Rr. Shock Absorber	K	K1			2	52401-356-000	0337964
18	Spring B, Rr. Shock Absorber	K	K1			2	52402-356-000	0337972
19	Joint Comp., Upper	K	K1			2	52403-356-000	0337980
20	Joint, Rr. Shock Spring	K	K1			2	52404-356-000	0337998
21	Adjuster, Rr. Shock Spring	K	K1			2	52422-329-000	0293514
22	Stopper, Spring Seat (Showa)	K	K1			4	52424-331-003	0245555
23	Damper Comp., Rr.	K	K1			2	52430-356-000	0338004
24	Spacer, Rr. Shock	K	K1			2	52457-356-000	0338012
25	Guide, Rr. Shock Spring	K	K1			2	52458-356-000	0338020
26	Seat, Rr. Shock Spring (Showa)	K	K1			2	52459-312-003	0229922
27	Nut, Lock 11MM	K	K1			2	52482-356-000	0338038
28	Rubber, Stopper	K	K1			2	52517-356-000	0338046
29	Fender Comp., Rr. (Stripe Blue)	K	--			1	80110-356-000SU	0338129
	Fender A Rr. (Excel Black)	--	K1			1	80100-356-700UN	0382366
30	Fender B, Rr.	K	K1			1	80105-356-000	0338111
31	Stay, Rr. Fender Mount	K	K1			1	80111-329-010	0282392
32	Rubber, Rr. Fender Mount	K	K1			1	80112-329-010	0282400
33	Stay, Number Bracket	K	K1			1	84710-356-000	0338202
34	Rubber, Fender	K	K1			2	84905-356-000	0338210
35	Collar, Number Bracket Setting	K	K1			2	84906-118-000	0248401
36	Mark, Tire Caution	K	K1			1	87505-356-370	0338236
37	Bolt, Chain Adjusting	K	K1			2	90119-300-000	0191312
38	Bolt, Rr. Swingarm Pivot	K	K1			1	90121-356-000	0338301
39	Bolt, Rr. Brake Stopper Arm	K	K1			1	90133-028-010	0082560
	Bolt, Rr. Brake Stopper Arm	K	K1			1	90133-107-000	0211763
40	Nut, Flange, 8MM	--	K1			2	90236-300-000	0189183
	Nut, Flange, 8MM	--	K1			2	94050-08000	0481143
	Nut, Flange, 8MM	--	K1			2	94050-08000-0S	0678011
41	Nut, Roller Set	K	K1			1	90301-356-000	0338319
42	Nut, Lock, 14MM	K	K1			1	90354-268-000	0051979
43	Washer, 6MM	K	K1			2	90501-356-000	0338350
44	Washer, 6x20	K	K1			1	90512-300-000	0191494
45	Washer, 6x18	K	K1			2	90512-356-000	0338368
46	Washer, 6x9	K	K1			3	90513-323-000	0254193
47	WasherB, Handle Holder Setting	K	K1			2	90525-030-000	0021287
48	Washer, 14x26	K	K1			1	90526-216-000	0034256
	Washer, 14x26	K	K1			1	90527-634-670	0559153

Shock Absorber • Swingarm

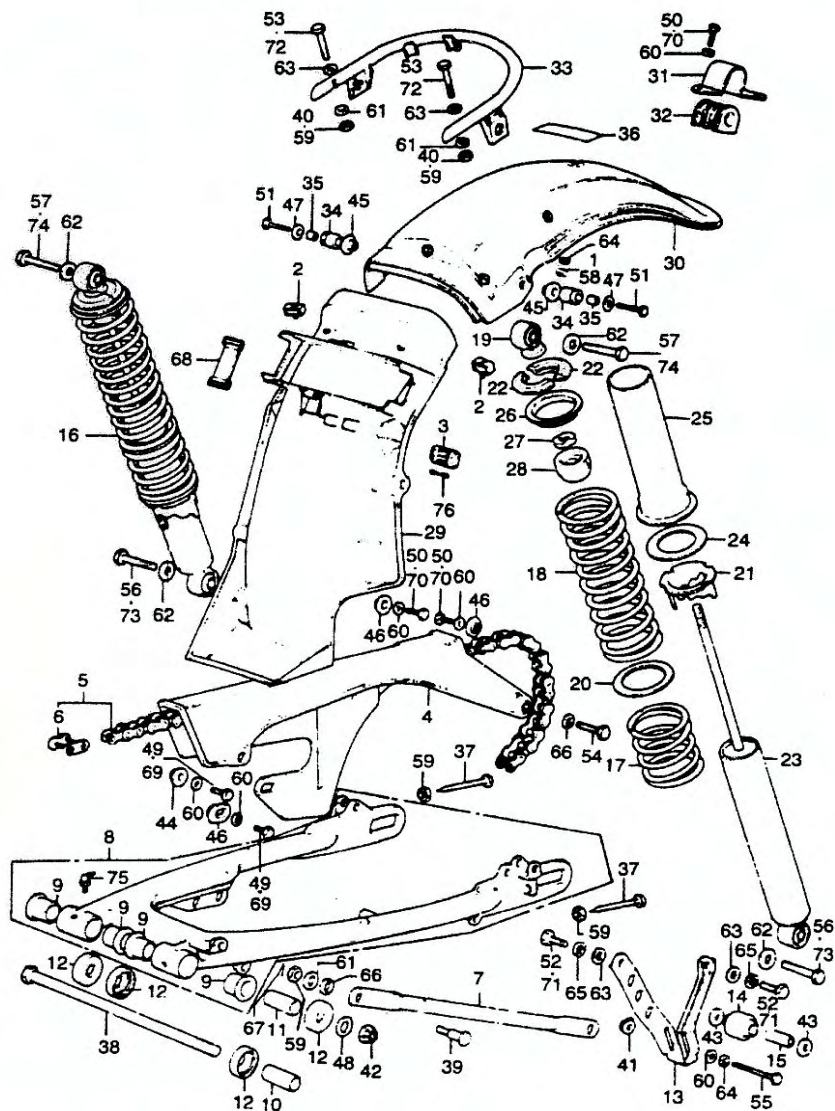


"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F13356001

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
49	Bolt, Hex., 6x14	K	--			2	92000-06014	0054213
	Bolt, Hex., 6x14	K	--			2	92101-06014-0A	2552198
50	Bolt, Hex., 6x16	K	--			3	92000-06016	0054239
	Bolt, Hex., 6x16	K	--			3	92000-06016-0A	0313197
	Bolt, Hex., 6x16	K	--			3	92000-06016-1A	0915124
	Bolt, Hex., 6x16	K	--			3	92100-06016-0A	1685726
	Bolt, Hex., 6x16	K	--			3	92101-06016-0A	2479590
	Bolt, Hex., 6x16	K	--			3	92200-06016-0A	1842400
51	Bolt, Hex., 6x28	K	K1			2	92000-06028	0054346
	Bolt, Hex., 6x28	K	K1			2	92101-06028-0A	3459427
52	Bolt, Hex., 8x16	K	--			2	92000-08016-0A	0145433
	Bolt, Hex., 8x16	K	--			2	92101-08016-0A	3391489
53	Bolt, Hex., 8x35	K	--			2	92000-08035	0054825
	Bolt, Hex., 8x35	K	--			2	92000-08035-0A	0198275
	Bolt, Hex., 8x36	K	--			2	92000-08036	0379495
	Bolt, Hex., 8x36	K	--			2	92000-08036-0A	0156034
	Bolt, Hex., 8x36	K	--			2	92101-08036-0A	4543260
54	Bolt, Hex., 10x16	K	K1			1	92000-10016-0A	0112631
	Bolt, Hex., 10x16	K	K1			1	92101-10016-0A	3623907
55	Bolt, Hex., 6x45	K	K1			1	92000-06045	0054445
	Bolt, Hex., 6x45	K	K1			1	92000-06045-0A	1001247
	Bolt, Hex., 6x45	K	K1			1	92101-06045-0A	4264149
	Bolt, Hex., 6x45	K	K1			1	92200-06045	0206748
56	Bolt, Hex., 10x32	K	--			2	93100-10032-0A	0338541
57	Bolt, Hex., 10x40	K	--			2	93100-10040-0A	0338558
	Bolt, Hex., 10x40	K	--			2	93101-10040-0A	4515862
58	Nut, Hex., 6MM	K	--			1	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	--			1	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	--			1	94001-06000	0058016
	Nut, Hex., 6MM	K	--			1	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	--			1	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	--			1	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	--			1	94030-06000	1642693
59	Nut, Hex., 8MM	K	--			5	94001-08000-0S	0167338
		--	K1			3	94001-08000-0S	0167338
60	Washer, Plain, 6MM	K	--			6	94101-06000	0059071
		--	K1			3	94101-06000	0059071
	Washer, Plain, 6MM	K	--			6	94101-06080	3136074
		--	K1			3	94101-06080	3136074
	Washer, Plain, 6MM	K	--			6	94101-06800	0345900
		--	K1			3	94101-06800	0345900
61	Washer, Plain, 8MM	K	--			3	94101-08000	0059097
		--	K1			1	94101-08000	0059097
52	Washer, Plain, 10MM	K	--			4	94101-10000	0059113
63	Washer, Plain, 8MM	K	--			4	94102-08000	0199596
64	Washer, Spring, 6MM	K	--			2	94111-06000	0058974
		--	K1			1	94111-06000	0058974
65	Washer, Spring, 8MM	K	K1			2	94111-08000	0058982
66	Washer, Spring, 8MM	K	K1			2	94111-10000	0059006
67	Pin, Cotter 2.0x15	K	K1			1	94201-20150	0058347
68	Band A, Battery	K	K1			1	95012-11000	0038608
	Band A, Battery	K	K1			1	95012-11001	1314475
69	Bolt, Flange, 6x12	--	K1			2	95700-06012-00	0487025
	Bolt, Flange, 6x12	--	K1			2	95701-06012-00	2105799
70	Bolt, Flange, 6x20	--	K1			3	95700-06020-00	0488684
	Bolt, Flange, 6x20	--	K1			3	95701-06020-00	2105815
71	Bolt, Flange, 8x14	--	K1			2	95700-08014-00	0687863
	Bolt, Flange, 8x14	--	K1			2	95701-08014	2529105
72	Bolt, Flange, 8x35	--	K1			2	95700-08035-00	0496489
	Bolt, Flange, 8x35	--	K1			2	95701-08035-00	2724029

Shock Absorber • Swingarm

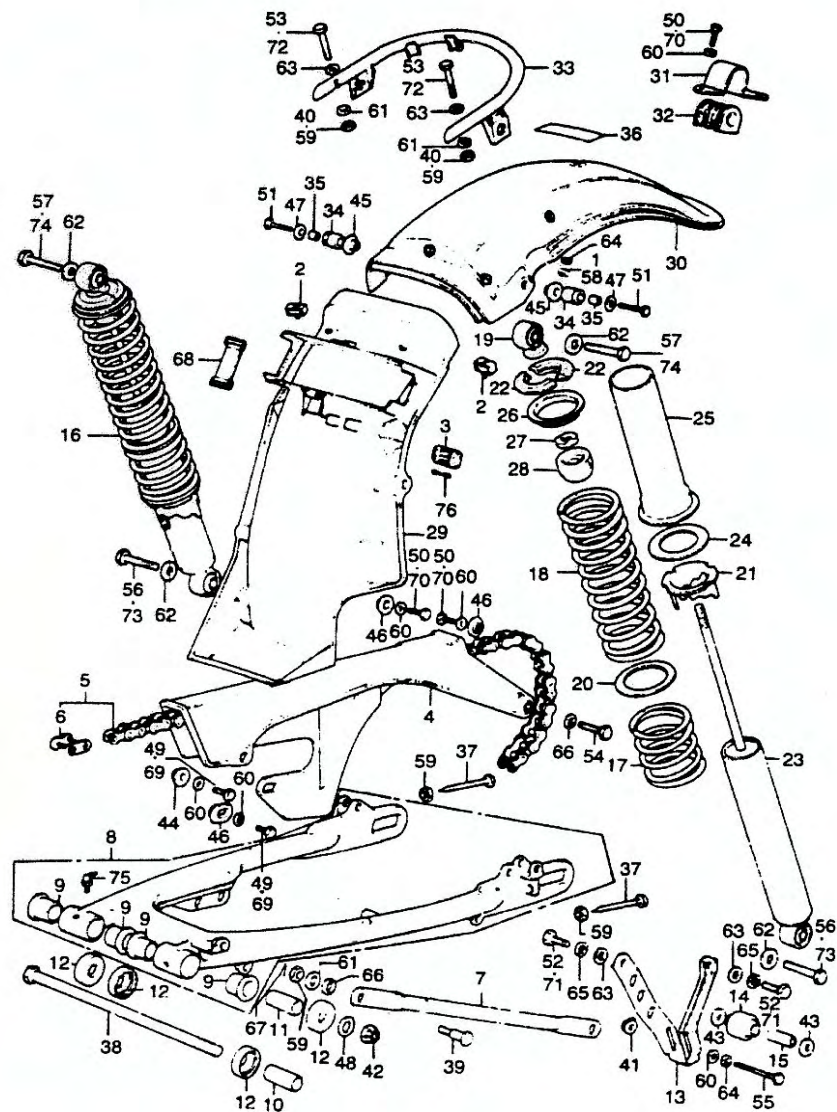


Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
73	Bolt, Flange, 10x32	--	K1			2	95800-10032-00	0487058
	Bolt, Flange, 10x32	--	K1			2	95801-10032-00	4165635
74	Bolt, Flange, 10x40	--	K1			2	95800-10040-00	0698712
75	Fitting, Grease, B.76S	K	K1	1022225		2	96201-80000	0393132
76	Fuse A (10A)	K	K1			3	85200-11000	0294439

"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F13356001


Taillight • Turn Signal

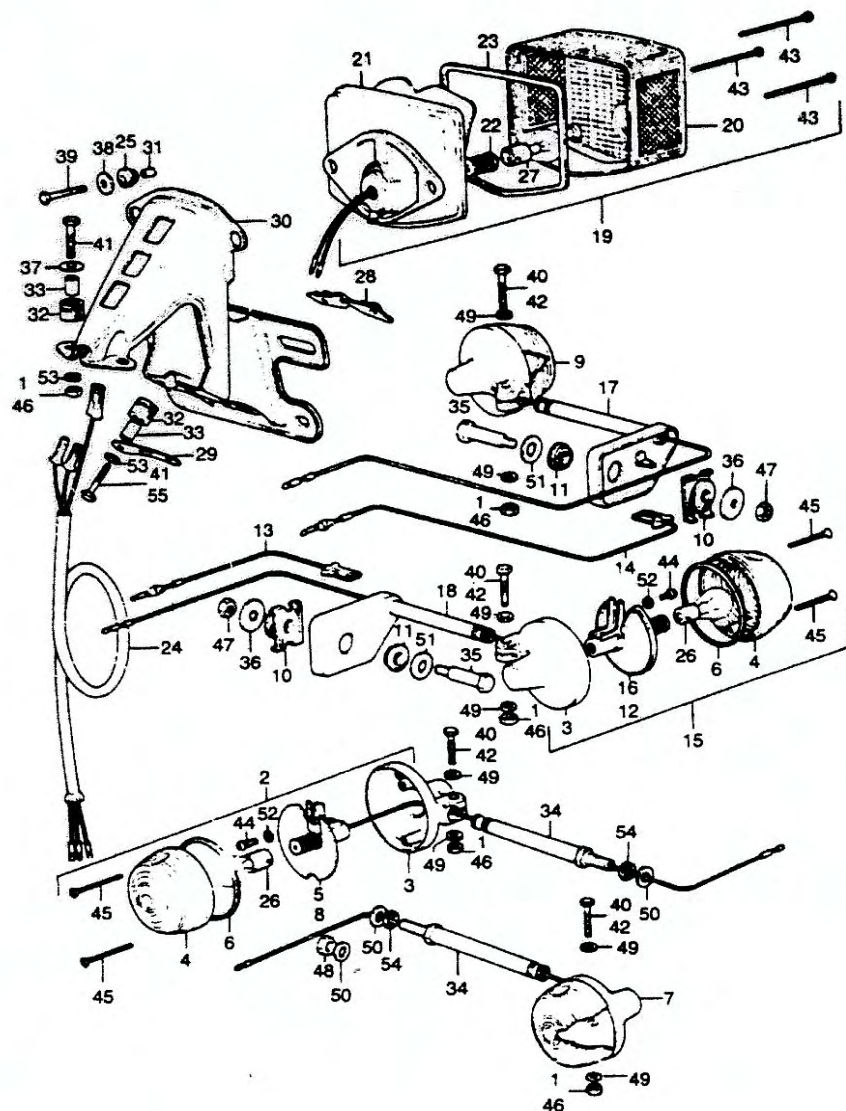

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Nut, Flange, 6MM	--	K1			6	18362-720-000	0293084
	Nut, Flange, 6MM	--	K1			6	94050-06000	0471623
2	Turn Signal Assy., R. Fr.	K	K1			1	33400-356-671	0337188
	Turn Signal Assy., R. Fr.	K	K1			1	33400-361-679	2045672
3	Base, Turn Signal	K	K1			4	33401-292-003	0145250
	Base, Turn Signal	K	K1			4	33401-341-701	0314732
4	Lens, Fr. Turn Signal (Stanley)	K	K1			4	33402-268-671	0134221
	Socket, R. Fr. Turn Signal	K	K1			4	33402-268-672	2553055
5	Socket, L. Fr. Turn Signal	K	--			1	33410-362-670	0333815
	Socket, R. Fr. Turn Signal	K	K1			1	33410-356-671	0337196
6	Gasket, Fr. Turn Signal Lens	K	K1			4	33443-268-671	0148965
7	Turn Signal Assy., R. Fr.	K	K1			1	33400-361-670	0352682
	Turn Signal Assy., R. Fr.	K	K1			1	33400-361-679	2045672
	Turn Signal Assy., L. Fr.	K	K1			1	33450-356-671	0337204
	Turn Signal Assy., L. Fr.	K	K1			1	33450-361-670	0352708
8	Socket Comp., L. Fr. Turn Signal	K	--			1	33460-362-670	0333831
	Socket, L. Fr. Turn Signal	K	K1			1	33460-356-671	0337212
9	Turn Signal Assy., L. Fr. (6V18W) (S	K	K1			1	33400-053-000	0134064
	Turn Signal Assy., R. Fr. (6V18W) (S	K	K1			1	33400-056-671	0156711
	Turn Signal Assy., R. Fr. (6V18W) (S	K	K1			1	33400-056-679	2049971
	Turn Signal Assy., L. Fr. (6V18W) (S	K	K1			1	33400-243-670	0148940
	Turn Signal Assy., R. Rr.	K	K1			1	33600-356-671	0337220
	Turn Signal Assy., L. Rr.	K	K1			1	33650-356-671	0337261
10	Rubber, Rr. Turn Signal Mount	K	K1			2	33608-292-020	0145185
11	Rubber B, Rr. Turn Signal Mount	K	K1			2	33608-286-000	0153734
	Rubber B, Rr. Turn Signal Setting	K	K1			2	33609-292-000	0145193
12	Socket, R. Rr. Turn Signal	K	--			1	33610-302-670	0111617
	Socket, R. Rr. Turn Signal	K	K1			1	33610-356-671	0337238
13	Cord A, Rr., Turn Signal Ground	K	K1			1	33620-356-000	0337246
14	Cord B, Rr., Turn Signal Ground	K	K1			1	33621-356-000	0337253
15	Turn Signal Assy., R. Fr. (6V18W) (S	K	K1			1	33400-056-679	2049971
	Turn Signal Assy., L. Rr.	K	K1			1	33650-356-671	0337261
16	Socket, L. Rr. Turn Signal	K	--			1	33660-302-670	0111633
	Socket, L. Rr. Turn Signal	K	K1			1	33660-356-671	0337279
17	Stay, R. Rr. Turn Signal	K	K1			1	33671-356-000	0337287
18	Stay, L. Rr. Turn Signal	K	K1			1	33672-356-000	0337295
19	Taillight Unit	K	K1			1	33701-329-671	0281089
20	Lens, Taillight	K	K1			1	33702-329-671	0290726
21	Base, Taillight	K	K1			1	33703-329-670	0290734
22	Wire Comp., Taillight	K	K1			1	33708-341-671	0268706
23	Gasket, Taillight Lens	K	K1			1	33709-092-671	0266106
24	Wire, Taillight Sub	K	K1			1	33713-356-670	0337303
25	Gasket B, Taillight Base	K	K1			2	33719-077-671	0178681
26	Bulb, Turn Signal (6V18W)	K	K1			4	34905-053-000	0134072
	Bulb, Turn Signal	K	K1			4	34905-053-003	0342725
	Bulb, Turn Signal (6V18W)	K	K1			4	34905-056-671	0156802
	Bulb, Turn Signal (6V17W)	K	K1			4	34905-358-003	0709584
27	Bulb, Stop & Taillight (6V32/3CP)	K	K1			1	34906-329-671	0293233
28	Plate A, Number Bracket Mount	K	K1			1	80109-340-000	0266130
29	Plate B, Number Bracket Mount	K	K1			1	80110-312-000	0239368
30	Bracket, Number Plate	K	K1			1	84701-340-670	0350520
	Bracket, Number Plate	K	K1			1	84701-340-670XW	0266148
31	Collar, Taillight Unit	K	K1			2	64706-342-000	0275644
32	Rubber, Cushion	K	K1			4	84905-333-000	0297267
33	Collar, Number Bracket Setting	K	K1			4	84906-118-000	0248401
34	Bolt, Fr. Turn Signal Set	K	K1			2	90154-455-670	0303412
35	Bolt, Rr. Turn Signal Set	K	K1			2	90155-292-010	0145243
36	Washer, 8MM	K	K1			2	90473-805-810	0064493
	Wahser, Lock, 8MM	K	K1			2	90534-706-010	0177998
37	Washer B, Handle Holder Setting	K	K1			2	90525-030-000	0021287
38	Washer, 20MM	K	K1			2	90581-342-000	0275651


F13356006

Taillight • Turn Signal

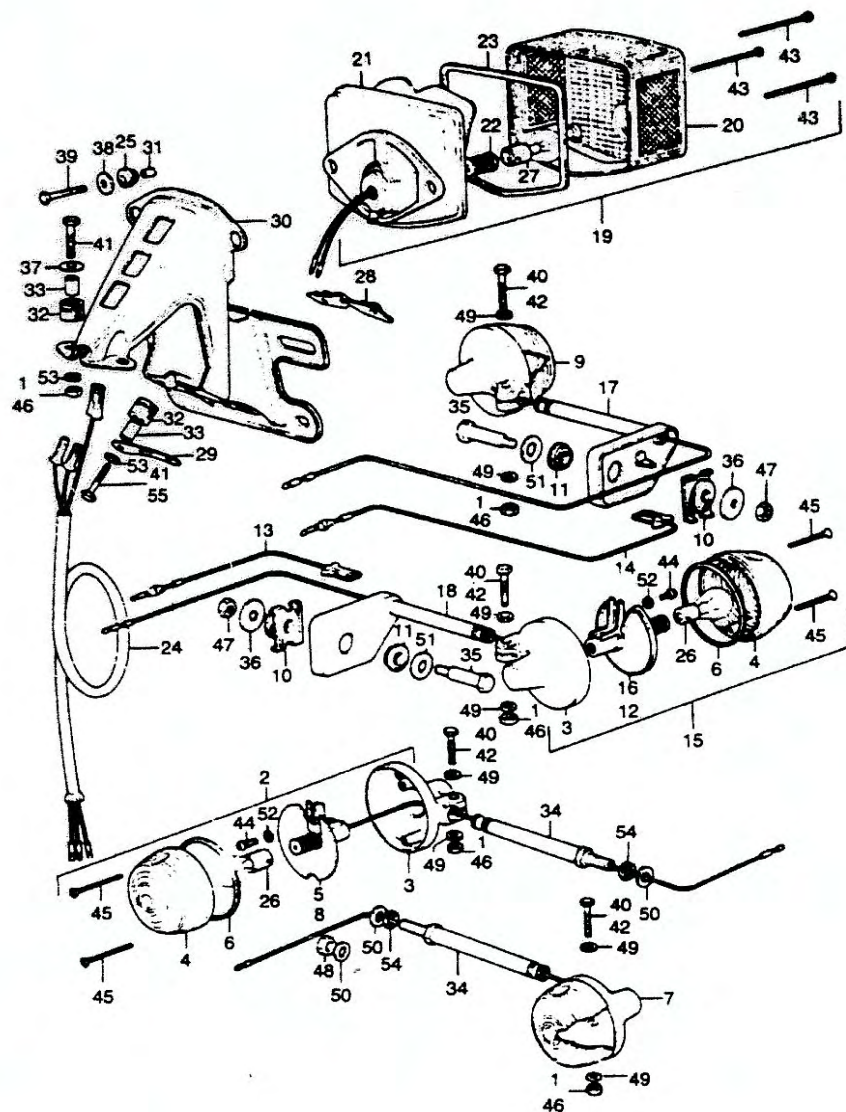

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
39	Bolt, Hex., 5x20	K	K1			2	92000-05020-0A	0175893
	Bolt, Hex., 5x20	K	K1			2	92101-05020-0A	2825198
	Bolt, Recessed, 5x20	K	K1			2	92301-05020-0A	3076262
40	Bolt, Hex., 6x28	K	--			4	92000-06028-02	0123083
41	Bolt, Hex., 6x32	K	--			4	92000-06032	0054361
		--	K1			2	92000-06032	0054361
	Bolt, Hex., 6x32	K	--			4	92000-06032-0A	3410271
		--	K1			2	92000-06032-0A	3410271
	Bolt, Hex., 6x32	K	--			4	92101-06032-0A	3459435
		--	K1			2	92101-06032-0A	3459435
42	Bolt, Hex., 6x25	--	K1			4	93000-06025-0B	0429696
	Bolt, Hex., 6x25	--	K1			4	93000-06025	0255331
	Bolt, Hex., 6x25	--	K1			4	93101-06025-0B	4371258
43	Screw, Pan, 4x55	K	K1			3	93500-04055-0B	0266155
44	Screw, Pan, 5x8	K	K1			4	93500-05008-0A	0145540
45	Screw, Oval, 3x25	K	K1			8	93700-03025-0B	0145334
46	Nut, Hex., 6MM	K	--			6	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	--			6	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	--			6	94001-06000	0058016
	Nut, Hex., 6MM	K	--			6	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	--			6	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	--			6	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	--			6	94030-06000	1642693
47	Nut, Hex., 8MM	K	K1			2	94001-08000-0S	0167338
48	Nut, Hex., 10MM	K	K1			1	94001-10000-0S	0145391
49	Washer, Plain, 6MM	K	--			8	94101-06000	0059071
	Washer, Plain, 6MM	K	--			8	94101-06080	3136074
	Washer, Plain, 6MM	K	--			8	94101-06800	0345900
50	Washer, Plain, 10MM	K	K1			3	94101-10000	0059113
51	Washer, Plain, 12MM	K	K1			2	94101-12000	0059139
52	Washer, Spring, 5MM	K	K1			4	94111-05000	0058966
53	Washer, Spring, 6MM	K	--			4	94111-06000	0058974
54	Washer, Spring, 8MM	K	K1			2	94111-10000	0059006
55	Bolt, Flange, 6x32	--	K1			2	95700-06032-00	0484477
	Bolt, Flange, 6x32	--	K1			2	95701-06032	2105856

Frame • Battery

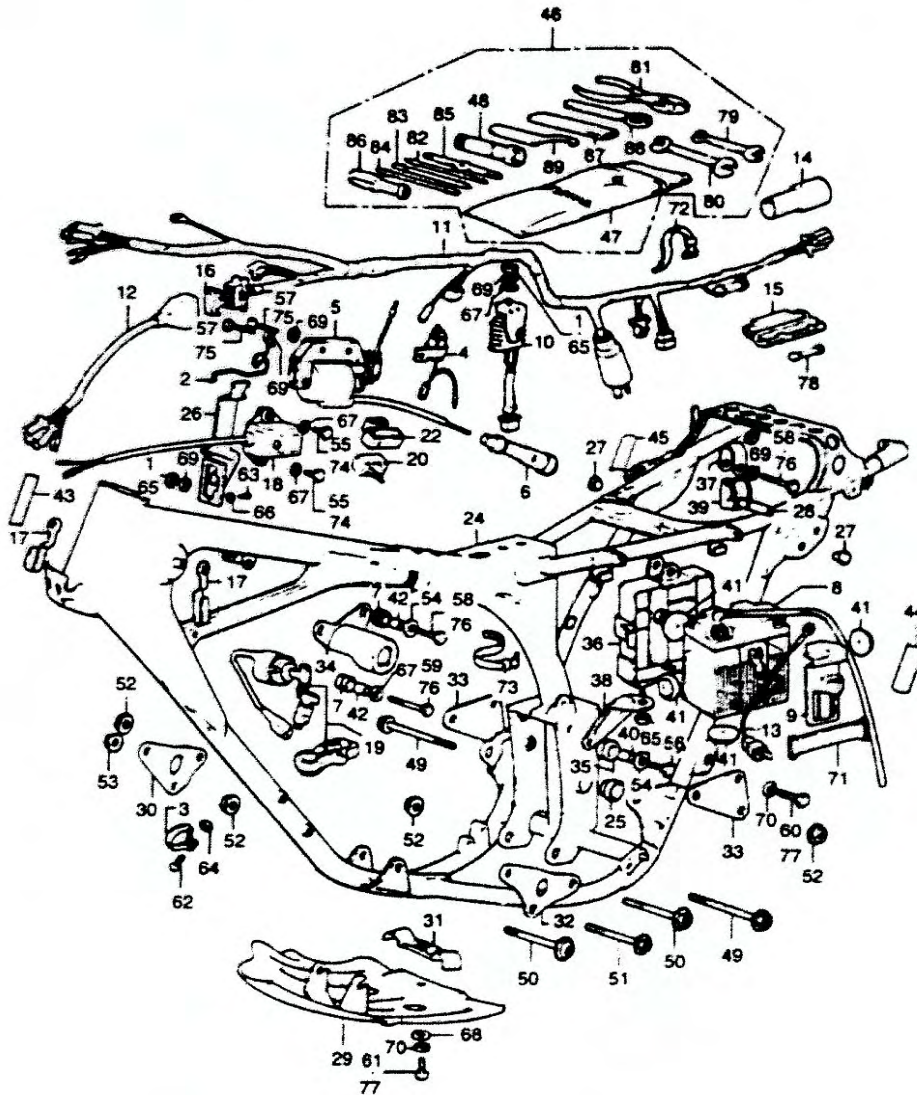


"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F13356009

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
1	Nut , Flange, 6MM	--	K1			3	18362-720-000	0293084
	Nut , Flange, 6MM	--	K1			3	94050-06000	0471623
2	Clamp, Clutch Cable	K	K1			1	22872-356-000	0356105
3	Clamp, Clutch Cable	K	K1			1	22878-356-000	0336867
4	Condenser Assy.	K	K1			1	30250-329-305	0378505
5	Coil Assy., Ignition (Toyo)	K	K1			1	30500-356-003	0337097
	Coil Assy., Ignition	K	K1			1	30500-950-405	4429981
6	Cap Assy. B, Noise Suppressor	K	K1			1	30710-356-000	0337105
7	Rubber, Regulator Cushion	K	K1			2	31403-323-000	0254300
8	Battery Assy.	K	--			1	31500-329-671	0280743
	Battery Assy.	K	K1			1	31500-324-601	0381954
	Battery Assy.	K	K1			1	31500-329-677	1550581
	Battery, 6N6-3B	K	K1			1	98202-63260	0389148
	Battery, 6N6-3B	K	K1			1	98203-63250	0420554
	Battery, 6N6-3B	K	K1			1	98203-63260	0421859
9	Cover, Battery	K	K1			1	31532-356-000	0337139
10	Rectifier Assy.	K	K1			1	31700-356-000	0337147
11	Harness A, Wire	K	K1			1	32100-356-000	0337154
12	Harness B, Wire	K	K1			1	32105-329-010	0337162
13	Cord, Battery Terminal	K	K1			1	32106-356-000	0337170
14	Cover, Wire Harness Connector	K	K1			1	32108-046-000	0268169
15	Case, Fuse (10A)	K	K1			1	32120-329-000	0280818
16	Cover, Coupler	K	K1			1	32138-329-300	0293217
17	Clip, Wire Harness	K	K1			2	32171-329-000	0280826
18	Regulator Assy., Pointless (Kokusan)	K	K1			1	33140-121-003	0280958
19	Key Set	K	--			1	35011-329-670	0293241
	Key Set	K	K1			1	35010-361-007	0676155
	Key Set	K	K1			1	35011-356-305	0395343
20	Relay Assy., Turn Signal	K	K1			1	38300-GF0-405	4289922
	Relay Comp., Turn Signal	K	K1			1	38300-089-671	0187054
	Relay Comp., Turn Signal	K	K1			1	38300-243-670	0111690
	Relay Assy., Turn Signal	K	K1			1	38300-428-004	0791186
	Relay Comp., Turn Signal (ND)	K	K1			1	38301-428-671	0807107
	Relay Comp., Turn Signal	K	K1			1	38310-428-671	0941526
22	Suspension, Turn Signal Relay	K	K1			1	38306-107-670	0217604
23	Suspension, Turn Signal Relay	K	--			1	38306-292-000	0480293
24	Frame Comp.	K	K1			1	50100-356-000B	0337683
25	Bush, Center Pipe	K	K1			2	50157-286-300	0212845
26	Holder, Coupler	K	K1			1	50201-356-000	0337691
27	Plug	K	K1			2	50318-041-600	0210278
28	Collar, Battery Box	K	K1			1	50328-292-010	0144238
29	Plate, Skid	K	K1			1	50351-356-000	0337709
30	Plate A, R. Engine Hanger	K	K1			1	50352-329-010B	0281915
31	Holder, Skid Plate	K	K1			1	50352-356-000	0337717
32	Plate A, L. Engine Hanger	K	K1			1	50353-329-010B	0281923
33	Plate C, L. Engine Hanger	K	K1			2	50356-356-000	0337725
34	Bracket, Main Switch	K	K1			1	50375-329-000B	0281949
	Bracket, Main Switch	K	K1			1	50375-356-000B	0380311
35	Rubber, Rr. Fender Cushion	K	K1			1	80101-283-000	0077271
36	Box, Battery	K	K1			1	83600-3556-000	0338137
37	Stay, Battery Upper	K	K1			1	83603-356-000	0338145
38	Stay, Battery Lower	K	K1			1	83604-356-000	0338152
39	Rubber, Battery Mount	K	K1			1	83605-356-000	0338160
40	Collar, Battery Lower	K	K1			1	83607-356-000	0338186
41	Rubber, Battery Box	K	K1			4	83618-323-000	0255810
42	Collar, Number Bracket Setting	K	K1			2	84706-286-000	0166462
43	Plate, Name	K	--			1	87125-041-680	0148502
44	Label, Muffler Caution	K	K1			1	87504-028-670	0117747
45	Label, Air Cleaner Caution	K	--			1	87506-340-670	0272211
46	Tool Set	K	K1			1	89010-329-000	0333880

Frame • Battery

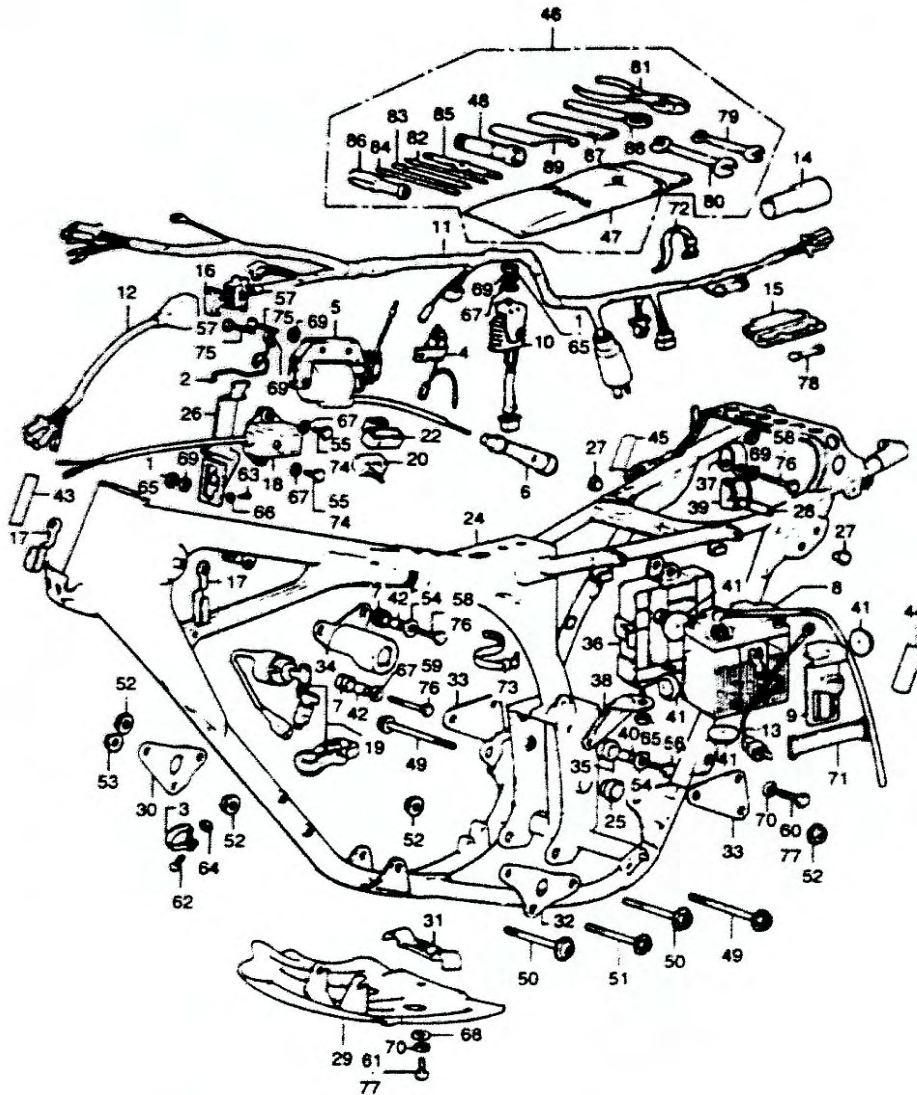


"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

F13356009

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
47	Bag, Tool	K	--	1017659		1	89101-329-000	0293662
	Bag, Tool	K	K1	1017660		1	89101-ME5-670	0669130
	Bag, Tool, 200mm	K	K1	1017660		1	99008-02000	0268185
48	Wrench, Spark Plug	K	K1			1	89216-329-000	0293670
49	Bolt, Hex., 10x100	K	K1			2	90102-356-000	0356162
	Bolt, Flange, 10x110	K	K1			2	90105-MG3-000	1452473
50	Bolt, Hex., 10x90	K	K1			2	90103-356-000	0356170
51	Bolt, Hex., 8mm	K	K1			2	90103-358-000	0350140
52	Nut, Hex, 10MM	K	K1			4	90308-357-000	0322156
53	Nut, Hex, 8MM	K	K1			2	90309-357-000	0322164
54	Washer B, Handle Holder Setting	K	K1			2	90525-030-000	0021287
55	Bolt, Hex., 6x14	K	--			2	92000-06014	0054213
	Bolt, Hex., 6x14	K	--			2	92101-06014-0A	2552198
56	Bolt, Hex., 6x20	K	K1			1	92000-06020	0054270
	Bolt, Hex., 6x20	K	K1			1	92101-06020-0A	2528925
57	Bolt, Hex., 6x25	K	--			2	92000-06025	0054320
	Bolt, Hex., 6x25	K	--			2	92101-06025-0A	2206563
58	Bolt, Hex., 6x40	K	--			2	92000-06040	
	Bolt, Hex., 6x40	K	--			2	92000-06040-0A	0397505
	Bolt, Hex., 6x40	K	--			2	92101-06040-0A	3856655
59	Bolt, Hex., 6x45	K	--			1	92000-06045	0054445
	Bolt, Hex., 6x45	K	--			1	92000-06045-0A	1001247
	Bolt, Hex., 6x45	K	--			1	92101-06045-0A	4264149
60	Bolt, Hex., 8x16	K	--			4	92000-08016-0A	0145433
	Bolt, Hex., 8x16	K	--			4	92101-08016-0A	3391489
61	Bolt, Hex., 8x20	K	--			1	92000-08020-0A	0171728
	Bolt, Hex., 8x20	K	--			1	92101-08020-0A	2936243
62	Screw, Pan, 5x20	K	K1			1	93500-05020-0A	0197731
63	Screw, Tapping, 4x8	K	K1			2	93901-24110	0251967
64	Nut, Hex., 5MM	K	K1			1	94001-05000	0057992
	Nut, Hex., 5MM	K	K1			1	94001-05000-0S	0156885
65	Nut, Hex., 6MM	K	--			4	90310-KA3-711	1553916
	Nut, Hex., 6MM	--	K1			1	90310-KA3-711	1553916
	Nut, Hex., 6MM	K	--			4	94000-06000-0S	1391283
	Nut, Hex., 6MM	--	K1			1	94000-06000-0S	1391283
	Nut, Hex., 6MM	K	--			4	94001-06000	0058016
	Nut, Hex., 6MM	--	K1			1	94001-06000	0058016
	Nut, Hex., 6MM	K	--			4	94001-06000-0S	0156067
	Nut, Hex., 6MM	--	K1			1	94001-06000-0S	0156067
	Nut, Hex., 6MM	K	--			4	94001-06008-0S	2829414
	Nut, Hex., 6MM	--	K1			1	94001-06008-0S	2829414
	Nut, Hex., 6MM	K	--			4	94001-06200-0S	2043255
	Nut, Hex., 6MM	--	K1			1	94001-06200-0S	2043255
	Nut, Hex., 6MM	K	--			4	94030-06000	1642693
	Nut, Hex., 6MM	--	K1			1	94030-06000	1642693
66	Washer, Plain, 4mm	K	K1			2	94101-04000	0059048
67	Washer, Plain, 6mm	K	--			4	94101-06000	0059071
	Washer, Plain, 6mm	K	--			4	94101-06080	3136074
	Washer, Plain, 6mm	K	--			4	94101-06800	0345900
68	Washer, Plain, 8mm	K	--			1	94102-08000	0199596
69	Washer, Spring, 6mm	K	--			6	94111-06000	0058974
70	Washer, Spring, 8mm	K	--			5	94111-08000	0058982
71	Band B2, Battery	K	K1			1	85012-13000	0303586
	Band B2, Battery	K	K1			1	95012-13001	1373356
72	Band B1, Wire	K	K1			1	95014-62100	0270546
73	Band B3, Wire Harness	K	K1			1	95014-62300	0288142
74	Bolt, Flange, 6x14	--	K1			2	95700-06014-00	0671198
	Bolt, Flange, 6x14	--	K1			2	95701-06014-00	2410884
75	Bolt, Flange, 6x25	--	K1			2	95700-06025-00	0484485
	Bolt, Flange, 6x25	--	K1			2	95701-06025-00	2105831
76	Bolt, Flange, 6x40	--	K1			3	95700-06040-00	0483966
	Bolt, Flange, 6x40	--	K1			3	95701-06040-00	2410942

Frame • Battery

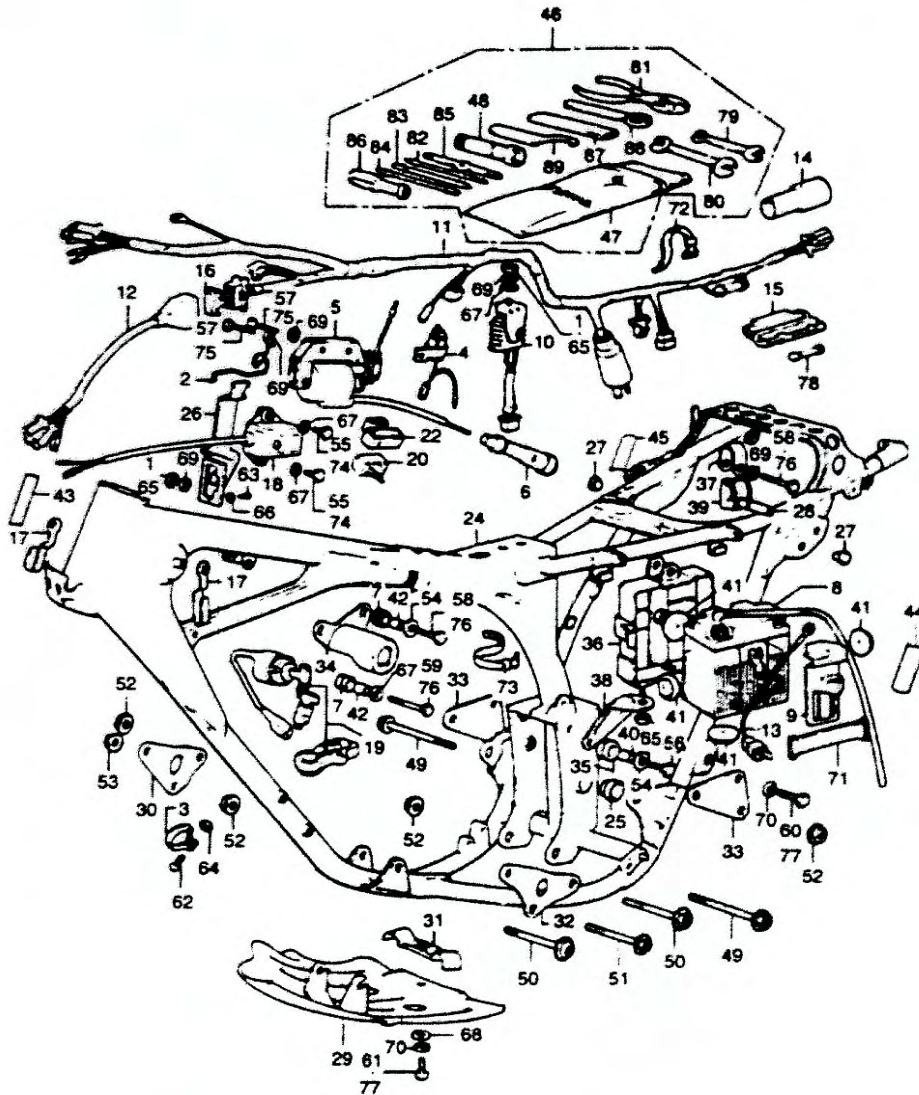

Ref.	Description	K	K1	From:	To:	Qty.	Part Number	Code
77	Bolt, Flange, 8x16	--	K1			5	95700-08016-00	0631242
	Bolt, Flange, 8x16	--	K1			5	95701-08016-00	2298396
78	Fuse A (10A)	K	K1			1	98200-11000	0294439
79	Open End Wrench 10x12	K	K1			1	99001-10120	0187559
80	Open End Wrench 14x17	K	K1			1	99001-14170	0187567
81	Pliers, 135	K	K1			1	99002-13500	0069252
82	Driver 1 Plus Screw (No. 2)	K	K1			1	99003-10000	0052423
83	Driver 2 Plus Screw (No. 3)	K	K1			1	99003-20000	0052431
84	Driver 3 Minus Screw (No. 2)	K	K1			1	99003-30000	0052449
85	Lever, Tire	K	K1			1	99003-40000	0052456
86	Grip	K	K1			1	99003-50000	0052464
87	Handle, Eye Wrench, 120MM	K	K1			1	99006-12000	0270496
88	Wrench, Eye, 26MM	K	K1			1	99006-26000	0270488
89	Open End Wrench, Pin, 45MM	K	K1			1	99007-45000	0268235

CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE

F13356009